

SE5404D Series

4-Port DIN-Rail Serial Device Server

User's Manual



Version 1.4

April 2017



Tel: 886-3-5508137

Fax: 886-3-5508131

<http://www.atop.com.tw>

IMPORTANT ANNOUNCEMENT

The information contained in this document is the property of Atop Technologies, Inc. and is supplied for the sole purpose of the operation and maintenance of products of Atop Technologies, Inc. No part of this publication is to be used for any other purposes, and it is not to be reproduced, copied, disclosed, transmitted, stored in a retrieval system, or translated into any human or computer language, in any form, by any means, in whole or in part, without the prior express written consent of Atop Technologies, Inc.

Published by

Atop Technologies, Inc.

2F, No. 146, Sec. 1, Tung-Hsing Rd.

Jubei City, Hsinchu 30261

Taiwan, R.O.C.

Tel: 886-3-5508137

Fax: 886-3-5508131

www.atop.com.tw

Copyright © 2017 Atop Technologies, Inc. All rights reserved.

All other product names referenced herein are registered trademarks of their respective companies.

Thank you for purchasing SE5404D Serial Device Server product. This document intends to provide customers with brief descriptions about the product and to assist customers to get started. For detail information and operations of the product, please refer to the product user's manual in the product CD or diskette.

FCC WARNING

Class A for Serial Device Server (Model SE5404D series)

This equipment has been tested and found to comply with the limits for a Class A digital device pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses and radiates radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expenses.

A shielded-type power cord is required in order to meet FCC emission limits and also to prevent interference to the nearby radio and television reception. It is essential that only the supplied power cord can be used.

Use only shielded cables to connect other devices to this equipment by RS-232 or RS-485 ports.

Be cautioned that changes or modifications not expressly approved by the party responsible for compliance could void your authority to operate the equipment.

Contents

1. INTRODUCTION	7
1.1 PACKAGING.....	7
1.2 APPLICATION CONNECTIVITY	8
2. HARDWARE SETUP.....	12
2.1 LED INDICATORS.....	13
2.2 INSTALLATION PROCEDURES	14
3. SOFTWARE SETUP	15
3.1 CONFIGURATION BY SERIAL MANAGER UTILITY	16
3.1.1. Static IP	16
3.1.2 DHCP client (Dynamic IP)	16
3.2 TELNET CONFIGURATION	17
3.2.1 GENERAL INFORMATION	18
3.2.2 NETWORKING CONFIGURATION	19
3.2.3 LAN Settings	19
3.2.4 DNS Settings.....	20
3.2.5 SNMP Settings.....	21
3.2.6 COM PORT CONFIGURATION	21
3.2.7 TCP Server for Link Mode	22
3.2.8 TCP Client for Link Mode	22
3.2.9 UDP Link Mode.....	23
3.2.10 Serial Settings.....	24
3.2.12 ALERT SETTINGS	24
3.2.13 Configuring E-mail.....	25
3.2.14 Configuring Alert Event	26
3.2.15 SYSTEM CONFIGURATION.....	27
3.2.16 Link State.....	27
3.2.17 Time Settings.....	28
3.2.18 Security Settings.....	28
3.2.19 RESTORING FACTORY DEFAULT	29

3.2.20 RESTART SYSTEM	29
3.3 WEB CONFIGURATION	30
3.3.1 LOGIN TO SYSTEM	30
3.3.2 GENERAL INFORMATION	30
3.3.3 NETWORK CONFIGURATION	32
3.3.4 LAN 1 Settings	33
3.3.5 LAN 2 Settings	34
3.3.6 DNS Settings	34
3.3.7 SNMP Settings	35
3.4 COM PORT CONFIGURATION	36
3.4.1 TCP Server for Link Mode	36
3.4.2 TCP Client for Link Mode	38
3.4.3 UDP for Link Mode	39
3.4.5 Serial Settings	40
3.4.6 Advanced Settings	41
3.4.7 ALERT SETTINGS	43
3.4.8 Configuring E-mail	44
3.4.9 Configuring Alert Event	45
3.5 SYSTEM CONFIGURATION	46
3.5.1 Link State information	47
3.5.2 Log Settings	47
3.5.3 System Log	49
3.5.4 COM Log	49
3.5.5 Time Settings	49
3.5.6 Security Configuration	50
3.5.7 Import/Export	52
3.5.8 Restore Factory Default	53
3.5.9 Restart System	54
4. USING VIRTUAL COM	56
4.1 SETUP OF A VIRTUAL COM DRIVER	56

4.1.1 Pre-installation requirements.....	56
4.1.2 Cautions on Use.....	56
4.1.3 Limitation	56
4.1.4 Installation	57
4.1.5 Uninstalling	57
4.2 VIRTUAL COM COMMUNICATION	57
4.2.1 Enable Virtual COM on SE5404D	57
4.2.2 Run Serial/IP on PC.....	58
4.3 CONFIGURING VIRTUAL COM PORTS.....	58
5. SNMP SETUP.....	60
5.1 SNMP NETWORK MANAGEMENT PLATFORM	60
5.2 USING NETWORKVIEW AS AN EXAMPLE	60
6. START WRITING ONES OWN APPLICATIONS.....	62
6.1 PREPARING THE SYSTEM.....	62
6.2 RUNNING THE SAMPLE PROGRAM.....	62
6.2.1 TCPTTEST in Visual Basic.....	62
6.2.2 TCPTTEST2 in Visual C	63
7. DIAGNOSTICS.....	64
7.1 USE STANDARD TCP/IP UTILITY PING COMMAND	64
7.2 USE SERIAL MANAGER CONFIGURATION UTILITY PROGRAM	64
7.3 USE TCPTTEST.EXE OR TCPTTEST2.EXE SAMPLE PROGRAM	65
APPENDIX A: SPECIFICATIONS	66
A.3 PANEL LAYOUT AND CONNECTOR PIN ASSIGNMENTS	67
A.3.1. PANEL LAYOUT	67
A.3.2.1 DB9 Pin Assignments	72
A.3.2.2 Terminal Block Pin Assignments	73
A.3.3.1 Ethernet Port (RJ-45).....	73
A.3.4.1 Console Port (RJ-45).....	74
A.4 Buzzer/LED Message.....	74

A.4.1 Buzzer.....	74
APPENDIX B: UPGRADE SYSTEM FIRMWARE	75
B.2 CRITICAL ISSUES OF UPGRADING	76
B.3 ERROR MESSAGES.....	76
APPENDIX C: USING SERIAL MANAGER UTILITY	77
C.2. INTERFACE.....	77
C.3. FUNCTIONS	77
C.3.1. Device Search	77
C.3.2. Firmware.....	80
C.3.3. Configuration	82
C.3.4. Security	90
C.3.5. Virtual COM	92
C.3.6. About	95

1. Introduction

Many industrial and Commercial devices equipped with slow serial communication ports—RS-232, RS-485, and RS-422—are limited in their transmission distance of 15 m. Examples of these devices are PLC controllers, card readers, display signs, security controls, CNC controller, etc. ATOP Technologies has overcome the limit with a family of SE5404D Series Serial Device Servers. The SE5404D sever family is designed to transmit data between one-or-more serial device and one-or-more TCP/IP device through Ethernet, and hence enhance the accessibility of the serial device through the ubiquitous TCP/IP based Ethernet.

Of the SE series, the SE5404D is for RS-232/RS-422/RS-485 9 pin D-Sub without isolation protection built-in and SE5404D-TB is for RS-422/RS-485 5 pin Terminal Block without isolation protection built-in, while SE5404D-Sis is for RS-422/ RS-485 with built-in isolation protection.

1.1 Packaging

Please check your package contains the following items:

- ⊙ SE5404D/ SE5404D-TB / SE5404D-Sis Serial Device Server
- ⊙ Quick Start Guide with Warranty Card
- ⊙ Product CD
- ⊙ 7-pin Terminal Block (2ESDV-07P) x1
- ⊙ Four 5-pin Terminal Block for COMs (SE5404D-TB / SE5404D-Sis only)

Optional Accessories		
Name	Part Number	Description
WMK-459-Black	202EH731000003G	Metal Wall Mount Kit, Black
CDK-459-Silver	201EH731000005G	Conductive metal DIN-Rail Kit, Silver
CBL-RJ45(8P)-DB9(F)-90-C	50891971G	90cm RJ-45 to DB9 female console cable
GDC-120	59906861G	120mm copper woven grounding cable
US315-12(US) Power Adapter	50500151120009G	Y-Type (5.08 mm) power adaptor, 100-240VAC input, 1.25A @ 12VDC output, US plug
US315-12(EU) Power adapter	50500151120019G	Y-Type (5.08 mm) power adaptor, 100-240VAC input, 1.25A @ 12VDC output, EU plug

1.2 Application Connectivity

TCP Server Mode : SE5404D can be configured as a TCP server on TCP/IP Network to wait for other applications (clients) in host computer to establish a connection with the serial device. After the connection is established between serial device and host computer, data can be transmitted in both directions Figure 1.1.

TCP Server Mode

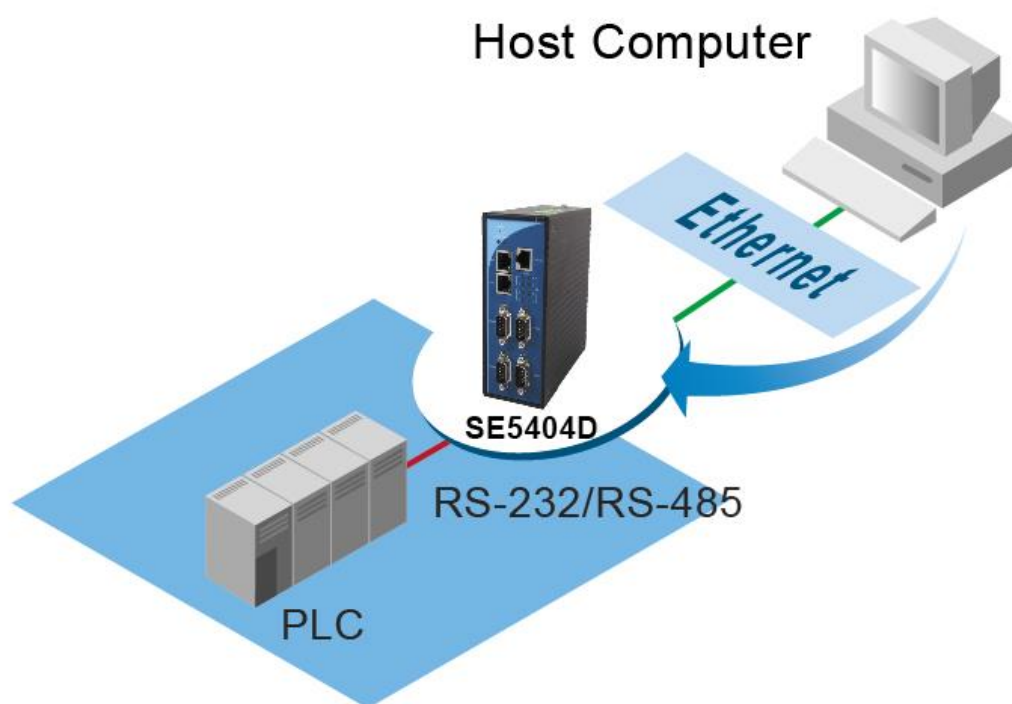


Figure 1.1 TCP Server Mode

TCP Client Mode : SE5404D can be configured as a TCP client on TCP/IP Network to actively establish a connection with other applications(server) in host computer. After the connection is established, data can be transmitted between serial device and host computer in both directions (Figure 1.2).

TCP Client Mode

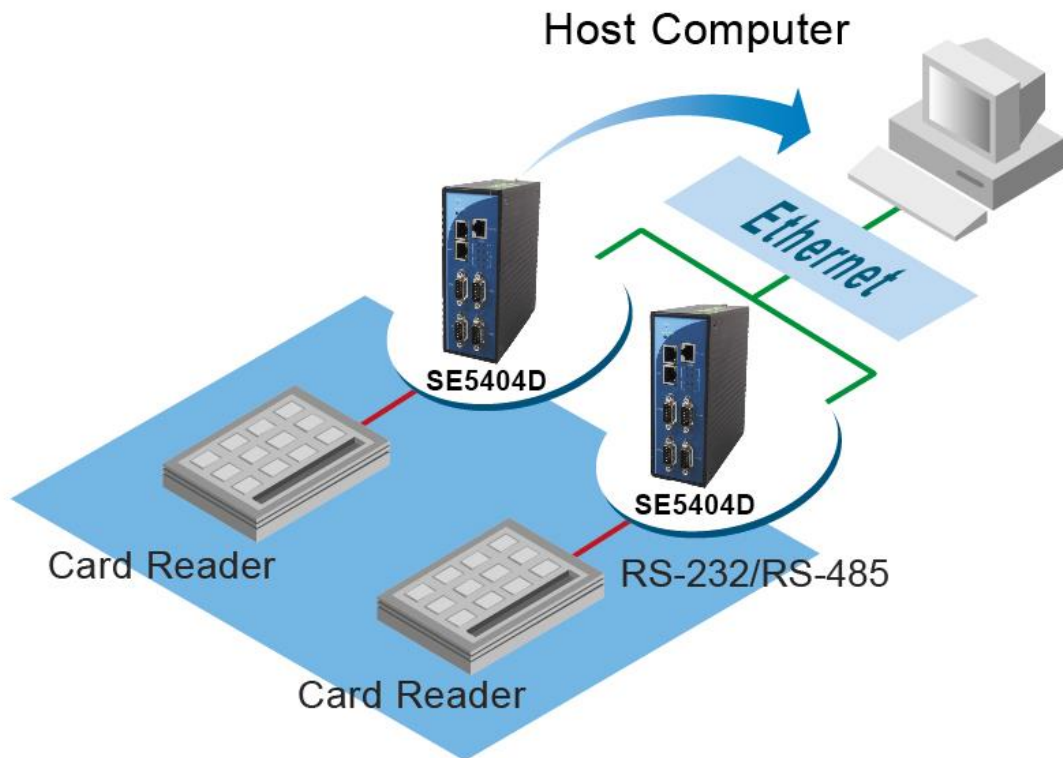


Figure 1.2 TCP Client Mode

UDP Mode : UDP is a faster but non-guaranteed datagram delivery protocol. SE5404D can be configured as a UDP mode on TCP/IP Network to establish a connection using unicast data from the serial device to one or multiple host computers (Figure 1.3) Vice versa is also true.

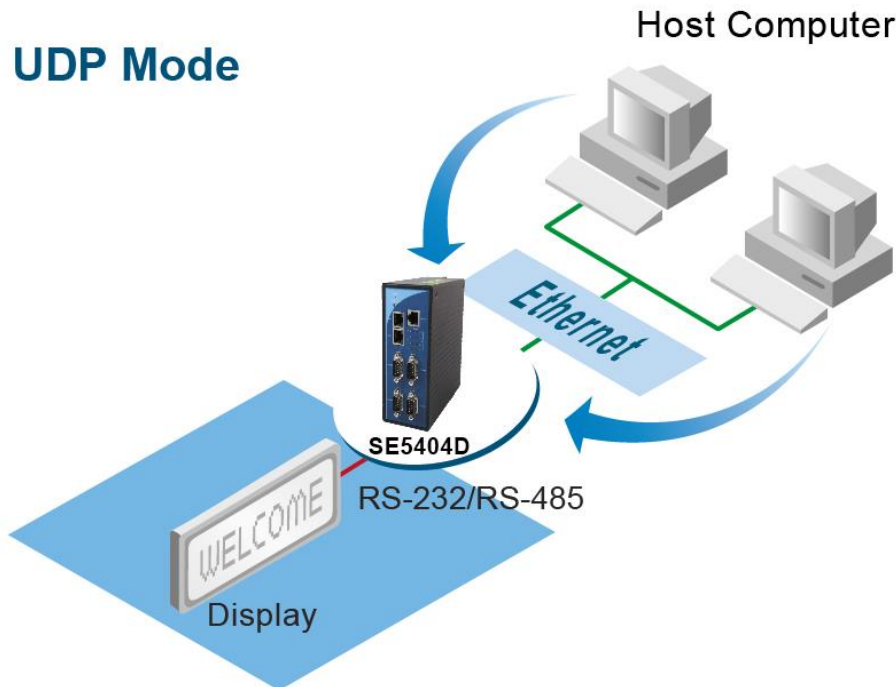


Figure 1.3 UDP Mode

Tunneling Mode: You can manually pair up two Atop serial servers using TCP Server and TCP Client modes and our server would transparently bridge between your serial devices.

Tunnelling Mode

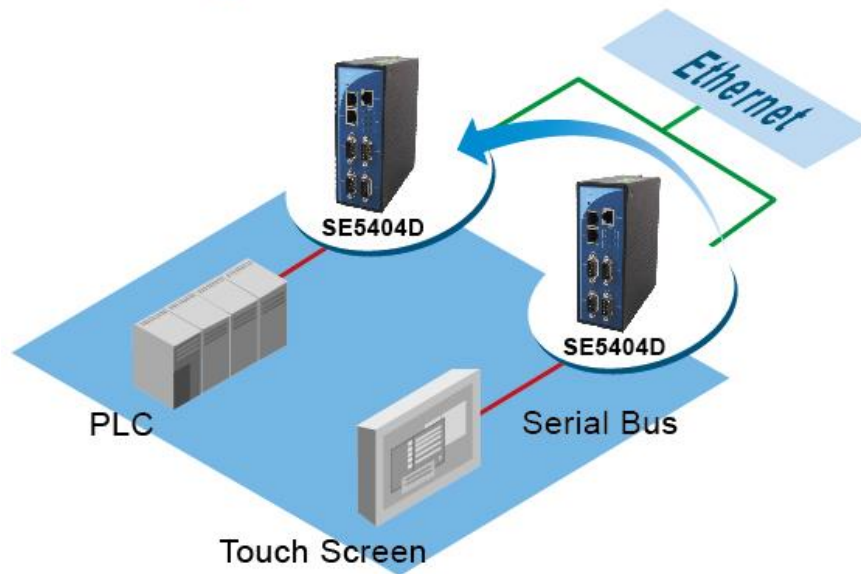


Figure 1.4 Tunneling Mode

2. Hardware Setup

NOTE:

1. **SE5404D** (RS-232/422/485 DB9 without isolation),
2. **SE5404D-TB** (RS422/485 TB5 with isolation)
3. **SE5404D-Sis** (RS422/485 TB5 with isolation)
4. You can press the **Default** button of SE5404D to reset the settings to the default value

Figure 2.1 Show the names of SE5404D components.

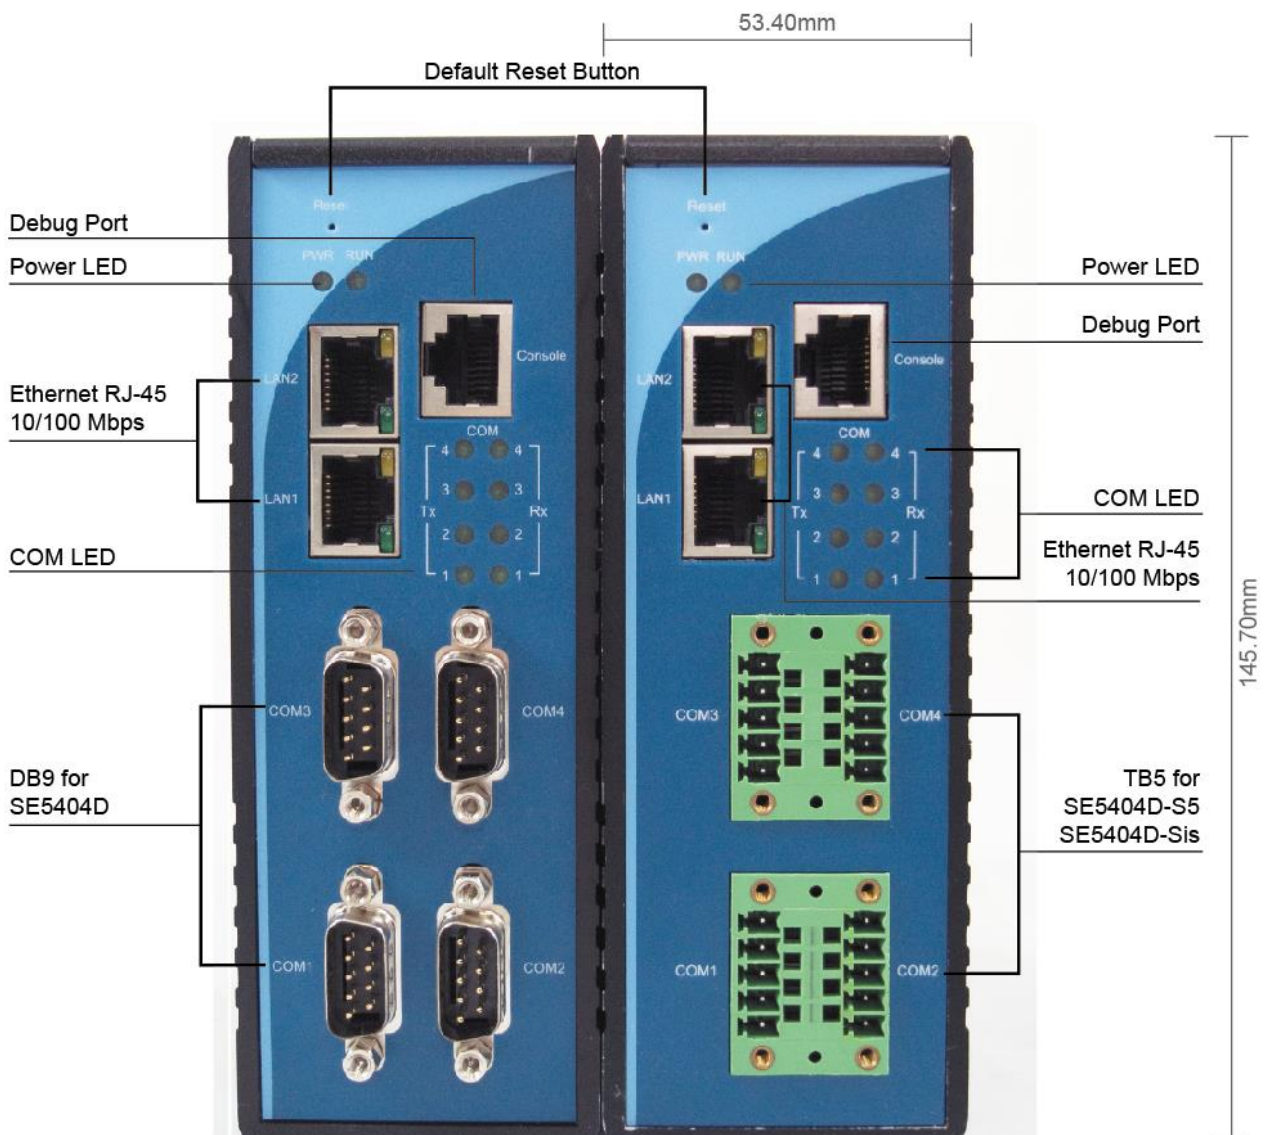


Figure 2.1 Front Panel Interfaces

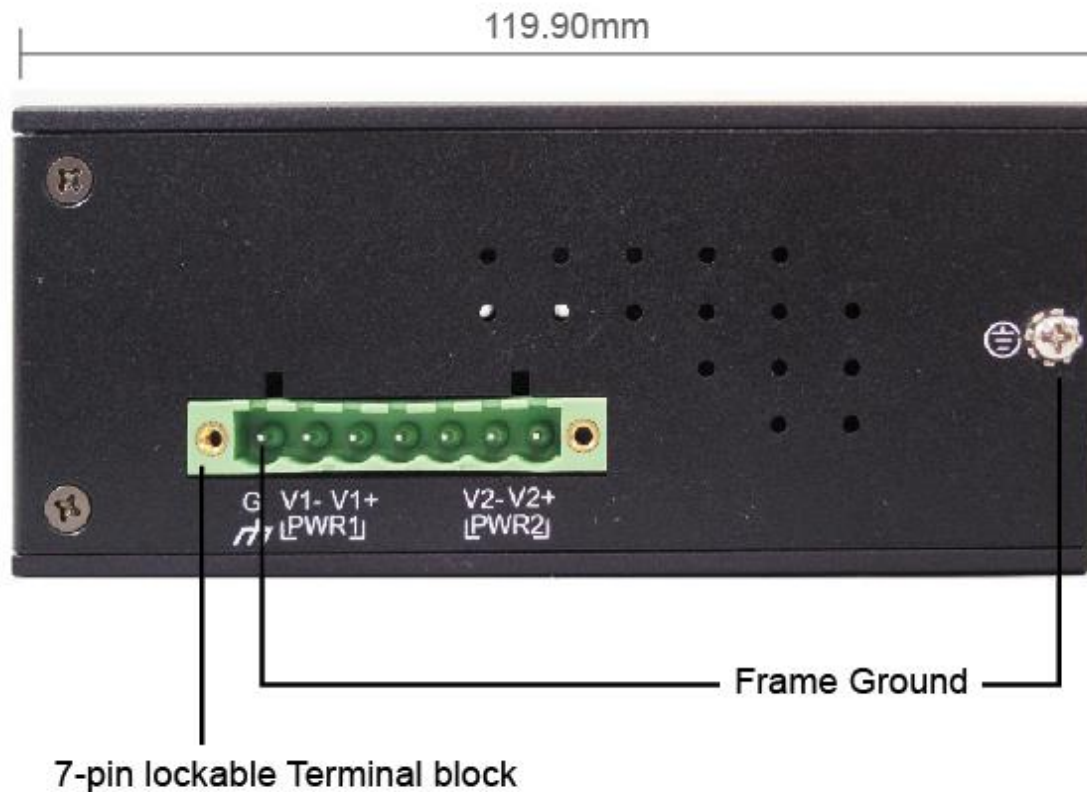


Figure 2.2 7-Pin Terminal Block DC Power on Top Plate

**Attention**

This product is intended to be grounded properly. Please do so via the Frame Ground.

2.1 LED Indicators

Name	Color	Status	Description
Power	Green	Off	Power is not connected
		On	Power is connected
LAN	Green	Off	Ethernet Disconnected
		Blinking	Data is transmitting on Ethernet for 100Mbps
	Orange	Blinking	Data is transmitting on Ethernet for 10Mbps
COM	Green	Off	No data is transmitting on COM port
		Blinking	Data is transmitting on COM port
RUN	Green	Off	System is not ready or halt

		Blinking	AP firmware is running normally
--	--	----------	---------------------------------

2.2 Installation Procedures

Step 1: Connect SE5404D to power source

Step 2: Connect SE5404D to the Ethernet network. Use a standard straight-through or cross-over Ethernet cable. Always make sure the PC is on the same network subnet as SE5404D.

Step 3: Connect SE5404D's serial port to a serial device.

Step 4: Mount SE5404D to a Din Rail.



Attention

Disconnect the device from power source completely before installing and wiring the server.

Do not exceed the maximum allowable current of the power cord and common wire. Applying the wire over its specification would cause the wire to overheat and cause serious damage to the connected and neighboring equipment.

The casing could become too hot to touch when operating in harsh environments. Please handle with care.

RESTRICTED ACCESS AREA: The equipment should only be installed in a Restricted Access Area.


3. Software Setup

SE5404D Serial Device Server is shipped with default settings shown in the following table:

Property		Default Value
LAN1	IP Address	10.0.50.100
	Gateway	10.0.0.254
	Subnet Mask	255.255.0.0
LAN2	IP Address	192.168.1.1
	Gateway	192.168.1.254
	Subnet Mask	255.255.255.0
User Name		admin
Password		default
COM (1/2/3/4)		9600,None, 8, 1, No Flow Control, Serial packet delimiter enabled
COM (1/2/3/4)Link Mode		Type: TCP Server, Listen port 4660, Filter=0.0.0.0, Virtual COM disabled
SysName of SNMP		name
SysLocation of SNMP		location
SysContact of SNMP		contact


3.1 Configuration by Device Management Utility

3.1.1.Static IP

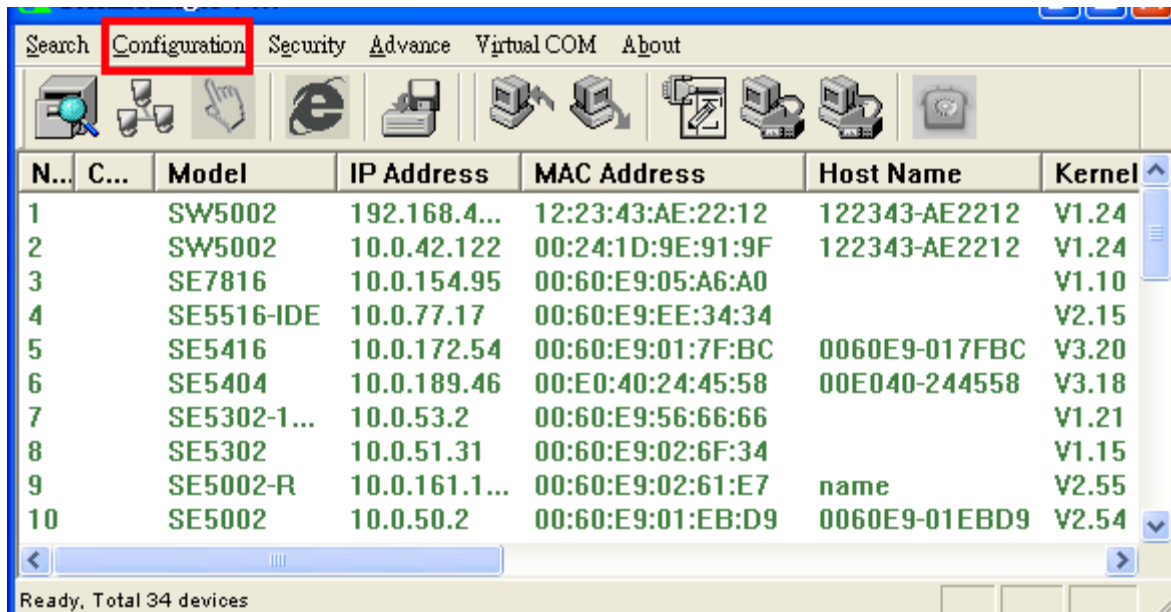

N...	C...	Model	IP Address	MAC Address	Host Name	Kernel
1		SW5002	192.168.4...	12:23:43:AE:22:12	122343-AE2212	V1.24
2		SW5002	10.0.42.122	00:24:1D:9E:91:9F	122343-AE2212	V1.24
3		SE7816	10.0.154.95	00:60:E9:05:A6:A0		V1.10
4		SE5516-IDE	10.0.77.17	00:60:E9:EE:34:34		V2.15
5		SE5416	10.0.172.54	00:60:E9:01:7F:BC	0060E9-017FBC	V3.20
6		SE5404	10.0.189.46	00:E0:40:24:45:58	00E040-244558	V3.18
7		SE5302-1...	10.0.53.2	00:60:E9:56:66:66		V1.21
8		SE5302	10.0.51.31	00:60:E9:02:6F:34		V1.15
9		SE5002-R	10.0.161.1...	00:60:E9:02:61:E7	name	V2.55
10		SE5002	10.0.50.2	00:60:E9:01:EB:D9	0060E9-01EBD9	V2.54

Figure 3.1 Configure by Device Management Utility

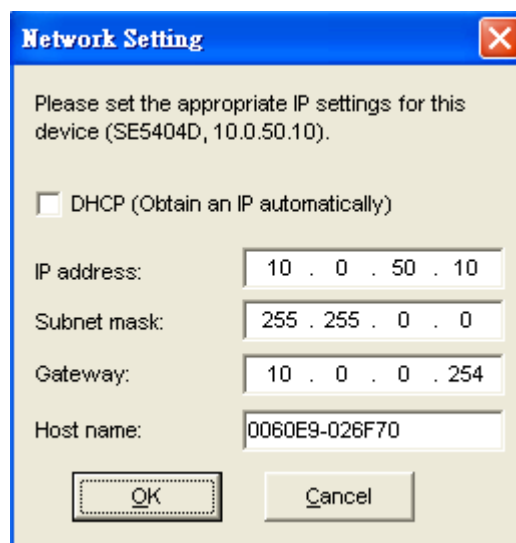

Network Setting

Please set the appropriate IP settings for this device (SE5404D, 10.0.50.10).

☐ DHCP (Obtain an IP automatically)

IP address: 10 . 0 . 50 . 10

Subnet mask: 255 . 255 . 0 . 0

Gateway: 10 . 0 . 0 . 254

Host name: 0060E9-026F70

OK Cancel

Figure 3.2 Static IP setup dialog window

3.1.2 DHCP client (Dynamic IP)

A DHCP server can automatically assign the IP address and network settings. SE5404D supports the DHCP client function. By default, the DHCP client function on SE5404D is disabled; one can client use Serial Manager Utility software to search network information automatically by putting a check on **Auto IP** on Dialog window. (ref Figure 3.1)SE5404D (Figure 3.2) (ref Figure 3.3) SE5404D

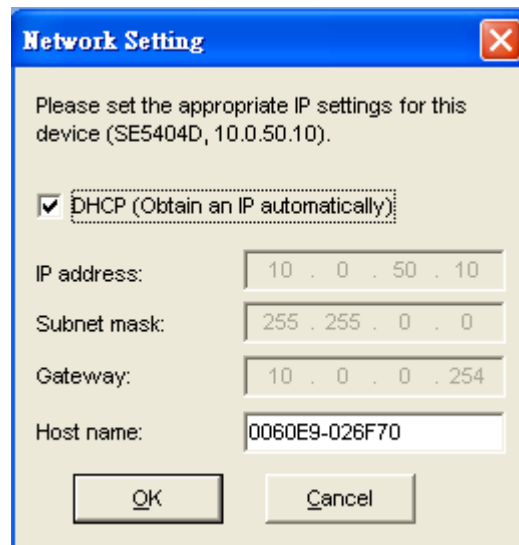


Figure 3.3 Device Management Utility Auto IP

3.2 Telnet Configuration

One may also use Telnet utility to change configuration settings.

- Open MS-DOS command prompt window or other telnet tools
- Enter the "Telnet IP_address" (For example, Telnet 10.0.50.100). The system will prompts for a user and password, the default User is "admin" and password "default".


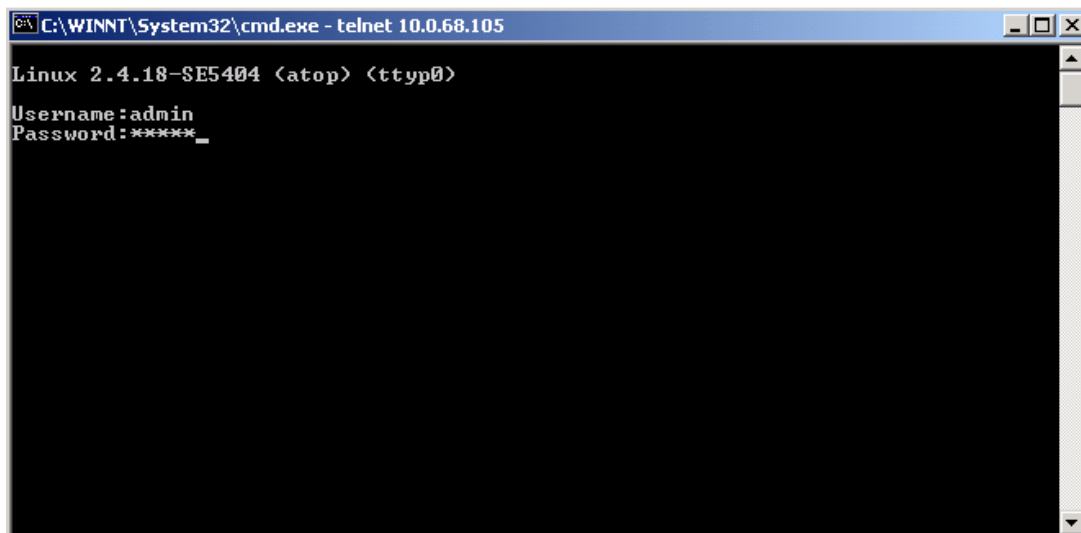


Figure 3.4 System Login by Telnet

Then the following main menu shall appear.

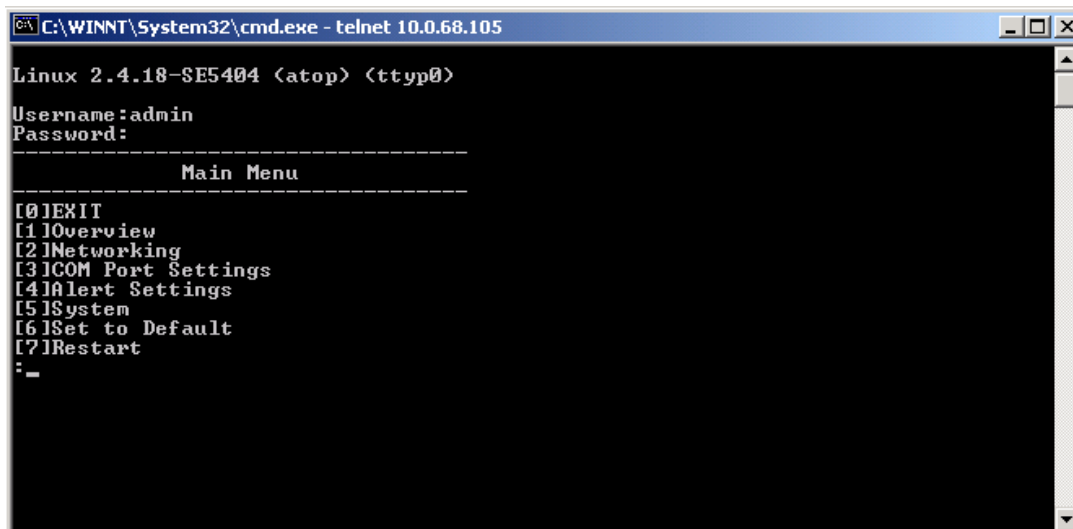

```
C:\WINNT\System32\cmd.exe - telnet 10.0.68.105

Linux 2.4.18-SE5404 <atop> <ttyp0>
Username:admin
Password:

-----
Main Menu
-----
[0]EXIT
[1]Overview
[2]Networking
[3]COM Port Settings
[4]Alert Settings
[5]System
[6]Set to Default
[7]Restart
:-
```


Figure 3.5 Main menu of Telnet

* **Note:** If the Serial Server does not receive any command within 3 minutes, Telnet will be terminated automatically.

3.2.1 General Information

Operation: Main→[1]Overview

This system overview window gives the general information on Ethernet, MAC address, kernel and AP version.

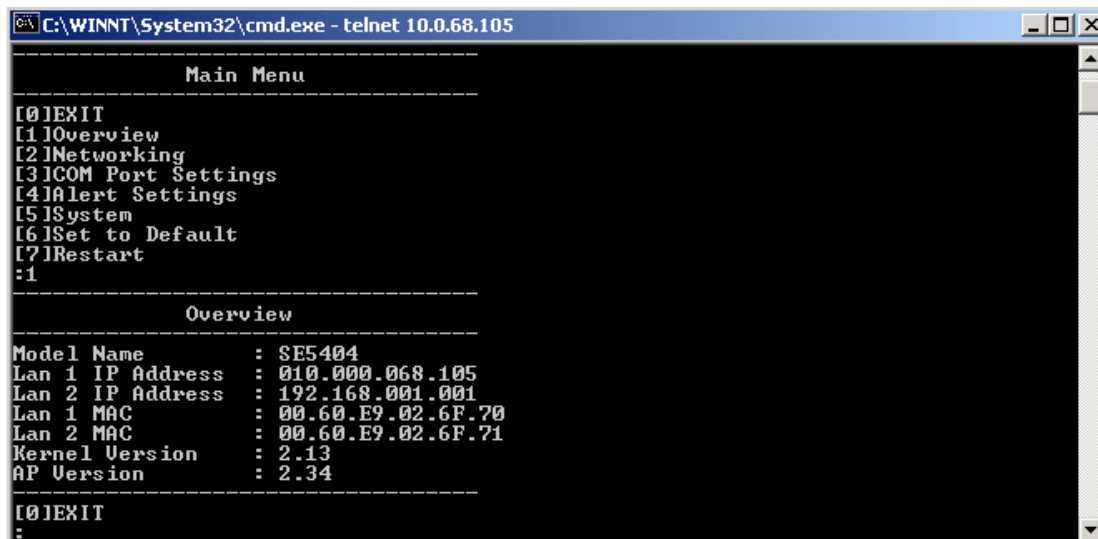

```
C:\WINNT\System32\cmd.exe - telnet 10.0.68.105

-----
Main Menu
-----
[0]EXIT
[1]Overview
[2]Networking
[3]COM Port Settings
[4]Alert Settings
[5]System
[6]Set to Default
[7]Restart
:-1


-----
Overview
-----
Model Name       : SE5404
Lan 1 IP Address : 010.000.068.105
Lan 2 IP Address : 192.168.001.001
Lan 1 MAC        : 00.60.E9.02.6F.70
Lan 2 MAC        : 00.60.E9.02.6F.71
Kernel Version   : 2.13
AP Version       : 2.34
-----
[0]EXIT
:-
```

Figure 3.6 Overview Information by Telnet

3.2.2 Networking Configuration

Operation: Main→[2]Networking

This section allows for changes in **IP address**, **subnet mask**, **gateway IP address** and **SNMP** information. Please note that setting changes will not take effect until the device is restarted.

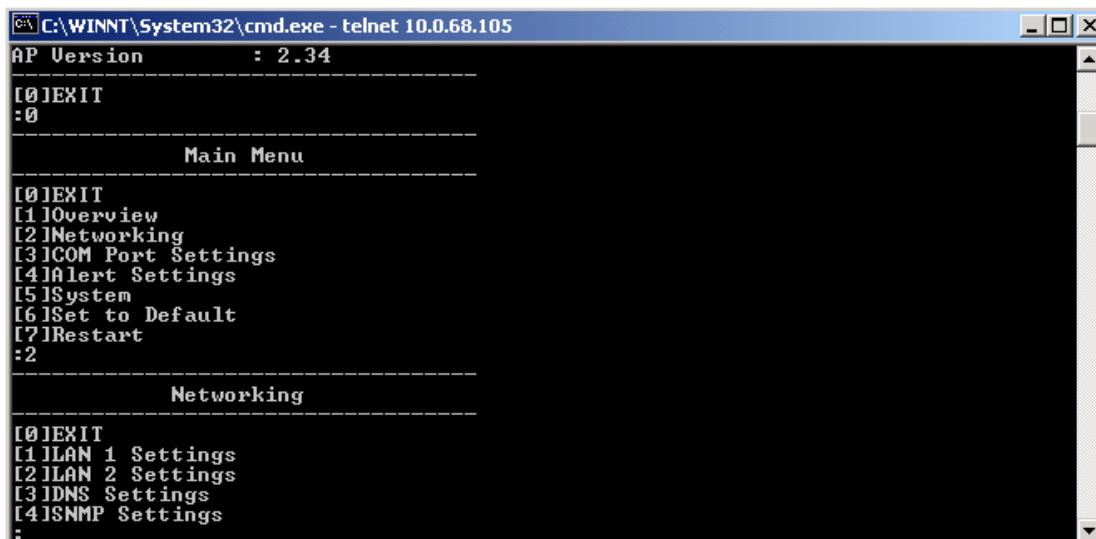

```

C:\WINNT\System32\cmd.exe - telnet 10.0.68.105
AP Version      : 2.34
-----
[0]EXIT
:0
-----
Main Menu
-----
[0]EXIT
[1]Overview
[2]Networking
[3]COM Port Settings
[4]Alert Settings
[5]System
[6]Set to Default
[7]Restart
:2
-----
Networking
-----
[0]EXIT
[1]LAN 1 Settings
[2]LAN 2 Settings
[3]DNS Settings
[4]SNMP Settings
:

```


Figure 3.7 Network Settings by Telnet

* Note: Press “ESC” key to return to the previous menu

3.2.3 LAN Settings

Operation: Main→[2]Networking→[1]LAN 1 Settings

Enter “**LAN 1 settings**”, and there is all information at this section about IP address, gateway, subnet mask and IP mode (static/DHCP) of LAN 1.

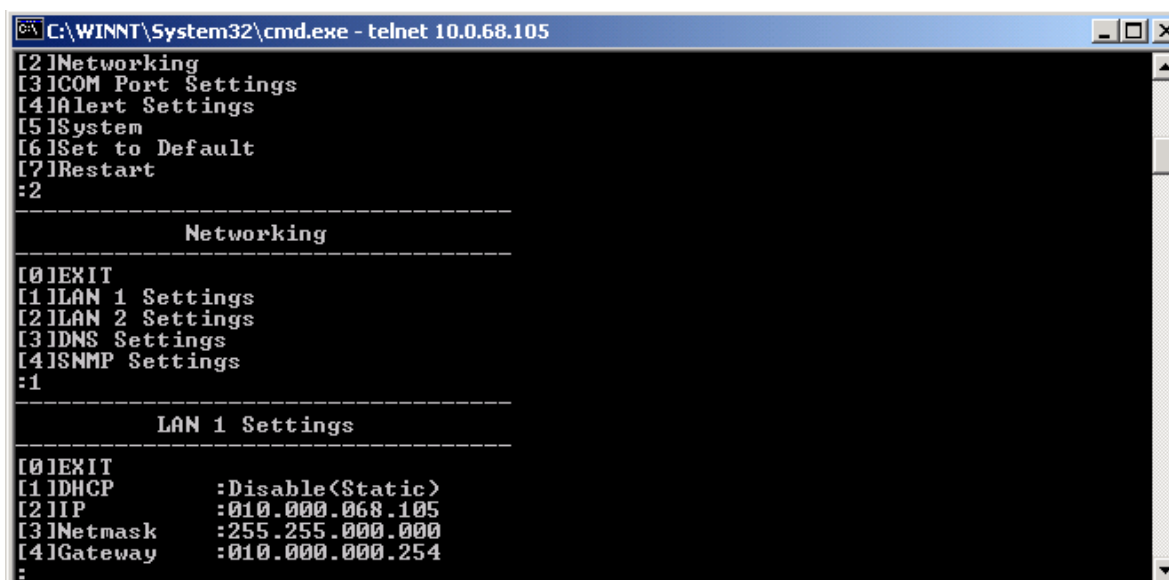

```


C:\WINNT\System32\cmd.exe - telnet 10.0.68.105
[2]Networking
[3]COM Port Settings
[4]Alert Settings
[5]System
[6]Set to Default
[7]Restart
:2
-----
Networking
-----
[0]EXIT
[1]LAN 1 Settings
[2]LAN 2 Settings
[3]DNS Settings
[4]SNMP Settings
:1
-----
LAN 1 Settings
-----
[0]EXIT
[1]DHCP      :Disable(Static)
[2]IP       :010.000.068.105
[3]Netmask  :255.255.000.000
[4]Gateway  :010.000.000.254
:

```

Figure 3.8 LAN 1 Settings by Telnet

Operation: Main→[2]Networking→[2]LAN 2 Settings

Enter “LAN 2 settings”, and there is all information at this section about IP address, gateway, subnet mask and IP mode (static/DHCP) of LAN 2.

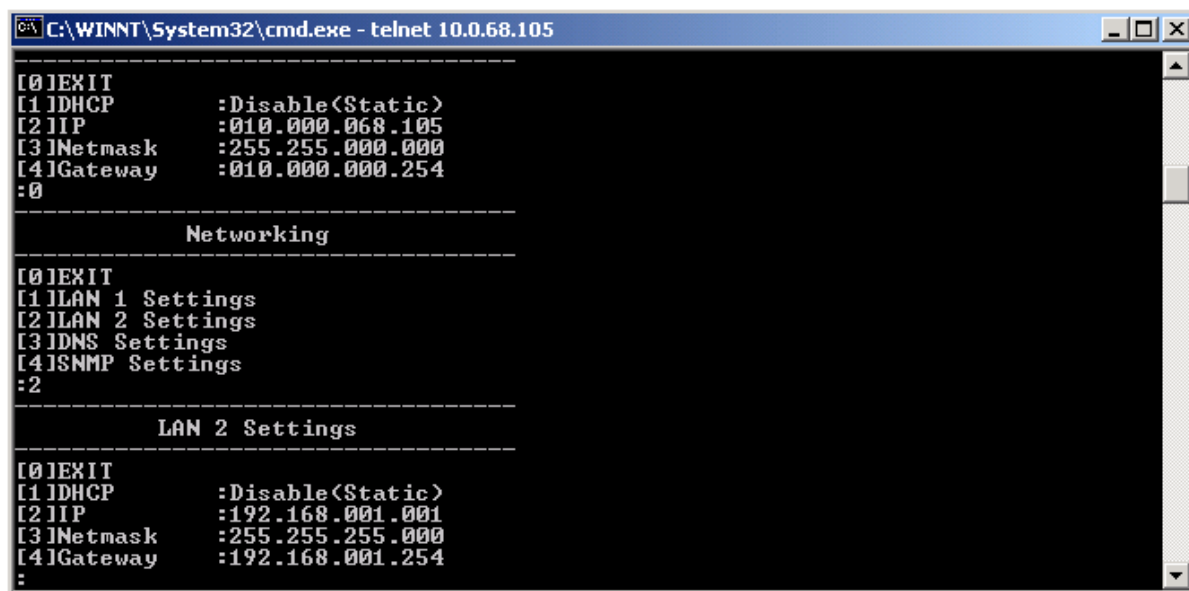

```

C:\WINNT\System32\cmd.exe - telnet 10.0.68.105
-----
[0]EXIT
[1]DHCP      :Disable(Static)
[2]IP        :010.000.068.105
[3]Netmask   :255.255.000.000
[4]Gateway   :010.000.000.254
[5]
-----
Networking
-----
[0]EXIT
[1]LAN 1 Settings
[2]LAN 2 Settings
[3]DNS Settings
[4]SNMP Settings
[5]
-----
LAN 2 Settings
-----
[0]EXIT
[1]DHCP      :Disable(Static)
[2]IP        :192.168.001.001
[3]Netmask   :255.255.255.000
[4]Gateway   :192.168.001.254
[5]


```

Figure 3.9 LAN 2 Settings by Telnet

3.2.4 DNS Settings

Operation: Main→[2]Networking→[3]DNS Settings

Serial Server is able to configure the DNS1 or DNS2 Server IP Address manually. Alternatively, you can set the Serial Server to receive DNS server IP address from DHCP server automatically by enabling the DHCP of “LAN 1 Settings”.

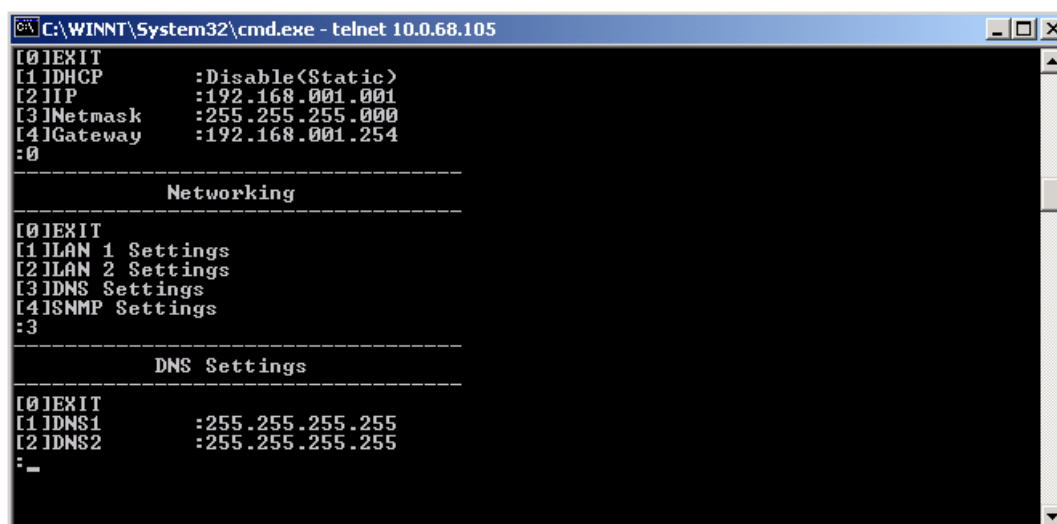

```

C:\WINNT\System32\cmd.exe - telnet 10.0.68.105
-----
[0]EXIT
[1]DHCP      :Disable(Static)
[2]IP        :192.168.001.001
[3]Netmask   :255.255.255.000
[4]Gateway   :192.168.001.254
[5]
-----
Networking
-----
[0]EXIT
[1]LAN 1 Settings
[2]LAN 2 Settings
[3]DNS Settings
[4]SNMP Settings
[5]
-----
DNS Settings
-----
[0]EXIT
[1]DNS1      :255.255.255.255
[2]DNS2      :255.255.255.255
[3]

```


Figure 3.10 DNS Settings by Telnet

3.2.5 SNMP Settings

Operation: Main→[2]Networking→[4]SNMP Settings

Serial Server allows the user to Enable or Disable the SNMP function by choose the “[4] **SNMP: Disable**” and select “**Enable**” to enable the **SNMP** operation. The changes will effective immediately.

Serial Server supports basic SNMP function about system MIB (Management Information Base). It is able to definite the SNMP Trap server, Read/Write Community, SysName (System Name), SysLocation (System Location) and SysContact (System Contact) via Telnet console.

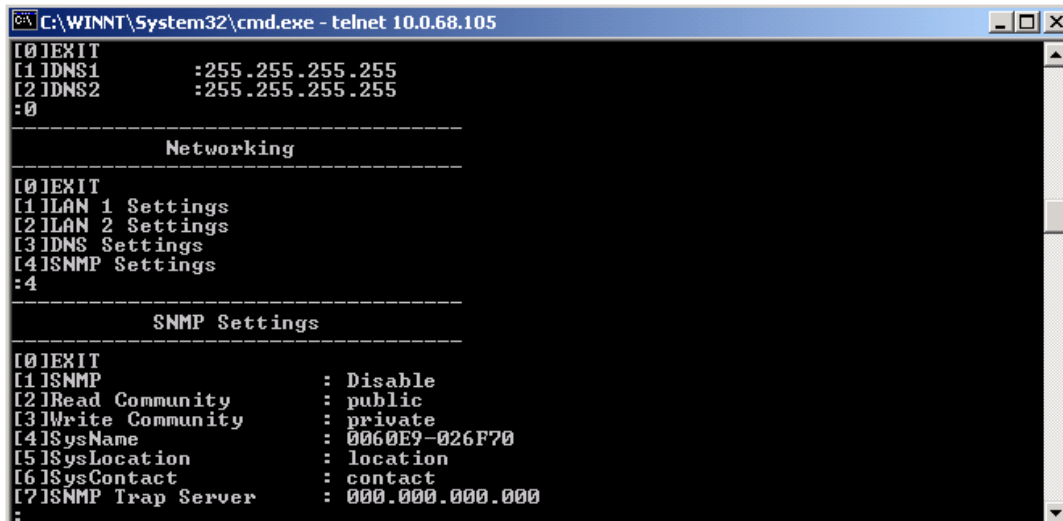

```

C:\WINNT\System32\cmd.exe - telnet 10.0.68.105
[0]EXIT
[1]DNS1      :255.255.255.255
[2]DNS2      :255.255.255.255
[3]0

-----
Networking
-----
[0]EXIT
[1]LAN 1 Settings
[2]LAN 2 Settings
[3]DNS Settings
[4]SNMP Settings
:4


-----
SNMP Settings
-----
[0]EXIT
[1]SNMP      : Disable
[2]Read Community : public
[3]Write Community : private
[4]SysName    : 0060E9-026F70
[5]SysLocation : location
[6]SysContact  : contact
[7]SNMP Trap Server : 000.000.000.000
:

```

Figure 3.11 SNMP Settings by Telnet

3.2.6 COM Port Configuration

SE5404D series allow one to configure the parameters of COM port including COM working mode, port parameters, enabling or disabling serial buffer's data and packet delimiter setting.

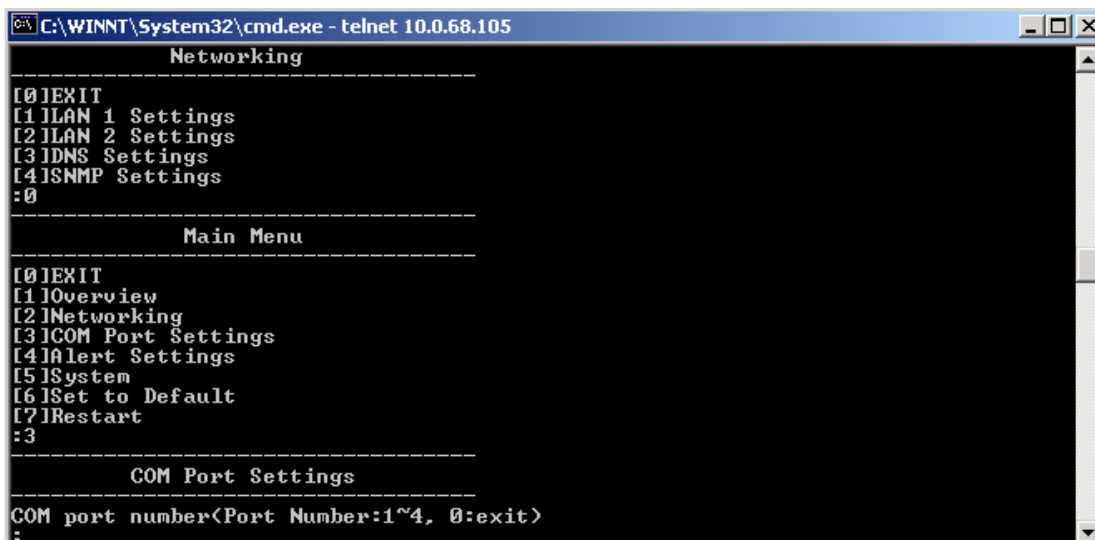

```

C:\WINNT\System32\cmd.exe - telnet 10.0.68.105
-----
Networking
-----
[0]EXIT
[1]LAN 1 Settings
[2]LAN 2 Settings
[3]DNS Settings
[4]SNMP Settings
:0

-----
Main Menu
-----
[0]EXIT
[1]Overview
[2]Networking
[3]COM Port Settings
[4]Alert Settings
[5]System
[6]Set to Default
[7]Restart
:3

-----
COM Port Settings
-----
COM port number<Port Number:1~4, 0:exit>
:

```

Figure 3.12 Select COM Port from Serial Settings by Telnet


3.2.7 TCP Server for Link Mode

Operation: Main→ [3]COM Port Setting→[1-16]Select Port→[1]Link Mode→[1]TCP Server

TCP Server mode is default setting for Link mode of serial settings, and it can be configured in a TCP server mode on an Ethernet Network to waiting for the host computers to establish a connection with the serial device (the client). After the connection is established, data can flow in both directions and can wait for connect request from remote PC with installed “serial-to IP” tool or counter-pair Serial server in tunneling mode. It needs to configure listening port to establish connection, Default Port number of Serial Server is 4660 and it is associated with the serial port COM1. After the application program being connected to the TCP port 4660 on the Serial Server, data of your application program are transparent to both COM1 and Serial Server.

IP filtering function is a simple ACL (Access Control List). Set FILTER_IP to “0.0.0.0” for disabling the “**IP filtering function**”.

One may configure one or group IPs for source IP. If IP filter is enabled, only source IP assigned is connected to Serial Server.

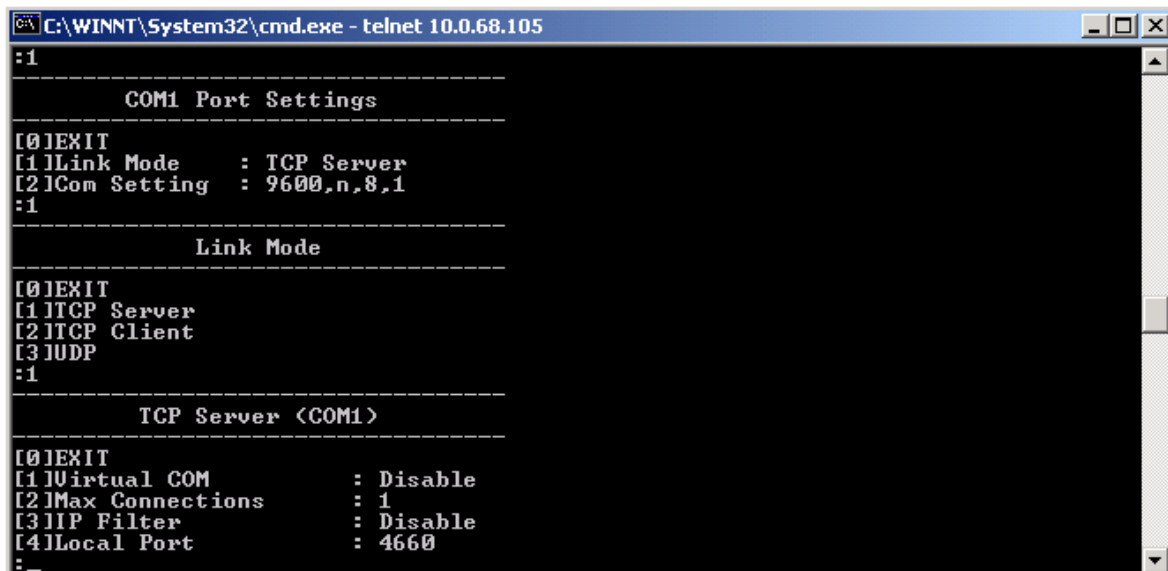

```

C:\WINNT\System32\cmd.exe - telnet 10.0.68.105
:1
-----
          COM1 Port Settings
-----
[0]EXIT
[1]Link Mode      : TCP Server
[2]Com Setting   : 9600,n,8,1
:1
-----
          Link Mode
-----
[0]EXIT
[1]TCP Server
[2]TCP Client
[3]UDP
:1
-----
          TCP Server <COM1>
-----
[0]EXIT
[1]Virtual COM    : Disable
[2]Max Connections : 1
[3]IP Filter      : Disable
[4]Local Port     : 4660
:
  
```

Figure 3.13 TCP Server for Link mode

※ **Note:** Enable Virtual COM mode if the remote site PC’s “Serial to IP” tool installed.

3.2.8 TCP Client for Link Mode

Operation: Main→ [3]COM Port Setting→[1-16]Select Port→[1]Link Mode→[2]TCP Client

On destination IP & port enter desired destination IP and port as a TCP client (For example, another serial server, or PC for data-collection). The Serial Server can support two destination host computers simultaneously.

```

C:\WINNT\System32\cmd.exe - telnet 10.0.68.105

-----
TCP Server <COM1>
-----
[0]EXIT
[1]Virtual COM      : Disable
[2]Max Connections  : 1
[3]IP Filter        : Disable
[4]Local Port       : 4660
:0

-----
Link Mode
-----
[0]EXIT
[1]TCP Server
[2]TCP Client
[3]UDP
:2

-----
TCP Client <COM1>
-----
[0]EXIT
[1]Destination IP 1 : 000.000.000.000
[2]Destination Port 1 : 4660
[3]Destination 2     : Disable
:

```

Figure 3.14 TCP Client for Link mode

3.2.9 UDP Link Mode

Operation: Main→ [3]COM Port Setting→[1-16]Select Port→[1]Link Mode→[3]UDP

Serial Server can be configured in a UDP mode to establish connection using uni-cast or broadcast the data from the serial device to one or multiple host computers. Vice versa is also true. For example, The original RS-422/RS485 bus is transferred and extended connecting distance by serial servers, The destination IP is assigned by single IP or group IPs, The configuration is limited by the Local Listening Port (For example, on the COM1 of Serial Server listening port is 4660 which receive data sending from the host computer)

Serial Server can support up to 8-group IPs for UDP connection, if users needed.

```

C:\WINNT\System32\cmd.exe - telnet 10.0.68.105

[3]Destination 2 : Disable
:0

-----
Link Mode
-----
[0]EXIT
[1]TCP Server
[2]TCP Client
[3]UDP
:3

-----
UDP <COM1>
-----
[0]EXIT
[1]Local Port      : 4660
[2]Destination IP 1 : 000.000.000.000 ~ 000
[3]Destination Port 1 : 4660
[4]Destination 2    : Disable
[5]Destination 3    : Disable
[6]Destination 4    : Disable
[7]Destination 5    : Disable
[8]Destination 6    : Disable
[9]Destination 7    : Disable
[10]Destination 8   : Disable
:

```

Figure 3.15 UDP for Link mode

* Note: UDP mode doesn't support Virtual COM mode yet.

3.2.10 Serial Settings

Operation: Main→ [3]COM Port Setting→[1-16]Select Port→[2]Com Settings

* Here one may configure baud rate, parity, data bit, stop bit, flow control, and UART mode as defined by the user.

```

COM Port Settings
-----
COM port number<Port Number:1~16, 0:exit>
:1
-----
COM1 Port Settings
-----
[0]EXIT
[1]Link Mode      : TCP Server
[2]Com Setting    : RS232,9600,n,8,1
:2
-----
COM1 Setting
-----
[0]EXIT
[1]Uart mode      : RS232
[2]Baud rate      : 9600 bps
[3]Parity         : None
[4]Data bits      : 8 bits
[5]Stop bits      : 1 bit
[6]Flow control   : None
:_

```

Figure 3.16 Serial Setting by Telnet

3.2.12 Alert Settings

There are two subsystem settings include E-mail and Alert Event.

```

C:\WINNT\System32\cmd.exe - telnet 10.0.68.105
:0
-----
COM Port Settings
COM port number(Port Number:1~4, 0:exit)
:0
-----
Main Menu
-----
[0]EXIT
[1]Overview
[2]Networking
[3]COM Port Settings
[4]Alert Settings
[5]System
[6]Set to Default
[7]Restart
:4
-----
Alert Settings
-----
[0]EXIT
[1]E-mail Settings
[2]Alert Event
:

```

Figure 3.19 Alert Settings by Telnet

3.2.13 Configuring E-mail

Operation: Main→ [4]Alert Settings→[1]E-mail Settings

One may configure the “**Sender’s E-mail address**” that it should have on the SMTP server (Mail Server) where allowed to sent out the email by sender’s E-mail address. The SE5404D allow to definite the receiver up to 5. Also the E-mail notification will be sent to the e-mail account their obtained in “Receiver’s E-mail address 1”, “Receiver’s E-mail address 2”, “Receiver’s E-mail address 3”, “Receiver’s E-mail address 4” and “Receiver’s E-mail address 5”.

```

C:\WINNT\System32\cmd.exe - telnet 10.0.68.105
[4]Alert Settings
[5]System
[6]Set to Default
[7]Restart
:4
-----
Alert Settings
-----
[0]EXIT
[1]E-mail Settings
[2]Alert Event
:1
-----
E-mail Setting
-----
[0]EXIT
[1]Sender's Email Address :
[2]Receiver's Email Address 1 :
[3]Receiver's Email Address 2 :
[4]Receiver's Email Address 3 :
[5]Receiver's Email Address 4 :
[6]Receiver's Email Address 5 :
[7]Mail Server :
[8]Require Authentication : No
:

```

Figure 3.20 Configuring E-mail by Telnet

One may configure Mail Server and checking on “**My mail server requests authentication**” field to obtain User name and Password.

```

C:\WINNT\System32\cmd.exe - telnet 10.0.68.105
[2]Receiver's Email Address 1 :
[3]Receiver's Email Address 2 :
[4]Receiver's Email Address 3 :
[5]Receiver's Email Address 4 :
[6]Receiver's Email Address 5 :
[7]Mail Server :
[8]Require Authentication : No
:6
New Email Address 5
:0

-----
E-mail Setting
-----
[0]EXIT
[1]Sender's Email Address :
[2]Receiver's Email Address 1 :
[3]Receiver's Email Address 2 :
[4]Receiver's Email Address 3 :
[5]Receiver's Email Address 4 :
[6]Receiver's Email Address 5 : -> 0
[7]Mail Server :
[8]Require Authentication : No
:7
New Mail Server
:

```

Figure 3.21 Configuring Mail Server by Telnet

3.2.14 Configuring Alert Event

Operation: Main→ [4]Alert Settings→[2]Alert Event

Choose the Alert event to configure SE5404D Series to send the alert notification by E-Mail or SNMP Trap (See Fig. 3.22).

```

C:\WINNT\System32\cmd.exe - telnet 10.0.68.105
:
-----
Alert Settings
-----
[0]EXIT
[1]E-mail Settings
[2]Alert Event
:4

-----
Alert Settings
-----
[0]EXIT
[1]E-mail Settings
[2]Alert Event
:2


-----
Alert Event
-----
[0]EXIT
[1]Cold Start : Email OFF, Trap OFF
[2]Warm Start : Email OFF, Trap OFF
[3]Authentication Failure : Email OFF, Trap OFF
[4]IP Address Changed : Email OFF
[5]Password Changed : Email OFF
:

```

Figure 3.22 Configuring Alert Event by Telnet

3.2.15 System Configuration

Operation: Main→ [5]System

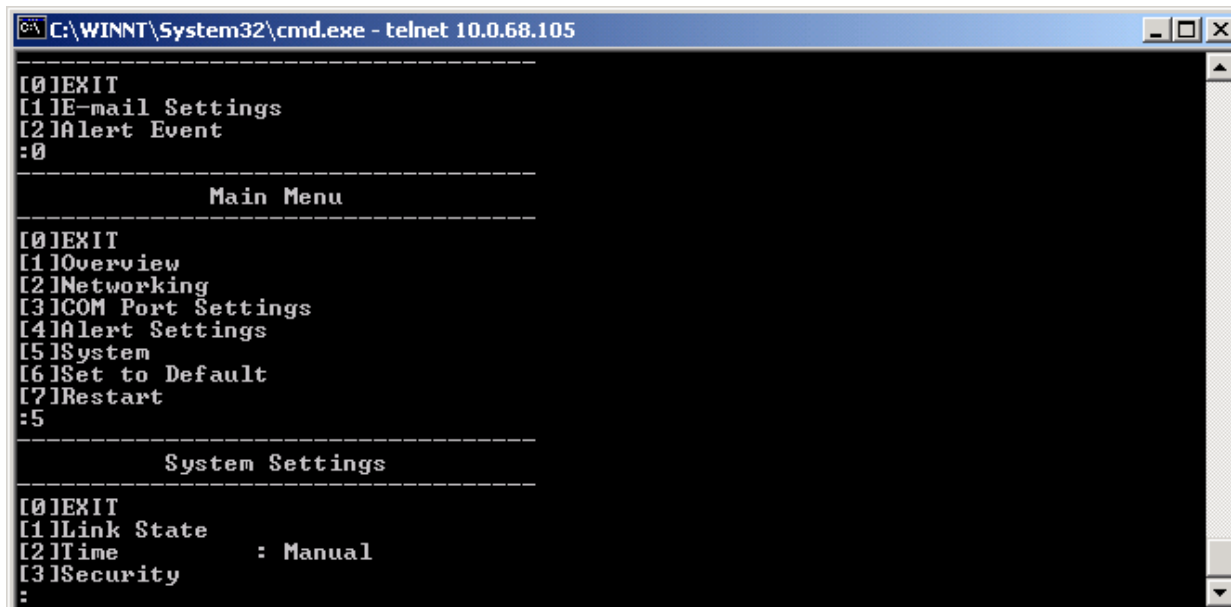

```

C:\WINNT\System32\cmd.exe - telnet 10.0.68.105

[0]EXIT
[1]E-mail Settings
[2]Alert Event
[3]0
-----
Main Menu
-----
[0]EXIT
[1]Overview
[2]Networking
[3]COM Port Settings
[4]Alert Settings
[5]System
[6]Set to Default
[7]Restart
:5
-----
System Settings
-----
[0]EXIT
[1]Link State
[2]Time      : Manual
[3]Security
:
  
```

Figure 3.23 Security settings by Telnet

3.2.16 Link State

Operation: Main→ [5]System→[1]Link State

Link State is display information by Link mode (TCP Server, TCP Client and UPD) and status of each connection for all serial port.



```

C:\WINNT\System32\cmd.exe - telnet 10.0.68.105


Remark: L-Listen, C-Connecting, D-Connected, R-Ready
-----
Port  Type      IP1    IP2    IP3    IP4    IP5    IP6    IP7    IP8
-----
01 TCP Server   L
02 TCP Server   L
03 TCP Server   L
04 TCP Server   L
Press '0' to cancel ...
  
```

Figure 3.24 Display Link State by Telnet

3.2.17 Time Settings

Operation: Main→[5]System→[2]Time

One may configure time to Manual Settings or NTP services. The changed will take effect immediately when saved successfully.

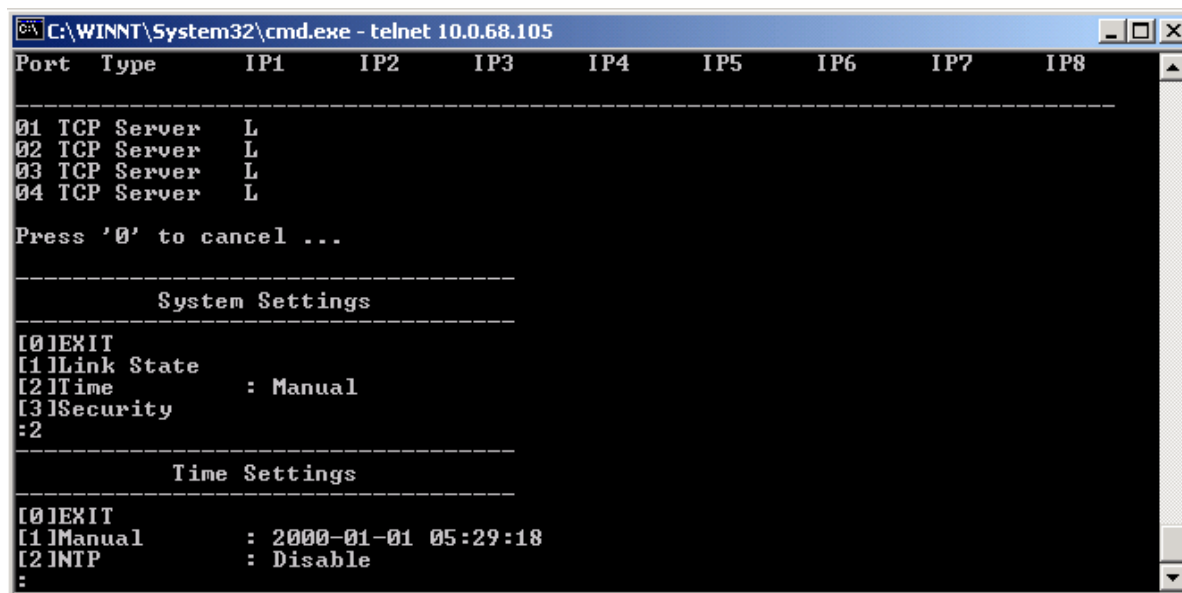

```

C:\WINNT\System32\cmd.exe - telnet 10.0.68.105
Port  Type      IP1      IP2      IP3      IP4      IP5      IP6      IP7      IP8
-----
01 TCP Server  L
02 TCP Server  L
03 TCP Server  L
04 TCP Server  L

Press '0' to cancel ...

-----
System Settings
-----
[0]EXIT
[1]Link State
[2]Time       : Manual
[3]Security
:2


-----
Time Settings
-----
[0]EXIT
[1]Manual     : 2000-01-01 05:29:18
[2]NTP        : Disable
:
  
```

Figure 3.25 Time settings by Telnet

3.2.18 Security Settings

Operation: Main→[5]System→[3]Security

SE5404D serials allow one to change the access methods to protect it against intrusion.

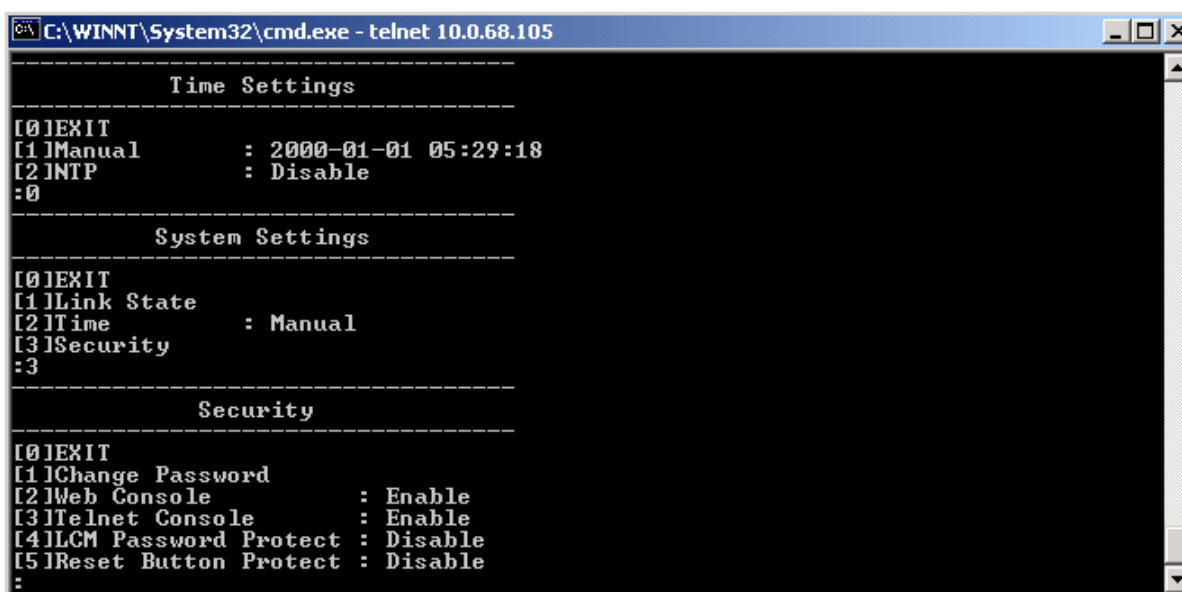

```

C:\WINNT\System32\cmd.exe - telnet 10.0.68.105
-----
Time Settings
-----
[0]EXIT
[1]Manual     : 2000-01-01 05:29:18
[2]NTP        : Disable
:0

-----
System Settings
-----
[0]EXIT
[1]Link State
[2]Time       : Manual
[3]Security
:3


-----
Security
-----
[0]EXIT
[1]Change Password
[2]Web Console   : Enable
[3]Telnet Console : Enable
[4]LCM Password Protect : Disable
[5]Reset Button Protect : Disable
:
  
```

Figure 3.26 Security Settings by Telnet

3.2.19 Restoring Factory Default

Operation: Main→ [6]Set to Default

Choose this menu to restore Serial Server's settings to Factory Default Settings.

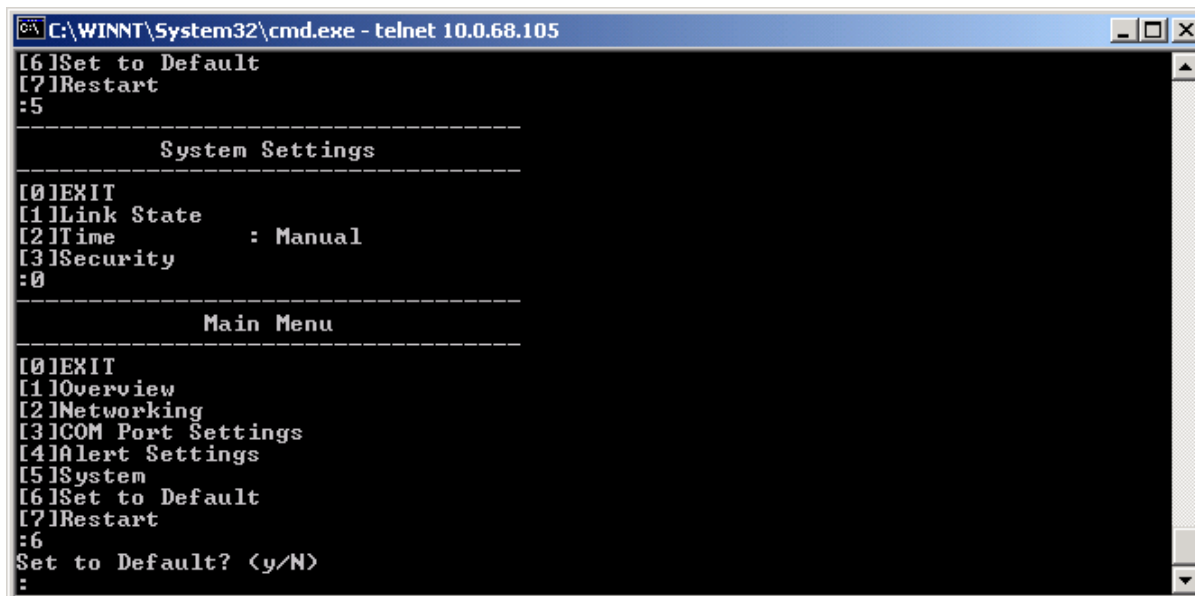

```
C:\WINNT\System32\cmd.exe - telnet 10.0.68.105
[6]Set to Default
[7]Restart
:5

-----
System Settings
-----
[0]EXIT
[1]Link State
[2]Time : Manual
[3]Security
:0


-----
Main Menu
-----
[0]EXIT
[1]Overview
[2]Networking
[3]COM Port Settings
[4]Alert Settings
[5]System
[6]Set to Default
[7]Restart
:6
Set to Default? <y/N>
:
```

Figure 3.27 Restore Factory Default by Telnet

3.2.20 Restart System

Operation: Main→ [7]Restart

Choose this menu to restart the SE5404D series.

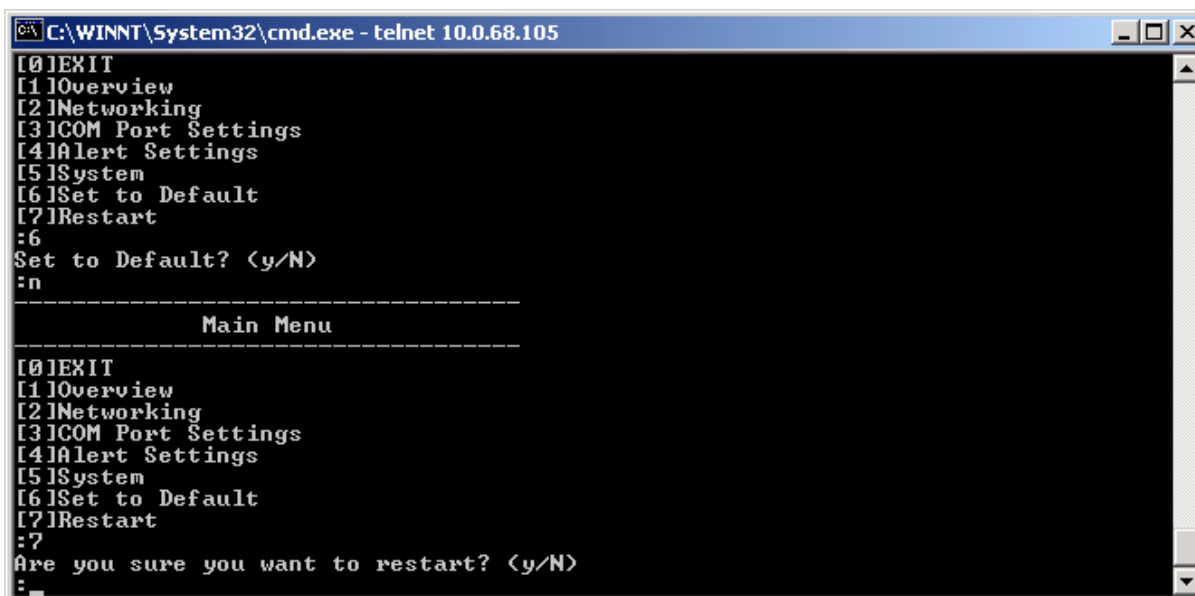

```
C:\WINNT\System32\cmd.exe - telnet 10.0.68.105
[0]EXIT
[1]Overview
[2]Networking
[3]COM Port Settings
[4]Alert Settings
[5]System
[6]Set to Default
[7]Restart
:6
Set to Default? <y/N>
:n

-----
Main Menu
-----
[0]EXIT
[1]Overview
[2]Networking
[3]COM Port Settings
[4]Alert Settings
[5]System
[6]Set to Default
[7]Restart
:7
Are you sure you want to restart? <y/N>
:
```

Figure 3.28 Restart System by Telnet

3.3 Web Configuration


1. Make sure your PC is located on the same network sub-net as SE5404D
2. Open a web browser, then Enter in the IP address of SE5404D to be configured. Default user name is “**admin**” and default password is “**default**”.
3. SE5404D’s **network**, **link mode** and **COM ports settings** can be configured in different web pages.
4. Click “**Save Configuration**” to save settings.
5. Click “**Restart**” button in “**System**” link to make the change effective if necessary.

It is also possible to modify various settings through the web server interface. To do so, please follow the steps below.

3.3.1 Login to System

While on the web browser, ex. Microsoft IE, Firefox or any other web browser, enter the IP address of Serial Server on the URL bar. **Example:** <http://10.0.50.100>

The following authentication screen shall appear. Enter the **user name** and **password** then click on “**OK**”. The default user name is **admin** and password is **default**.

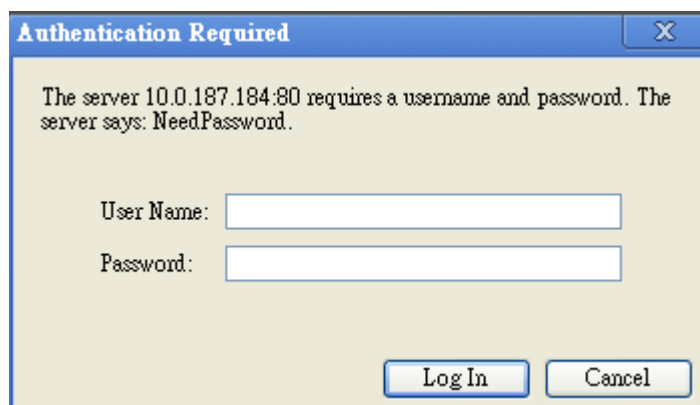

The dialog box titled "Authentication Required" has a close button (X) in the top right corner. The main text reads: "The server 10.0.187.184:80 requires a username and password. The server says: NeedPassword." Below this text are two input fields: "User Name:" and "Password:". At the bottom right, there are two buttons: "Log In" and "Cancel".

Figure 3.19 Authorization Request for System Security

3.3.2 General Information

This system overview window gives the general information on Device and Network information (See Fig 3.20)

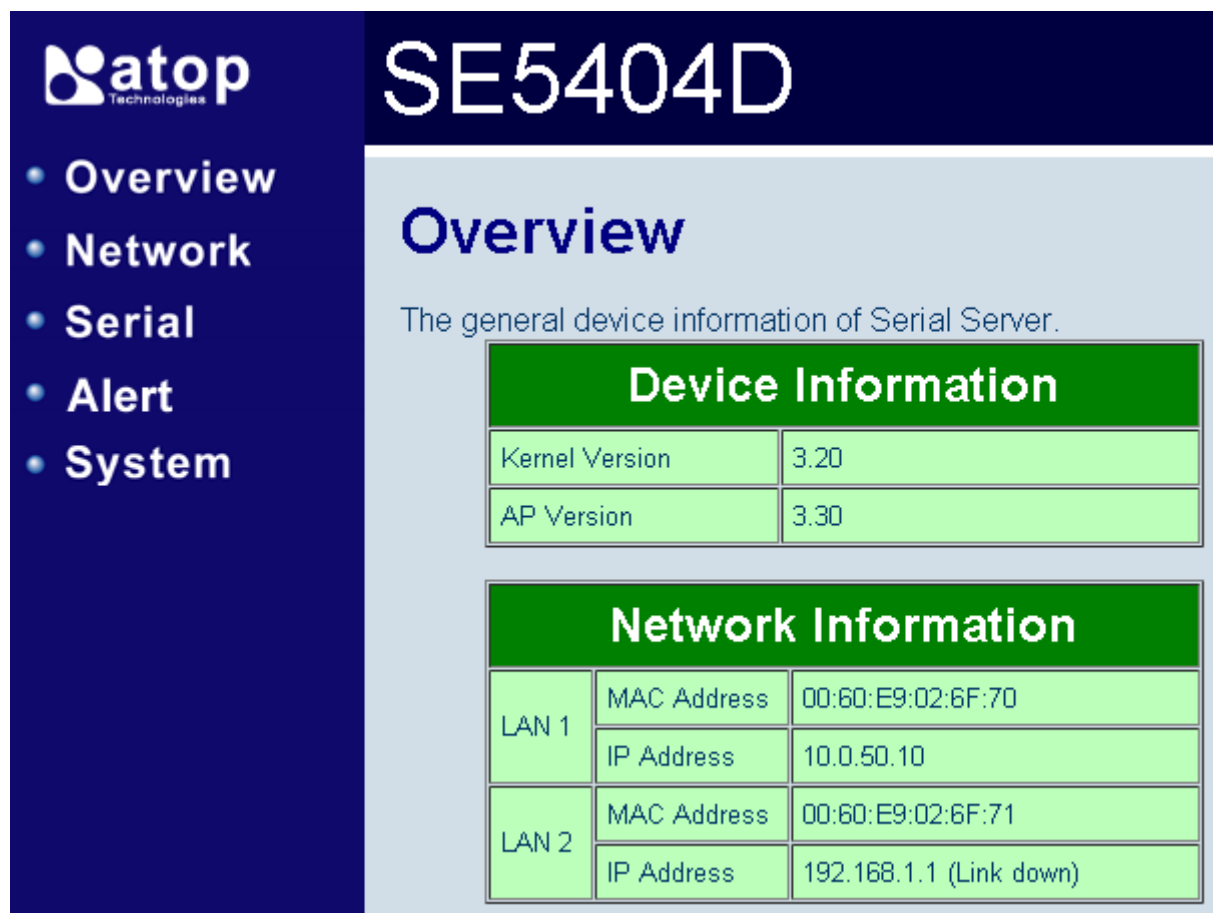


Figure 3.20 Overview by Web page

Device Information

SE5404D Serial Server's displays system information Kernel version and AP version. The information are read only and attributed from another setting page or system status (See Fig. 3.21)

Device Information	
Kernel Version	3.20
AP Version	3.30

Figure 3.21 Device Information by Web page

Networking information


Networking information fields are displayed both 'LAN 1 and LAN 2' s information on overview page. The information provided with networking settings (See Fig. 3.22).

Network Information		
LAN 1	MAC Address	00:60:E9:02:6F:70
	IP Address	10.0.50.10
LAN 2	MAC Address	00:60:E9:02:6F:71
	IP Address	192.168.1.1 (Link down)

Figure 3.22 Network Information by Web page

3.3.3 Network Configuration

There are four items allowed to change on Network page in which include LAN 1, LAN 2, DNS and SNMP Information.



SE5404D

- Overview
- Network
- Serial
- Alert
- System

Network

TCP/IP
To configure network settings of Serial Server. After saving configuration you have to restart the device to make the settings effective.

LAN 1 Settings

DHCP	<input type="checkbox"/> Obtain an IP automatically
IP Address	<input type="text" value="10"/> . <input type="text" value="0"/> . <input type="text" value="50"/> . <input type="text" value="10"/>
Subnet Mask	<input type="text" value="255"/> . <input type="text" value="255"/> . <input type="text" value="0"/> . <input type="text" value="0"/>
Default Gateway	<input type="text" value="10"/> . <input type="text" value="0"/> . <input type="text" value="0"/> . <input type="text" value="254"/>

LAN 2 Settings

DHCP	<input type="checkbox"/> Obtain an IP automatically
IP Address	<input type="text" value="192"/> . <input type="text" value="168"/> . <input type="text" value="1"/> . <input type="text" value="1"/>
Subnet Mask	<input type="text" value="255"/> . <input type="text" value="255"/> . <input type="text" value="255"/> . <input type="text" value="0"/>
Default Gateway	<input type="text" value="192"/> . <input type="text" value="168"/> . <input type="text" value="1"/> . <input type="text" value="254"/>

Figure 3.23 Network Configuration by Web page

3.3.4 LAN 1 Settings

Click on the “**Network**” link and the following screen shall appear. Fill in LAN 1 IP information on LAN 1 TCP/IP field. Alternatively, one may activate DHCP client function by checking on “**Obtain an IP automatically**”.

LAN 1 Settings	
DHCP	<input type="checkbox"/> Obtain an IP automatically
IP Address	10 . 0 . 50 . 10
Subnet Mask	255 . 255 . 0 . 0
Default Gateway	10 . 0 . 0 . 254

Figure 3.24 LAN 1 Setting by Web page

3.3.5 LAN 2 Settings

Click on the **“Network”** link and the following screen shall appear. Fill in LAN 2 IP information on LAN 2 settings fields. Alternatively, one may activate DHCP client function by checking on **“Obtain an IP automatically”** field to obtain IP address, gateway and subnet mask from DHCP server automatically.

LAN 2 Settings	
DHCP	<input type="checkbox"/> Obtain an IP automatically
IP Address	192 . 168 . 1 . 1
Subnet Mask	255 . 255 . 255 . 0
Default Gateway	192 . 168 . 1 . 254

Figure 3.25 LAN 2 Setting by Web page

3.3.6 DNS Settings

Click on the **“Network”** link and the following screen shall appear. Fill in DNS information. Alternatively, you can set the Serial Server to receive DNS server IP address from DHCP server automatically by enabling the DHCP of **“LAN 1 Settings”**.

DNS	
DNS Settings	
DNS1	255 . 255 . 255 . 255
DNS2	255 . 255 . 255 . 255

Figure 3.26 DNS Setting by Web page

3.3.7 SNMP Settings

Click on the **“Network”** link and the following screen shall appear. Fill in SNMP information on third field. Alternatively, to settings SysName, SysLocation, SysContact fields and one may configure by Checking on **“Enable SNMP”** field. Fill in Read Community, Write Community, SNMP Trap Server information on SNMP Settings fields. The changes of SNMP Settings will take effect immediately when saved successful.

SNMP Settings	
SysName	<input type="text" value="0060E9-026F70"/>
SysLocation	<input type="text" value="location"/>
SysContact	<input type="text" value="contact"/>
SNMP	<input type="checkbox"/> Enable SNMP
Read Community	<input type="text" value="public"/>
Write Community	<input type="text" value="private"/>
SNMP Trap Server	<input type="text" value="0"/> . <input type="text" value="0"/> . <input type="text" value="0"/> . <input type="text" value="0"/>

Figure 3.27 SNMP Setting by Web page

3.4 COM Port Configuration

COM 1

Link Mode
To choose specific working mode for COM 1 port.

☒ TCP Server ☐ TCP Client ☐ UDP

TCP Server	
Virtual COM	<input type="checkbox"/> Enable
Max. Connections	4 ▼
	<input type="radio"/> Request & Response Mode <input checked="" type="radio"/> Reply to requester only <input type="radio"/> Reply to all <input checked="" type="radio"/> Transparent Mode
IP Filter	<input type="checkbox"/> Enable
Source IP	<input type="text" value="0"/> . <input type="text" value="0"/> . <input type="text" value="0"/> . <input type="text" value="0"/>
Local Port	<input type="text" value="4660"/>
<input type="checkbox"/> Apply to all serial ports (Local Port will be enumerated automatically.)	

Figure 3.28 COM Port Configuration by Web page

3.4.1 TCP Server for Link Mode

TCP Server mode is the default Link mode of serial settings, and it can wait for connecting requirement from remote host PC which “serial-to IP” tool installed or counter-pair SE5404D Serial servers in tunneling mode. One shall configure listening port to allow establishing connection; Default port numbers of Serial Server are 4660 – 4667/4675.

If you wish to setup two SE5404Ds in tunneling mode, one SE5404D should run as a TCP Server and the other should run as a TCP Client. Server's Local Port should match Client's Destination Port. Client's Destination IP should match Server's IP. Detailed steps are described below.

1. Prepare two SE5404Ds (A and B). Note that you can treat each COM port as an independent device.
2. SE5404D A= 10.10.50.100. SE5404D B = 10.10.50.101 (You can use different IPs, but both SE5404Ds need to be in the same subnet).
3. When connecting SE5404D to the instrument or to the PC over RS-232, please use a cross-over cable.
4. Enable “Virtual COM” on the WebUI for both SE5404Ds (First option in COM settings).
5. Set SE5404D A COM1 to TCP Server mode. Set SE5404D B COM1 to TCP Client mode IP and port equal to SE5404D A COM1's settings (Default Destination IP=10.10.50.100, Default Destination Port = 4660).
6. (optional) Repeat for remaining COMs: Set SE5404D A COM2 to TCP Server mode. Set SE5404D B COM2

to TCP Client mode IP and port equal to SE5404D A COM2's settings (Default Destination IP=10.10.50.100, Default Destination Port = 4661).

Max Connections (default=1):

This option is used if you need to receive data from different hosts simultaneously. When set to 1, only a single host may open the TCP connection to the serial port. When set to 2 or greater, up to the specified number of hosts may open this port at the same time.



Attention

When **Max. Connections** is greater than 1, the Serial server will apply multi connection application (i.e., 4 hosts are allowed access to the port at the same time). When using a multi connection application, all hosts connected to the port must use identical serial settings. If one of the hosts opens the COM port with different serial settings, data will not be transmitted properly

Request and response Mode

This option determines how the port will proceed if multiple hosts are connected and one or more of the hosts stop responding when the port is transmitting data. If you select **Reply to requester only**, the port will keep other hosts' request data in the buffer and continue data transmission to the request host only. If you select **Reply to all**, the port will transmit reply data to all connected hosts.

Transparent Mode

The port will allow the other hosts and continue data transmission to all hosts. This mode does not take "Response Interval Timeout" into consideration.

IP filtering function is a simple ACL (Access Control List) disabled by setting FILTER_IP to "0.0.0.0".

One may configure one or group IP for source IP. If IP filter is enabled, only source IP assigned is connected to Serial Server.

If you check "**Apply to all serial ports**", it will configure all of the serial ports.

COM 1

Link Mode

To choose specific working mode for COM 1 port.

☒ TCP Server
 ☐ TCP Client
 ☐ UDP

TCP Server	
Virtual COM	<input type="checkbox"/> Enable
Max. Connections	4
	<input type="radio"/> Request & Response Mode <input checked="" type="radio"/> Reply to requester only <input type="radio"/> Reply to all <input checked="" type="radio"/> Transparent Mode
IP Filter	<input type="checkbox"/> Enable
Source IP	0 . 0 . 0 . 0
Local Port	4660
<input type="checkbox"/> Apply to all serial ports (Local Port will be enumerated automatically.)	

Figure 3.29 TCP Server in Link mode

* Note: Enable Virtual COM mode if the remote site PC's "Serial to IP" tool installed

3.4.2 TCP Client for Link Mode

One may enter destination IP & port (default: 4660) to establish connection of counter-pair (remote) host (For example, another serial server, or PC for data-collection). Serial Server can support two destination hosts simultaneously.

If you check "**Apply to all serial ports**", it will configure all of the serial ports.

COM 1

Link Mode

To choose specific working mode for COM 1 port.

☐ TCP Server
 ☒ TCP Client
 ☐ UDP

TCP Client	
Virtual COM	<input checked="" type="checkbox"/> Enable
Destination IP 1	0 . 0 . 0 . 0
Destination Port 1	4660
Destination 2	<input type="checkbox"/> Enable
Destination IP 2	0 . 0 . 0 . 0
Destination Port 2	4660
	<input type="radio"/> Request & Response Mode <input checked="" type="radio"/> Reply to requester only <input type="radio"/> Reply to all <input checked="" type="radio"/> Transparent Mode
<input type="checkbox"/> Apply to all serial ports	

Figure 3.30 TCP Client in Link mode

3.4.3 UDP for Link Mode

UDP is a fast but non-guaranteed datagram delivery protocol. Serial Server can be configured in a UDP mode on a TCP/IP Network to establish a connection, using uni-cast or broadcast data to and from a serial device to one or multiple host computer.

Serial Server can be configured in a UDP mode to establish connection using uni-cast or broadcast data from the serial device to one or multiple host computers. Vice versa is also true. For example, The original RS-422/ RS485 bus is transferred and extended connecting distance by Serial Servers, The destination IP is assigned by single IP or group IPs, The configuration is limited by the Local Listening Port (For example, on Serial Server listening port is 4660 which receive data sending from the host computers) Serial Server can support up to 8-group IP for UDP connection, if users needed.

If you check "**Apply to all serial ports**", it will configure all of the serial ports.

COM 1

Link Mode
To choose specific working mode for COM 1 port.

☐ TCP Server
 ☐ TCP Client
 ☒ **UDP**

UDP

Local Port

Destination IP Address 1	<input checked="" type="checkbox"/> Enable	<input type="text" value="0"/> <input type="text" value="0"/> <input type="text" value="0"/> <input type="text" value="0"/> ~ <input type="text" value="0"/>	Port <input style="width: 50px;" type="text" value="4660"/>
Destination IP Address 2	<input type="checkbox"/> Enable	<input type="text" value="0"/> <input type="text" value="0"/> <input type="text" value="0"/> <input type="text" value="0"/> ~ <input type="text" value="0"/>	Port <input style="width: 50px;" type="text" value="4660"/>
Destination IP Address 3	<input type="checkbox"/> Enable	<input type="text" value="0"/> <input type="text" value="0"/> <input type="text" value="0"/> <input type="text" value="0"/> ~ <input type="text" value="0"/>	Port <input style="width: 50px;" type="text" value="4660"/>
Destination IP Address 4	<input type="checkbox"/> Enable	<input type="text" value="0"/> <input type="text" value="0"/> <input type="text" value="0"/> <input type="text" value="0"/> ~ <input type="text" value="0"/>	Port <input style="width: 50px;" type="text" value="4660"/>
Destination IP Address 5	<input type="checkbox"/> Enable	<input type="text" value="0"/> <input type="text" value="0"/> <input type="text" value="0"/> <input type="text" value="0"/> ~ <input type="text" value="0"/>	Port <input style="width: 50px;" type="text" value="4660"/>
Destination IP Address 6	<input type="checkbox"/> Enable	<input type="text" value="0"/> <input type="text" value="0"/> <input type="text" value="0"/> <input type="text" value="0"/> ~ <input type="text" value="0"/>	Port <input style="width: 50px;" type="text" value="4660"/>
Destination IP Address 7	<input type="checkbox"/> Enable	<input type="text" value="0"/> <input type="text" value="0"/> <input type="text" value="0"/> <input type="text" value="0"/> ~ <input type="text" value="0"/>	Port <input style="width: 50px;" type="text" value="4660"/>
Destination IP Address 8	<input type="checkbox"/> Enable	<input type="text" value="0"/> <input type="text" value="0"/> <input type="text" value="0"/> <input type="text" value="0"/> ~ <input type="text" value="0"/>	Port <input style="width: 50px;" type="text" value="4660"/>

☐ Apply to all serial ports (Local Port will be enumerated automatically.)

Figure 3.31 UDP in Link mode

* **Note:** UDP mode doesn't support Virtual COM mode yet

3.4.5 Serial Settings

This file can configure serial parameters for Serial Server. Here one may configure Serial parameters, include UART Mode, baud rate, parity, data bit and type of flow control you wanted

- **Configuring UART Mode:** RS-232 or RS-485 or RS-422
- **Baud rate:** 300 / 600 / 1200 / 2400 / 4800 / 9600 / 19200 / 38400 / 57600 / 115200 / 230400 / 460800 / 500000 / 576000 / 921600
- **Parity:** None or Odd or Even or Mark or Space
- Data bits: 7 or 8
- Stop bits: 1 or 2
- **Flow control:** None or Xon/Xoff or Hardware (RTS/CTS)
- **Disable FIFO:** No/Yes. For serial devices that are very sensitive to the amount of data that they receive, FIFO should be disabled. For regular applications, we recommend to enable FIFO (default) to achieve optimal performance.

* If you check "**Apply to all serial ports**", it will configure all of the serial ports.

Serial Settings	
UART Mode	<input checked="" type="radio"/> RS422 <input type="radio"/> RS485
Baud Rate	9600 <input type="button" value="v"/> bps
Parity	<input checked="" type="radio"/> None <input type="radio"/> Odd <input type="radio"/> Even <input type="radio"/> Mark <input type="radio"/> Space
Data bits	<input type="radio"/> 5 bits <input type="radio"/> 6 bits <input type="radio"/> 7 bits <input checked="" type="radio"/> 8 bits
Stop bits	<input checked="" type="radio"/> 1 bit <input type="radio"/> 2 bits
Flow Control	<input checked="" type="radio"/> None <input type="radio"/> Xon/Xoff <input type="radio"/> RTS/CTS
Disable COM's FIFO	<input checked="" type="radio"/> No <input type="radio"/> Yes
<input type="checkbox"/> Apply to all serial ports	

Figure 3.32-1 Serial Settings by Web page

3.4.6 Advanced Settings

ADVANCED SETTINGS	
Time out for receiving TCP data	<input checked="" type="checkbox"/> Enable <input type="text" value="3600"/> (0~65535) seconds
Serial to Network Packet Delimiter	<input checked="" type="checkbox"/> Interval timeout <input type="text" value="2"/> (1~30000) ms <input checked="" type="radio"/> Auto(caculate by baudrate) <input type="radio"/> Manual setting <input type="checkbox"/> Max. Bytes <input type="text" value="0"/> (within one packet:1~1452 bytes) <input type="checkbox"/> Character <input type="text" value="0"/> ("0x"+ASCII Code, Ex. 0x0d or 0x0d0a)
Network to Serial Packet Delimiter	<input type="checkbox"/> Interval timeout <input type="text" value="0"/> (1~30000) ms <input type="checkbox"/> Max. Bytes <input type="text" value="1452"/> (within one packet:1~1452 bytes) <input type="checkbox"/> Character <input type="text" value="0x0d0a"/> ("0x"+ASCII Code, Ex. 0x0d or 0x0d0a)
Response interval timeout	<input type="checkbox"/> Enable <input type="text" value="0"/> (0~60000) ms (Work with Multi-connection, Request & Response Mode only)
Keep Serial buffer data before TCP connection is Established	<input type="radio"/> Disable <input checked="" type="radio"/> Enable
<input type="checkbox"/> Apply to all serial ports	

Figure 3.32-1 Advanced Settings by Web page

Time out for receiving TCP data (Default: Disabled): This field specifies how long the serial device server will wait for a response to "keep alive" packets before closing the TCP connection. The serial device server checks

connection status by sending periodic “keep alive” packets. If the remote host does not respond to the packet within the time specified in this field, the serial device server will force the existing TCP connection to close. If this setting is set to 0, the TCP connection will remain open even if there is no response to the “keep alive” packets.

Serial to Network Packet Delimiter

Packet delimiter is a way of packing data in the serial communication. It is designed to keep packets in track. Serial device server provides three patterns in parameter setting: (1) **packet delimiter by** (1) **Interval timeout**, (2) **Max Byte** and (3) **Character pattern**.

1. **By Time** – The device will transmit the serial data in its buffer when the specified time interval has reached and no more serial data comes in.
2. **By Max Bytes** – The device will transmit the serial data when the data in the buffer has reached the specified length.
3. **By Character** - The device will transmit the serial data in its buffer when it sees the specified character.

If one or more of the delimiters are selected, data would be transmitted if any of the conditions are met.



Attention

Packet delimiter by Interval timeout

This parameter defines how large a gap in serial communication the serial device server will allow before packing the serial data in its internal buffer for network transmission.

The optional “Interval timeout” transmit time depends on your application, but it must be at least larger than one character interval within the specified baud rate. For example, assume that the serial port is set to 1200 bps, 8 data bits, 1 stop bit, and no parity. In this case, the total number of bits needed to send a character is 10 bits, and the time required to transfer one character is $(10 \text{ (bits)} / 1200 \text{ (bits/s)}) \times 1000 \text{ (ms/s)} = 8.3 \text{ ms}$.

Therefore, you should set the “Interval timeout” to be larger than 8.3 ms, so in this case, it must be greater than or equal to 10 ms. If it is necessary to send a series of characters in the same packet, the serial device will need to send that series of characters within the specified transmit time, and the total length of data must be less than or equal to the serial device server internal UART buffer size (4K per port).

Network to Serial Packet Delimiter

Network to Serial Packet Delimiter is used less often compared to Serial to Network Delimiter because Ethernet has better speeds. Packet delimiter is a way of packing data in a serial communication. It is designed to keep packets in track. Serial device server provides three patterns in parameter setting: (1) **packet delimiter by** (1) **Interval timeout**, (2) **Max Byte** and (3) **Character pattern**.

1. **By Time** – The device will transmit the network data in its buffer when the specified time interval has reached and no more network packet comes in.
2. **By Max Bytes** – The device will transmit the network data when the data in the buffer has reached the specified length.
3. **By Character** - The device will transmit the network data in its buffer when it sees the specified character.

If one or more of the delimiters are selected, data would be transmitted if any of the conditions are met.

Response interval timeout (Default: 1000ms):


This option only work in Request & Response Mode. When TCP data is received (request) and passed to Serial side, the device will wait for the set time before transferring another TCP data if the Serial side did not receive any data (response).

Keep serial buffer data before TCP connection is Established (Default: Disable):

If "Enable" is selected, the device will store received data in buffer and sent them out when connection is establish. Otherwise, data will be discarded when "Disable" is selected.

3.4.7 Alert Settings

There are two subsystem settings include E-mail and Alert Event.



The screenshot shows the web interface for the SE5404D device. On the left is a dark blue sidebar with the 'atop Technologies' logo and a menu with the following items: Overview, Network, Serial, Alert (with sub-items E-mail and Alert Event), and System. The main content area has a dark blue header with 'SE5404D' in white. Below this, the 'E-mail Setting' page is displayed. It has a green title bar 'E-mail Setting' and a subtitle 'To configure the SMTP server where the E-mail notification will be sent.' The form contains one row for 'Sender's E-mail address' and five rows for 'Receiver's E-mail address' (numbered 1 to 5). Below this is the 'Mail Server' section, which has a green title bar 'Mail Server'. The form includes a 'Mail Server' text field, a checkbox for 'Mail server authentication required.' (which is unchecked), and a 'User name' text field.

Figure 3.33 Alert settings by Web page

3.4.8 Configuring E-mail

Operation: Alert→E-mail

Click on the “**E-mail**” link and the following screen shall appear

One may configure the “**Sender’s E-mail address**” that it should have on the SMTP server (Mail Server) where allowed to sent out the email by sender’s E-mail address. The SE5404D allow to definite the receiver up to 5. Also the E-mail notification will be sent to the e-mail account their obtained in “Receiver’s E-mail address 1”, “Receiver’s E-mail address 2”, “Receiver’s E-mail address 3”, “Receiver’s E-mail address 4” and “Receiver’s E-mail address 5”.

E-mail Setting	
Sender's E-mail address	<input type="text"/>
Receiver's E-mail address 1	<input type="text"/>
Receiver's E-mail address 2	<input type="text"/>
Receiver's E-mail address 3	<input type="text"/>
Receiver's E-mail address 4	<input type="text"/>
Receiver's E-mail address 5	<input type="text"/>

Figure 3.34 Configuring E-mail by Web page

One may configure Mail Server and checking on “***My mail server requests authentication***” field to obtain User name and Password.

Mail Server	
Mail Server	<input type="text"/>
<input type="checkbox"/> Mail server authentication required.	
User name	<input type="text"/>
Password	<input type="text"/>


Figure 3.35 Configuring Mail Server by Web page

3.4.9 Configuring Alert Event

Operation: Alert→Alert Event

Click on the “***Alert Event***” link and the following screen shall appear

Choose the Alert event to configure SE5404D Series to send the alert notification by E-Mail or SNMP Trap (See Fig 3.36).

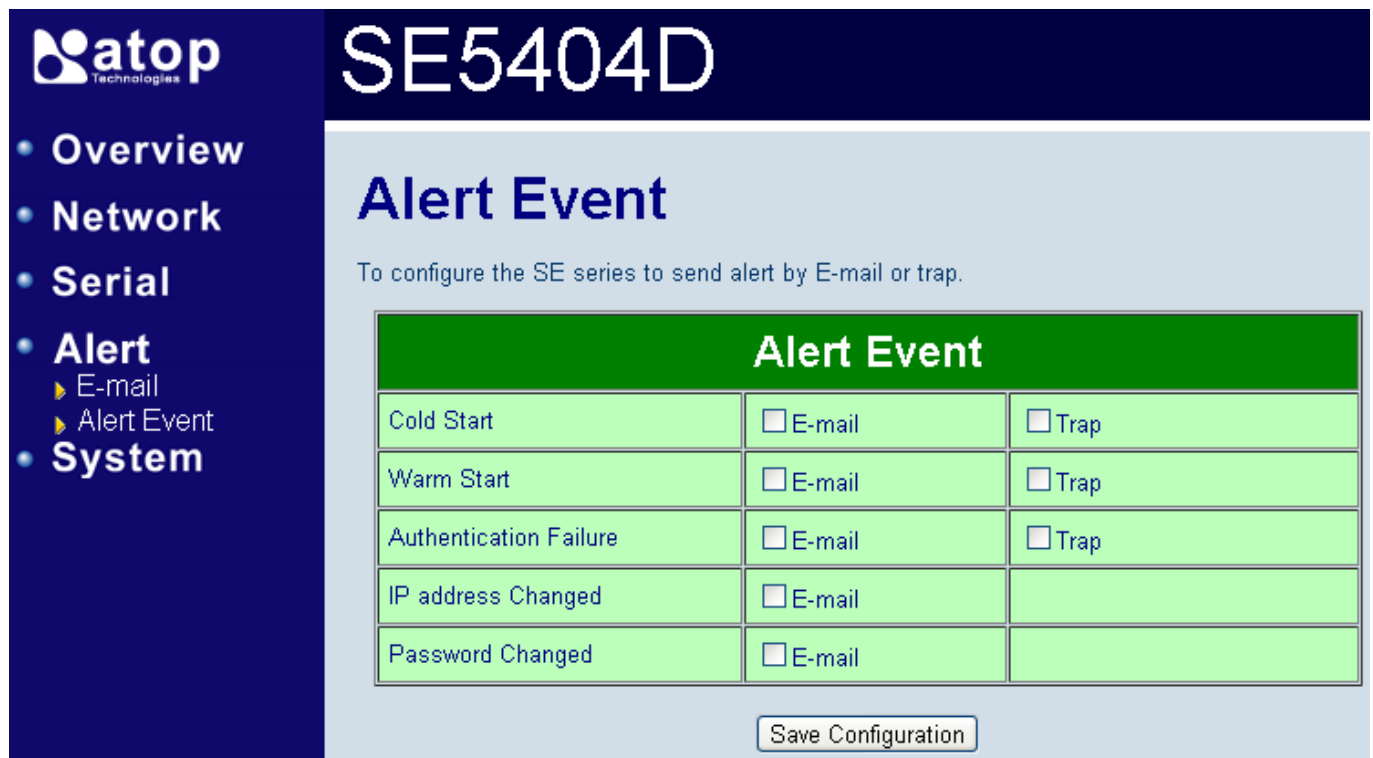


Alert Event		
Cold Start	<input type="checkbox"/> E-mail	<input type="checkbox"/> Trap
Warm Start	<input type="checkbox"/> E-mail	<input type="checkbox"/> Trap
Authentication Failure	<input type="checkbox"/> E-mail	<input type="checkbox"/> Trap
IP address Changed	<input type="checkbox"/> E-mail	
Password Changed	<input type="checkbox"/> E-mail	

Save Configuration

Figure 3.36 Configuring Alert Event by Web page

3.5 System Configuration

There are six subsystem settings for system configuration including Link State, Time, Security, Set to Default and Restart.



SE5404D

- Overview
- Network
- Serial
- Alert
- System
 - ▶ Link State
 - ▶ Log Setting
 - ▶ System log
 - ▶ COM log
 - ▶ Time
 - ▶ Security
 - ▶ Import/Export
 - ▶ Set to Default
 - ▶ Restart

Link State

To display the link mode and the status of each connection.

Link State													
Com	Link Mode	TX	RX	TX Total	RX Total	IP1	IP2	IP3	IP4	IP5	IP6	IP7	IP8
1	TCP Server	0	0	0	0								
2	TCP Server	0	0	0	0								
3	TCP Server	0	0	0	0								
4	TCP Server	0	0	0	0								

Figure 3.37 System Configuration by Web page

3.5.1 Link State information

Operation: System→Link State

Link State is display information by Link mode (TCP Server, TCP Client and UPD) and status of each connection for all serial port.

Link State													
Com	Link Mode	TX	RX	TX Total	RX Total	IP1	IP2	IP3	IP4	IP5	IP6	IP7	IP8
1	TCP Server	0	0	0	0								
2	TCP Server	0	0	0	0								
3	TCP Server	0	0	0	0								
4	TCP Server	0	0	0	0								

Figure 3.38 Link State Information by Web page

3.5.2 Log Settings

Operation: System→Log Setting

System Log Setting	
Enable Log Event to Flash	<input type="checkbox"/>
Log Level	3: (LOG_ERR) ▼
Enable Syslog Server	<input type="checkbox"/>
Syslog Server IP	0 . 0 . 0 . 0
Syslog Server Service Port	514 (1~65535, default=514)

Figure 3.39 System Log Setting WebUI

Enable Log Event to Flash: This would write log events to the local flash.

Log Level: 3 (Currently we only allow this level)

Enable Syslog Server: Enabling this option would allow you to send Syslog events to a remote Syslog server.

Syslog Server IP: Please specify the remote Syslog Serve IP.

Syslog Server Service Port: Please specify the remote Syslog Serve Port.

COM Log Settings				
<input type="checkbox"/> Log Data Contents Types <input checked="" type="radio"/> HEX <input type="radio"/> ASCII				
Com Ports	<input type="checkbox"/> Com1	<input type="checkbox"/> Com2	<input type="checkbox"/> Com3	<input type="checkbox"/> Com4
Enable Syslog Server	<input type="checkbox"/>			
Syslog Server IP	0 . 0 . 0 . 0			
Syslog Server Service Port	514 (1~65535, default=514)			

Figure 3.40 COM Log Setting WebUI

Log Data Contents: If enabled, the COM logging function will log data content. If disabled, COM logging function will only log data length to reduce system load. **Note that the local flash storage has a very limited space. If the reserved space is full new logs will replace the old logs. We strongly recommend sending COM logs to a remote Syslog server.**

Data Log Types: Hex or ASCII

COM 1~4 : Choose which port to log.

Enable Syslog Server: Enabling this option would allow you to send COM logs to a remote Syslog server. You can send COM logs to the same Syslog server used previously.

Syslog Server IP: Please specify the remote Syslog Serve IP.

Syslog Server Service Port: Please specify the remote Syslog Serve Port.

3.5.3 System Log

Operation: System→System Log

System Log					
Index	Date	Time	Startup Time	Level	Event
1/1	2000.01.01	00:06:15	00d00h00m17s	alert	: Alert: Warm Start, SysName: 0060E9-030B00, SysLocation: location

Figure 3.41 COM Log Setting WebUI

3.5.4 COM Log

Operation: System→COM Log

COM Log					
Index	Date	Time	Startup Time	COM	Event
1/5	2000.01.01	00:57:38	00d00h51m39s	1	: [COM1]T:(7)
2/5	2000.01.01	00:57:37	00d00h51m39s	1	: [COM1]T:(7)
3/5	2000.01.01	00:57:37	00d00h51m39s	info	: [COM1]T:(7)
4/5	2000.01.01	00:57:23	00d00h51m24s	info	: [COM1]T:(7) 48 65 6C 6C 6F 0D 0A
5/5	2000.01.01	00:57:22	00d00h51m24s	info	: [COM1]T:(7) 48 65 6C 6C 6F 0D 0A

Figure 3.42 COM Log Setting WebUI

You can select which COM to be displayed. The first three logs were set to log data length and the last two logs were set to log data content. COM logs can be retrieved from the device via FTP. FTP login is the same as the WebUI. They are located in /var/log/logcomxx (xx is the port number).

3.5.5 Time Settings

Operation: System→Time

One may configure “**NTP Server**” to obtain Network time automatically or Set it manually by fill in “**Set Date and Time manually**” field. You can enable and specify the Daylight Saving Time if you are located in a DST region. All the settings on the page require a restart.

Current System Time	
2006/1/1 Sun 18:49:55 <input type="button" value="Refresh"/>	

System Time Setting	
Time Zone	(GMT) Greenwich Mean Time: Dublin, Edinburgh, Lisbon, London <input type="button" value="v"/>
Time Setting	<input type="radio"/> NTP <input checked="" type="radio"/> Manual
NTP Setting	
NTP Server	<input type="text"/>
Manual Setting	
Date	Year: <input type="text" value="2006"/> / Month: <input type="text" value="Jan"/> / Day: <input type="text" value="1"/>
Time	Hour:(0~23) : <input type="text" value="18"/> Minute:(0~59) : <input type="text" value="49"/> Second:(0~59): <input type="text" value="55"/>
Daylight Saving Setting	
<input type="checkbox"/> Enable Daylight Saving Time	
Start Date	Month: <input type="text" value="Jan"/> / Week: <input type="text" value="1st"/> / Day: <input type="text" value="Sun"/> / Hour: <input type="text" value="1"/>
End Date	Month: <input type="text" value="Jan"/> / Week: <input type="text" value="1st"/> / Day: <input type="text" value="Sun"/> / Hour: <input type="text" value="1"/>
Offset	<input type="text" value="1"/> hour(s)

Figure 3.43 Time Settings by web page

3.5.6 Security Configuration

Operation: System→Security

Click on the “**Security**” link and the following screen shall appear



SE5404D

- Overview
- Network
- Serial
- Alert
- System
 - ▶ Link State
 - ▶ Log Setting
 - ▶ System log
 - ▶ COM log
 - ▶ Time
 - ▶ Security
 - ▶ Import/Export
 - ▶ Set to Default
 - ▶ Restart

Change Password

The default password is null, you can change the password by filling in the new password to New Password and Verified Password fields, be aware that password is case sensitive.

Change Password	
Old Password	<input style="width: 100%;" type="text"/>
New Password	<input style="width: 100%;" type="text"/>
Verified Password	<input style="width: 100%;" type="text"/>

Security

SE series allow one to change the access methods to protect it against intrusion. All password protect function will use same password of above 'Change Password' setting data.

Security	
Web Console	<input checked="" type="radio"/> Enable <input type="radio"/> Disable

Figure 3.44 Security Configuration by Web page.

Enter the old password on “**Old Password**” field; enter the new password on “**New Password**” and the “**Verified Password**” fields, and then click on “**Save Configuration**” to update the password.

Change Password	
Old Password	<input type="text"/>
New Password	<input type="text"/>
Verified Password	<input type="text"/>

Figure 3.45 Change password by Web page

* **Note:** One may press the reset key on product to reset password to the default value

SE5404D serials allow one to change the access methods to protect it against intrusion.

Security	
Web Console	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
Telnet Console	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
Reset Button Protect	<input checked="" type="radio"/> No <input type="radio"/> Yes

Figure 3.46 Security Configuration by Web page.

3.5.7 Import/Export

Operation: System→Import/Export

Please select a setting file to be imported or a file path for the settings to be exported on the WebUI.



Figure 3.47 Import/Export WebUI

3.5.8 Restore Factory Default

Operation: System→ Set to Default

One may click on “**set to default and restart**” button to restore Serial Server’s settings to Factory Default Settings.

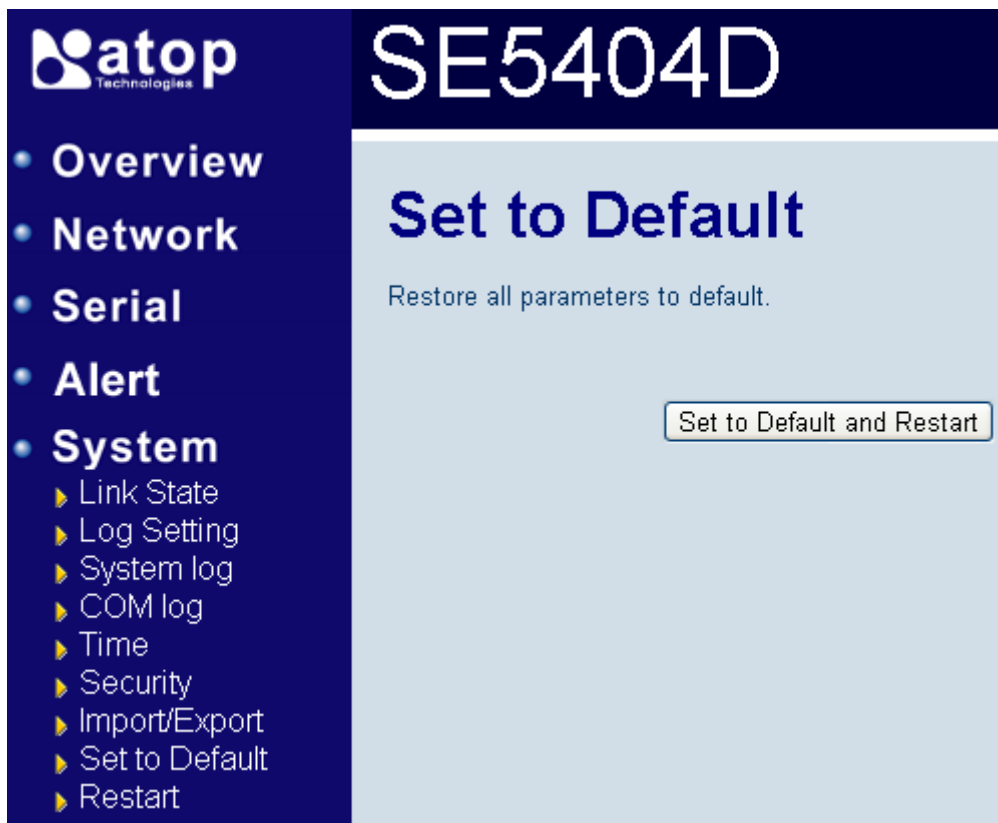


Figure 3.48 Restore Factory Default by Web page

3.5.9 Restart System

Operation: System→ Restart

One may press “**Restart**” button to restart the SE5404D series. The web page will be refreshing after it reboot.



Figure 3.49 Restart System by Web page

4. Using Virtual COM

Virtual COM driver mode for windows converts COM data to LAN data to control the COM port on a SE5404D via the LAN. By creating virtual COM ports on the PC, the Virtual COM driver redirects the communications from the virtual COM ports to an IP address and port number on a SE5404D that connects the serial line device to the network. The following figure is Virtual COM connection diagram. (ref Figure 4.1)

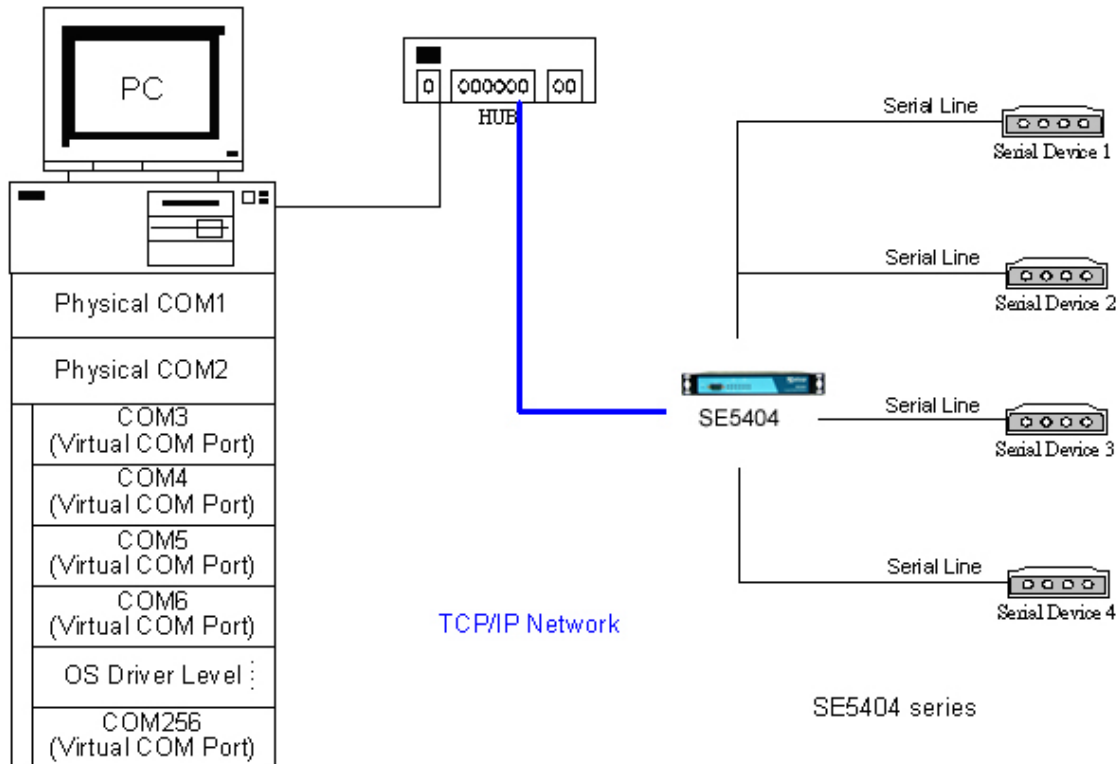


Figure 4.1 Virtual Com connection diagram

4.1 Setup of a virtual COM driver

4.1.1 Pre-installation requirements

Please check the operation system on your PC complied with the following requirements:

- Processor: Intel-compatible, Pentium class
- Operation system: Windows Server 2003, Windows XP, Windows 2000, Windows NT 4.0 SP5 or later, Windows Me, Windows 98, Windows 95, Microsoft NT/2000 Terminal Server, Citrix MetaFrame

4.1.2 Cautions on Use

The Virtual COM driver supports firmware AP v3.0 and later of SE5404D Serial Device Server-Ethernet Servers.

4.1.3 Limitation

The Virtual COM driver provides user to select up to 256 **COM ports** as Virtual COM ports in a Serial Manager Utility PC. User can select them from a list of COM ports, which is from COM1 up to COM256.

4.1.4 Installation

Make sure you have turned off all anti-virus software before beginning the installation. Run the Virtual COM setup file included in the CD to install Virtual COM driver for your operating system.

In the end of the installation, please select one or two COM ports to become the Virtual COM ports.

4.1.5 Uninstalling


1. From Windows Start menu select Setting, Control Panel, Add/Remove Programs.
2. Select **Serial IP** in the list of installed software.
3. Click the **Add/Remove** button to remove the program, or From Windows Start menu select Programs, Serial IP for ATOP, **Uninstall Serial IP** to remove the program.

4.2 Virtual COM communication

4.2.1 Enable Virtual COM on SE5404D

From web browser access to SE5404D by typing its IP address,

- ➔ click on "**COM1**" link to access COM1 page,
- ➔ on the top half of the page click on "**TCP Server**"
- ➔ C**Virtual COM** to Enable COM driversenable **Virtual COM** by putting a check in front of the "Enable" button, then t
- ➔ Enter in the local port number in the "**Local Port**" field as indicated in the following figure: (ref Figure 4.2)

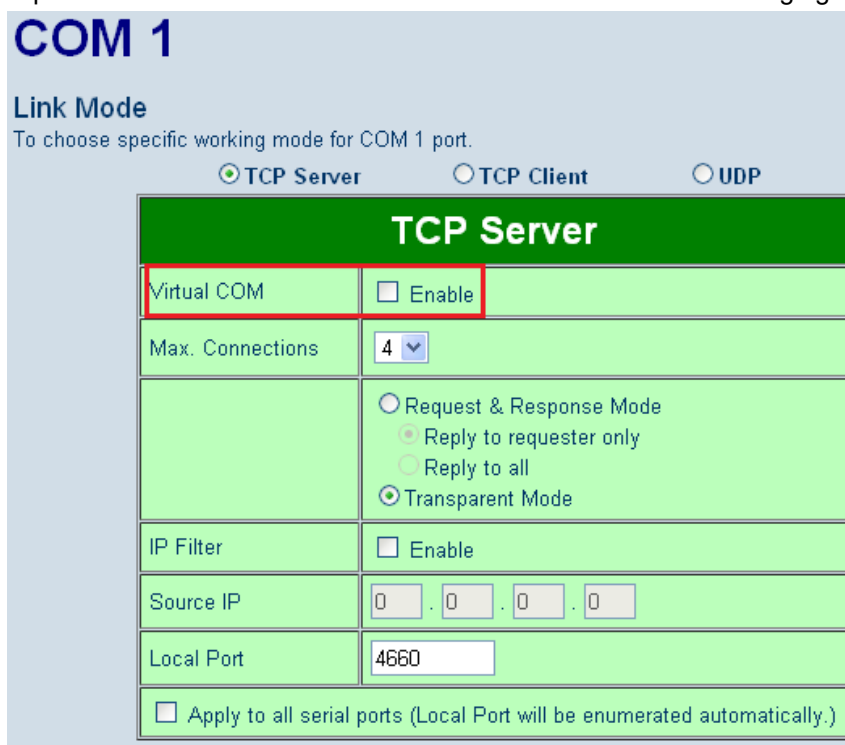

COM 1

Link Mode
To choose specific working mode for COM 1 port.

☒ TCP Server
 ☐ TCP Client
 ☐ UDP

TCP Server	
Virtual COM	<input checked="" type="checkbox"/> Enable
Max. Connections	4
	<input type="radio"/> Request & Response Mode <input checked="" type="radio"/> Reply to requester only <input type="radio"/> Reply to all <input checked="" type="radio"/> Transparent Mode
IP Filter	<input type="checkbox"/> Enable
Source IP	0 . 0 . 0 . 0
Local Port	4660
<input type="checkbox"/> Apply to all serial ports (Local Port will be enumerated automatically.)	

Figure 4.2 Enable Virtual Com Or you can

4.2.2 Run Serial/IP on PC

In the Window Start Menu, go to “Programs”, select “Serial/IP” and select “Control Panel”. When “Select Port” windows pop-up, please select the serial port you want to configure. Then the configuration window will appear. (ref Figure 4.4)

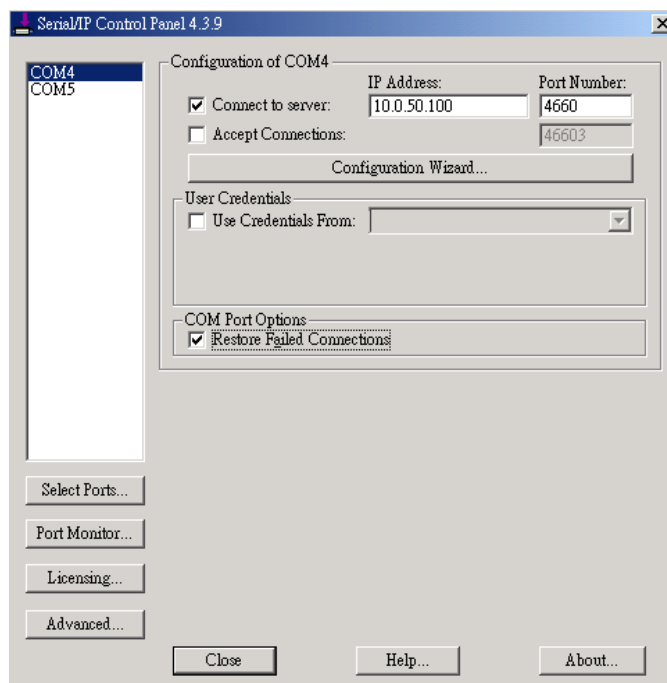


Figure 4.4 Serial/IP configuration

At the right side of Figure 4.4 is a sample Virtual COM Control Panel window. At the left side is the list of the COM ports that you have selected (in the **Select Ports** window) for use by the Virtual COM Redirector. If you wish to change which ports appear in this list, use the **Select Ports** button.

Each COM port has its own settings. When you click on a COM port, the Control Panel display changes to reflect the settings for that COM port.

NOTE: When you change settings for a COM port, the changes are effective immediately. There is no separate confirmation dialog to confirm or cancel your changes.

4.3 Configuring Virtual COM Ports

You configure each Serial/IP COM port as follows: (ref Figure 30)

1. Select a COM port in the list.
2. For **IP Address of Server**, enter a numeric IP address for the serial server.
3. For **Port Number**, enter the TCP port number that the serial server uses to provide its serial ports to the network.
4. For **Server Credentials**, the default is **No Login Required**. If your serial server does require a login by the Virtual COM Redirector, the Virtual COM Redirector needs to provide a username and/or password every time an application tries to use the serial server.
5. Click the **Configuration Wizard** button and then click the **Start** button that appears in the wizard window. This important step verifies that the Virtual COM Redirector can communicate with the serial server using

the settings you have provided. If the **Log** display does not show errors, click the **Use Settings** button in the wizard, which makes the recommended settings effective and returns you to the Control Panel to continue with the following steps.(ref Figure 4.5)

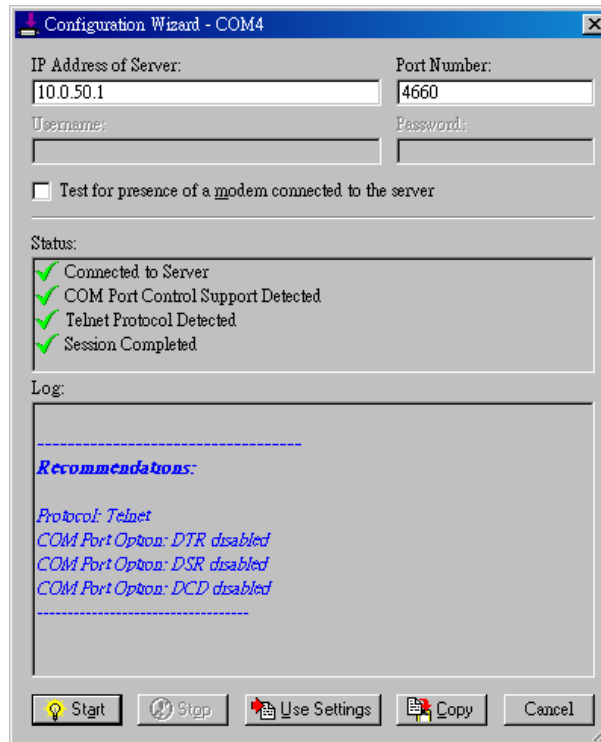


Figure 4.5 Configuration Wizard

6. For **Connection Protocol**, the setting must match the TCP/IP protocol that the serial server supports. The Configuration Wizard is usually able to determine the correct setting.
7. For **COM Port Options**, the settings must match the COM port behavior expected by the PC application that will use this COM port. The Configuration Wizard will recommend a combination of settings.

5. SNMP Setup

5.1 SNMP Network Management Platform

SE5404D is an SNMP device that allows many popular SNMP Network management platforms such as HP OpenView and SunNet Manager to conduct on the Serial Manager Utility.

Depending on the network management tools you are using, device (SE5404D) information can be collected from running the management tools including **IP address, DNS name, system descriptions and NIC** information etc.


5.2 Using NetworkView As An Example

The NetworkView is a compact network management tool from NetworkView Software, Inc. (www.networkview.com). It discovers all TCP/IP nodes in a network using DNS, SNMP and ports information and documents with printed maps and reports for future use. You may visit their web sites and get a free download.

To use NetworkView, you will need to download and install the tool on ones PC (**Windows NT and Windows 9x only**). Please refer to the installation instructions that come with the tool.

After you have done the NetworkView installation, start NetworkView.

1. Click on the  button to open a new file. The following screen appears, in the **Addresses field**, Enter in the IP address range to search(Figure 5.1).

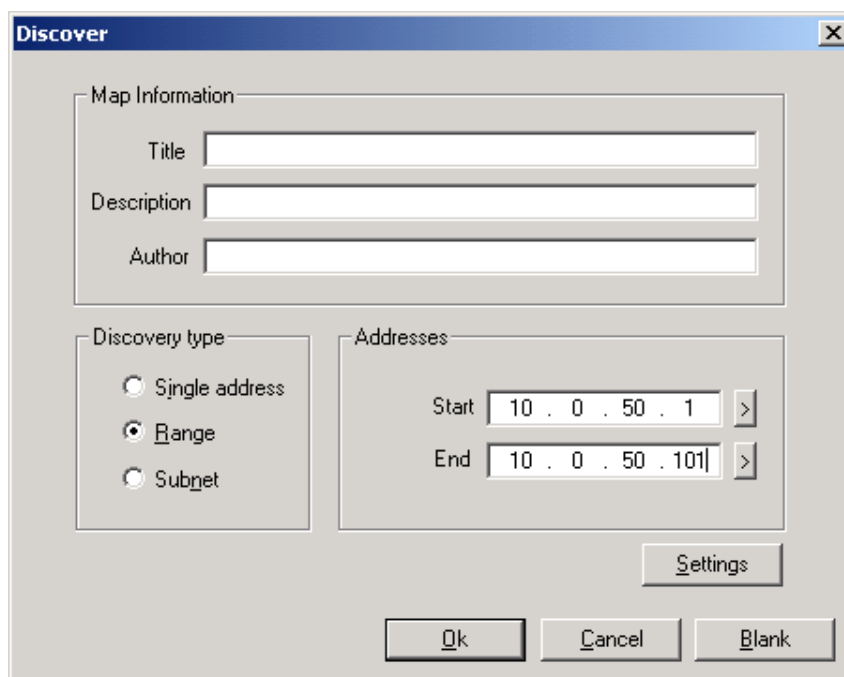

The screenshot shows the 'Discover' dialog box in NetworkView. It has a title bar with 'Discover' and a close button. The dialog is divided into several sections. The 'Map Information' section contains three text input fields: 'Title', 'Description', and 'Author'. Below this is the 'Discovery type' section with three radio buttons: 'Single address', 'Range' (which is selected), and 'Subnet'. To the right of the 'Discovery type' section is the 'Addresses' section, which contains two text input fields: 'Start' and 'End'. The 'Start' field contains '10 . 0 . 50 . 1' and the 'End' field contains '10 . 0 . 50 . 101'. Both fields have a right-pointing arrow button next to them. At the bottom right of the dialog is a 'Settings' button. At the very bottom are three buttons: 'Ok', 'Cancel', and 'Blank'.

Figure 5.1 NetworkView-IP discovery parameters setup

Click on “OK” and the following dialog box appears. It displays the searching progress(Figure 5.2).

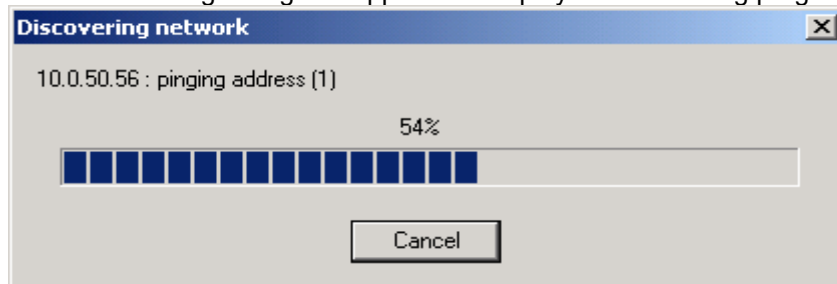


Figure 5.2 Discovering network

- When the search is completed, NetworkView will display the devices found in the main window, as shown in the following diagram(Figure 5.3).

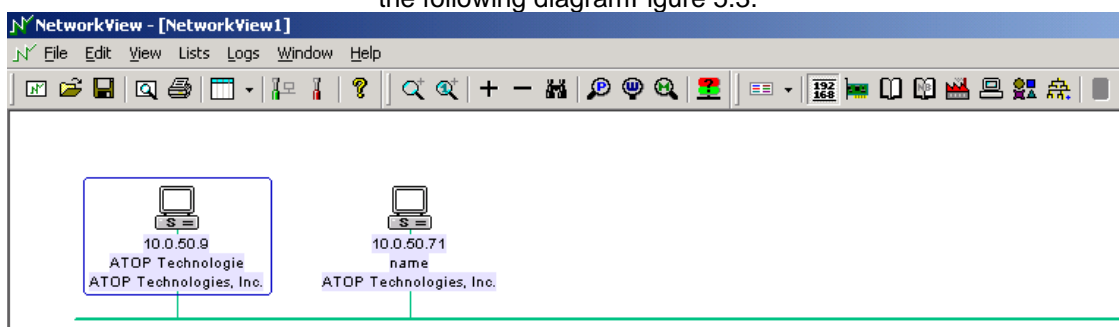


Figure 5.3 NetworkView- main window

- Double-click on the device icon to display information about the device, including IP Address, Company, SysLocation (Max 15 characters), SysName (Max 9 characters) and types etc(Figure 5.4).

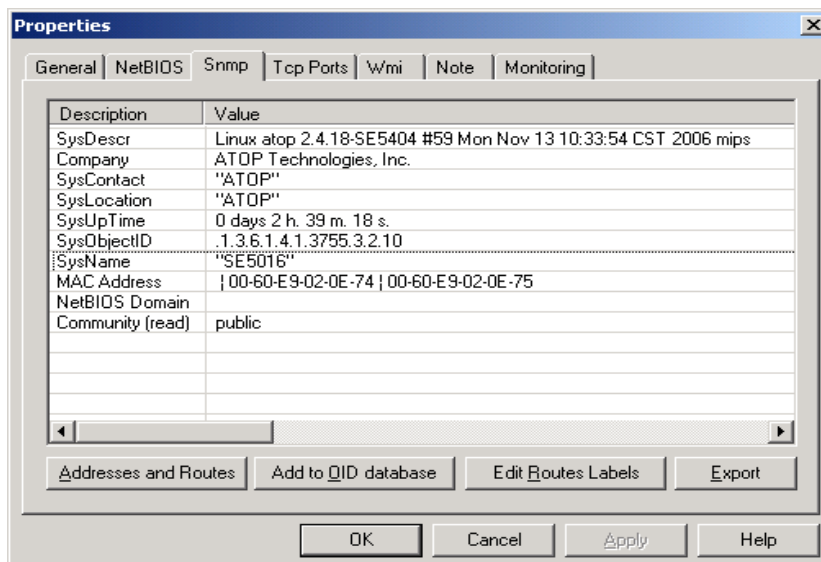


Figure 5.4 NetworkView-Node details

NOTE:

- The NetworkView tool is limited to information extracting and viewing only.
- To modify the configurations please use the web server, Telnet or Serial Manager configuration utilities.

6. Start Writing Ones Own Applications

Before you start writing ones host applications or programs to interact with SE5404D, please make sure one have done the following.

6.1 Preparing The System

1. Properly connect SE5404D hardware including power, Ethernet and serial cable
2. Properly configure the parameters of SE5404D including connection type, IP address, gateway IP address, and network mask accordingly (see chapter 3 **Hardware Installation** section).
3. Configure SE5404D as TCP Server using default TCP port number 4660.
4. The host (PC) application program must be configured as a TCP client and connects to SE5404D with designated TCP port number 4660 for COM1.
5. Make sure SE5404D is running by checking the SE5404D running status through **Serial Manager** configuration utility.

6.2 Running The Sample Program

Sample programs written in VB and VC++ included in package are provided for your reference, source codes are also included. Test program can be found in the product CD or diskette under the directory of **lsample\vb_ap** and **lsample\vc_ap** respectively.

There are two test programs, TCPTEST written in Visual Basic and TCPTEST2 written in Visual C++.

6.2.1 TCPTEST in Visual Basic

This sample program (Figure 6.1) is written in Visual Basic 5.0 with Winsock Controls. It shows you how to send and receive data between host (PC) and SE5404D via Ethernet in two socket ports.

Run Visual Basic and open sample program tcptest.vbp, after the program is started successfully, you can start testing functions. For more information, please press **Help** in the program to get detail explanation.

NOTE: Please be sure the Microsoft visual studio family or its equivalent software is installed on the computer. Otherwise the sample program will not run.

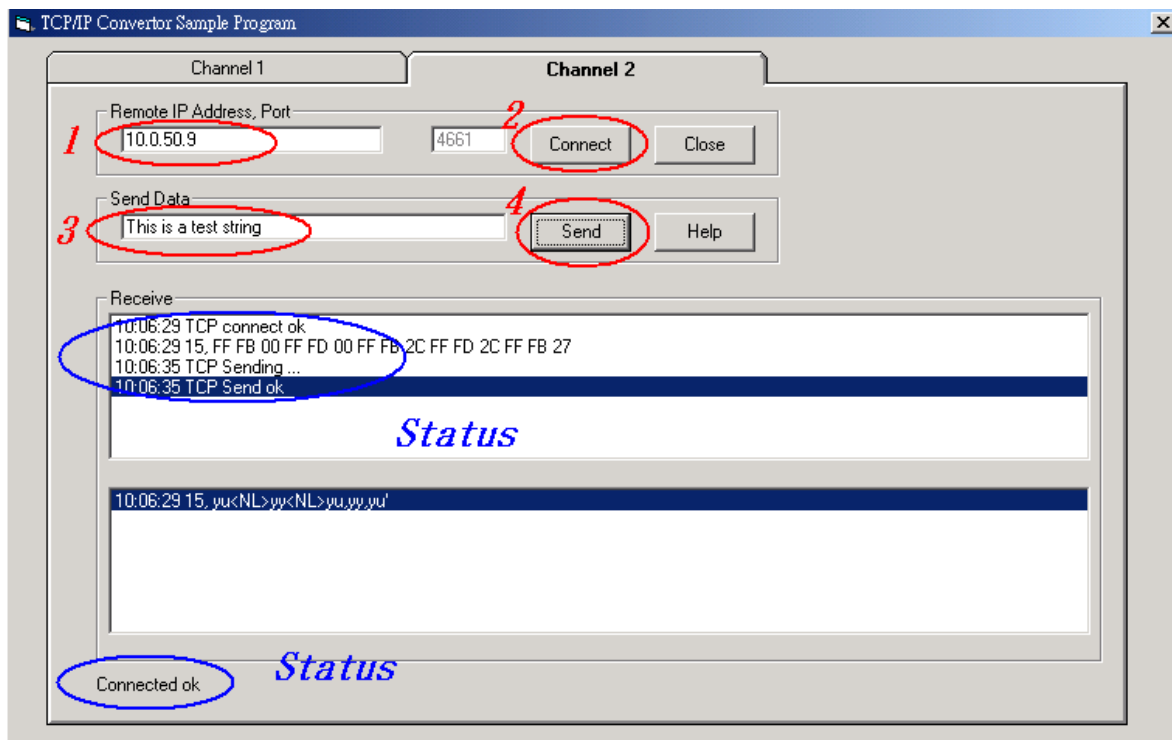


Figure 6.1 TCP test sample program in Visual B

6.2.2 TCPTTEST2 in Visual C

Enter in the following command in the command line prompt(Figure 6.2):

TCPTTEST2 IP_Address Port_Number

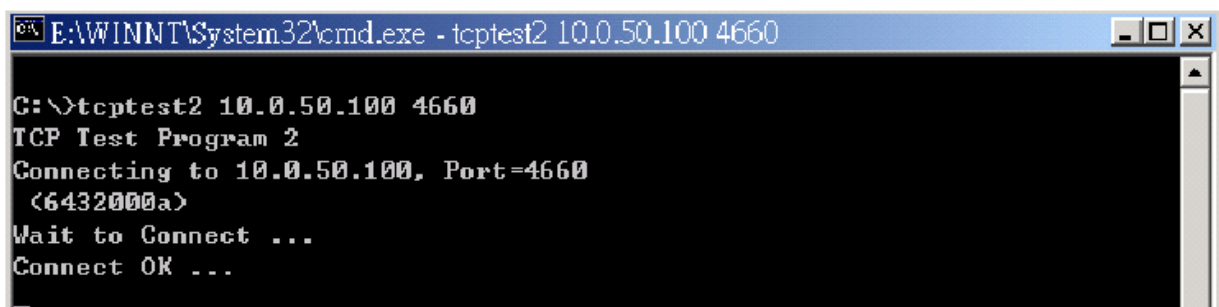


Figure 6.2 TCP test sample program in Visual C

The command **tcptest2 10.0.50.100 4660** brings you to connect to a TCP server of IP address **10.0.50.100** and port number **4660**, the received data is displayed on the screen and the data typed in is sent to the TCP server of the designated port number. You can also send binary data in hex format with a leading character "****". For example, "**\00**" and "**\FF**" represent ASCII code 0 and 255 respectively.

You can also use modem to connect to the serial server. Command "**AT\Od**" sends standard AT command to the modem which in return responds with "**OK\OD\OA**" message to the host application.

Always use '=' then **Enter** key to exit the program.


7. Diagnostics

There are several ways you can check on the status and availability of SE5404D.

7.1 Use Standard TCP/IP Utility *ping* Command

From Windows **Start** menu, select **Run** and Enter in “**ping <TCP Server IP address>**”(Figure 7.1).

If the connection is established, the Reply messages are displayed, otherwise it will indicate Request timed out.

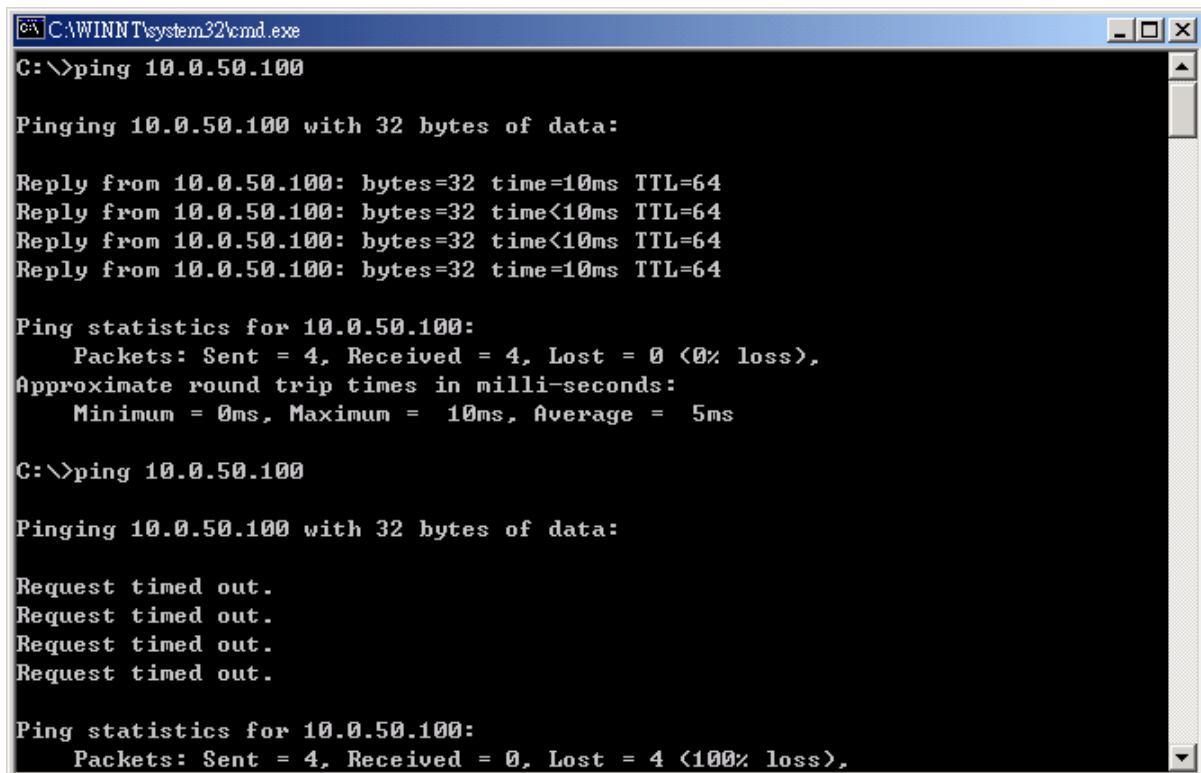

```
C:\WINNT\system32\cmd.exe
C:\>ping 10.0.50.100

Pinging 10.0.50.100 with 32 bytes of data:

Reply from 10.0.50.100: bytes=32 time=10ms TTL=64
Reply from 10.0.50.100: bytes=32 time<10ms TTL=64
Reply from 10.0.50.100: bytes=32 time<10ms TTL=64
Reply from 10.0.50.100: bytes=32 time=10ms TTL=64

Ping statistics for 10.0.50.100:
    Packets: Sent = 4, Received = 4, Lost = 0 (0% loss),
    Approximate round trip times in milli-seconds:
        Minimum = 0ms, Maximum = 10ms, Average = 5ms

C:\>ping 10.0.50.100

Pinging 10.0.50.100 with 32 bytes of data:

Request timed out.
Request timed out.
Request timed out.
Request timed out.

Ping statistics for 10.0.50.100:
    Packets: Sent = 4, Received = 0, Lost = 4 (100% loss),
```

Figure 7.1 Standard TCP/IP utility ping command

7.2 Use Serial Manager Configuration Utility Program

Use Serial Manager Utility configuration program that comes with the product CD or diskette to check on the status of SE5404D. The status and version can be read from the tool.

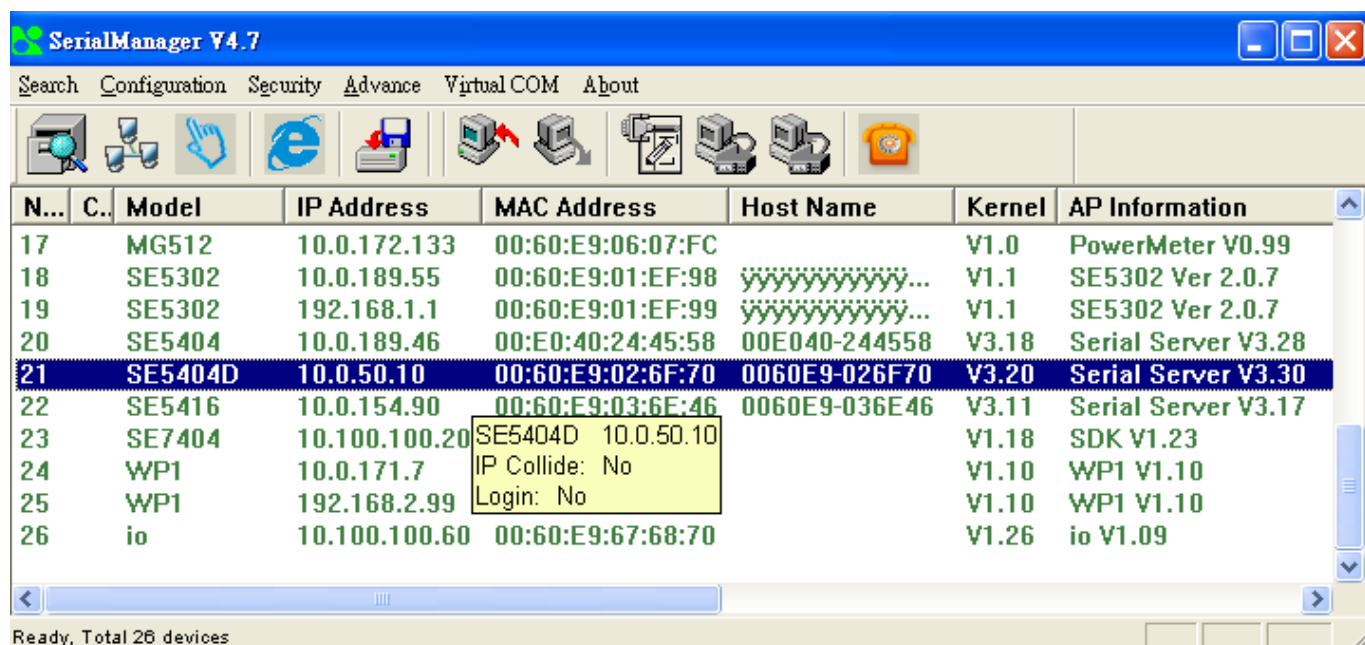


Figure Serial Manager configuration utility

7.3 Use TCPTTEST.EXE or TCPTTEST2.EXE Sample Program

Use sample programs TCPTTEST.EXE and TCPTTEST2.EXE that comes with the product CD or diskette to check on the status of SE5404D. Please refer to chapter 6.2 to run the sample programs.

Appendix A: Specifications


Specifications		
Ethernet		
	Compliance	IEEE802.3
	Network Interface	10/100 Mbps Fast Ethernet
	Port	2
	Transmission Rate	10/100 Mbps Auto-detection
	Connector	RJ-45
	Auto MDI/MDI-X	Yes
Link Mode		
	TCP Server	Up to 8 connections or Virtual COM / Reverse Telnet modes
	TCP Client	Up to 2 destination or Virtual COM mode
	UDP	Up to 8 Ranges of IPs
Serial		
	Interface	RS-232/422/485 (SE5404D) RS-422/485 (SE5404D-TB/SE5404D-Sis) software selectable
	Ports	4 Ports
	Baud Rate	300bps~921.6kbps(SE5404D/SE5404D-TB) 300bps~230kbps (SE5404D-Sis)
	Parity	None, Odd, Even, Mark, Space
	Data bits	5, 6, 7, 8
	Stop Bit	1,2
	Flow Control	None, Software: Xon/Xoff, Hardware: RTS/CTS
	Protection	15KV ESD 2KV Magnetic Isolation (SE5404D-Sis only)
	Connector	9-Pin lockable D-Sub 5-Pin 5.08mm lockable Terminal Block
Power		
	Input	9-48DCV, 0.65A max
	consumption	Max. 5.85W
	Connector	7-pin 5.08mm connector for redundant power input
LED		

	Indicator	COM, LAN, RUN
Approval		
	EMC	CE Class A, FCC Class A
	Protection	IP50 Rated IEC/EN60529
	Vibration	IEC60068-2-64
	Shock	IEC60068-2-27
	Free-fall	IEC60068-2-32(ISTA Test Procedure 2A)
Environment		
	Operating	-40°C~85°C(-40°F ~176°F)
	Storage	-40°C~85°C(-40°F ~185°F)
	Humidity	5%~95% Non-condensing
Dimension		
	(WxHxD)	53.4mm x 145.7mm x 119.9mm
Physical		
	Weight	900g
	Installation	DIN-Rail mounting or Wall mount (optional)
	Warranty	5 years
MTBF		
	Preceding	TBD
Software		
	Configuration	Web Page / Telnet / Serial console / Windows Utility
	Virtual COM	Windows & Linux port redirection software
	Support Protocol	ICMP, TCP/IP, UDP, DHCP Client, NTP, DNS, SNMP, HTTP, Telnet, SMTP


A.3 Panel Layout and Connector Pin Assignments

A.3.1. Panel Layout


A.3.1.1 SE5404D Front Panel

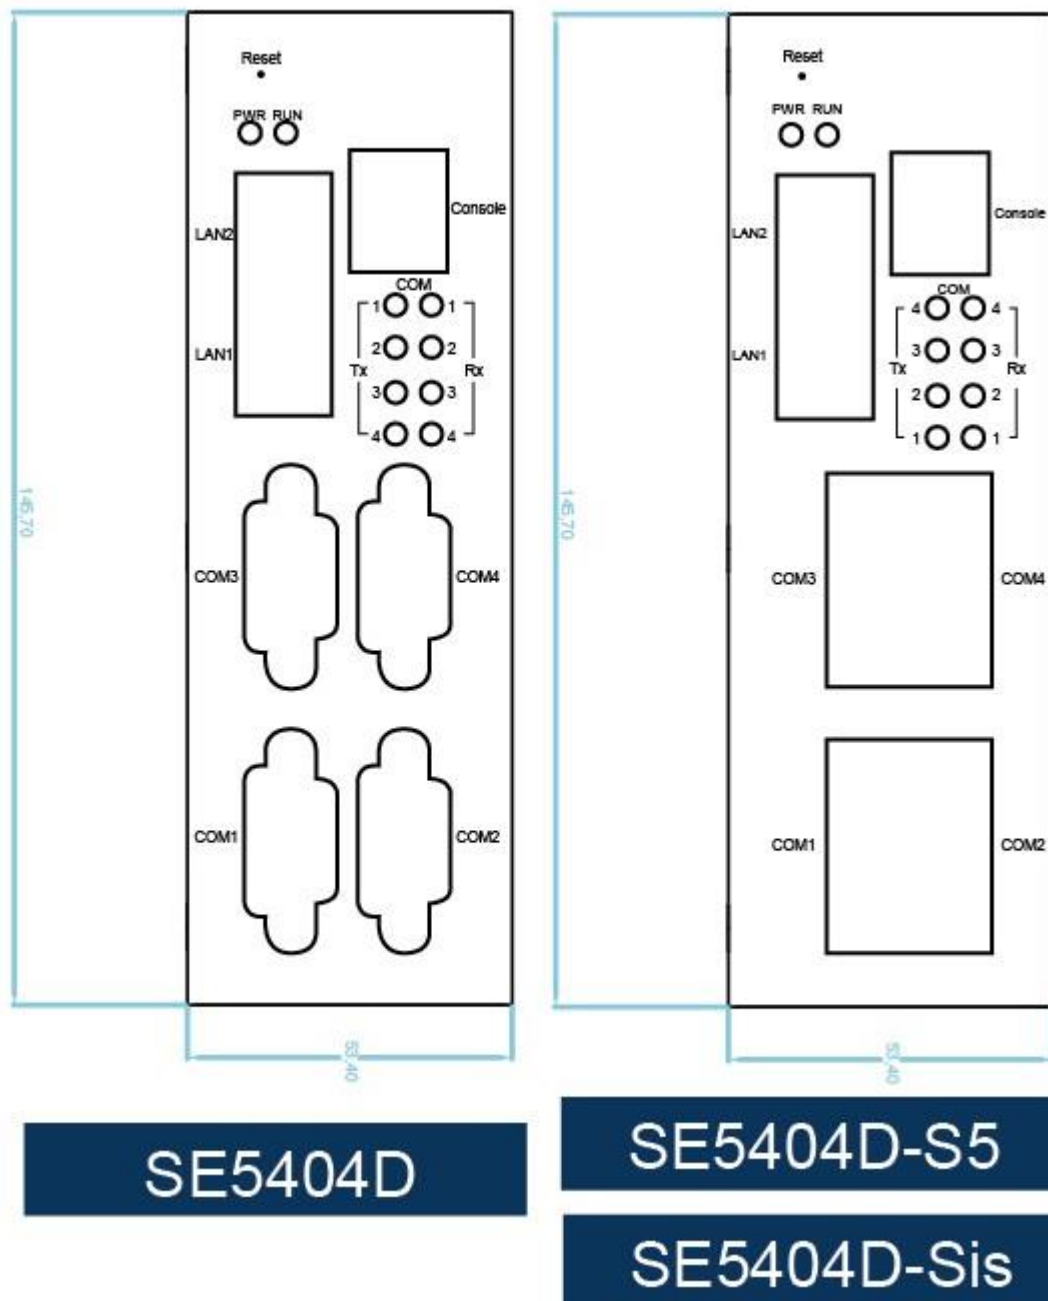

A.3.1.2 SE5404D Side View

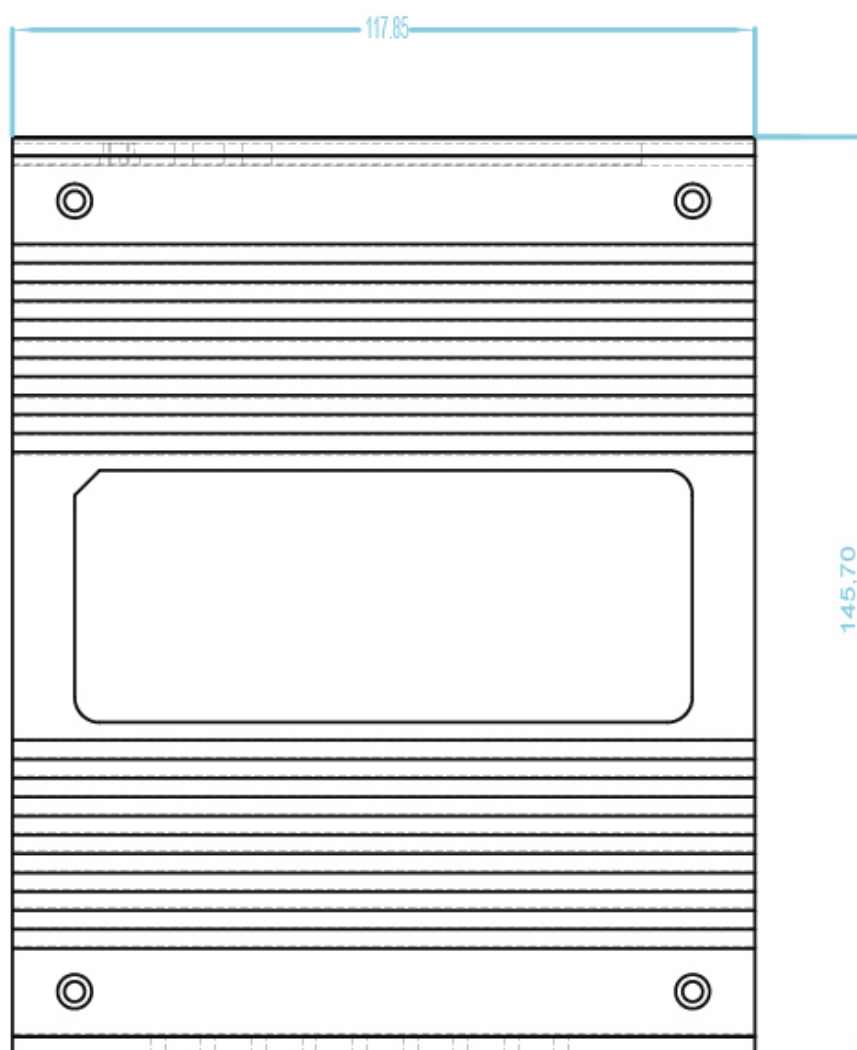


A.3.1.3 SE5404D Top View

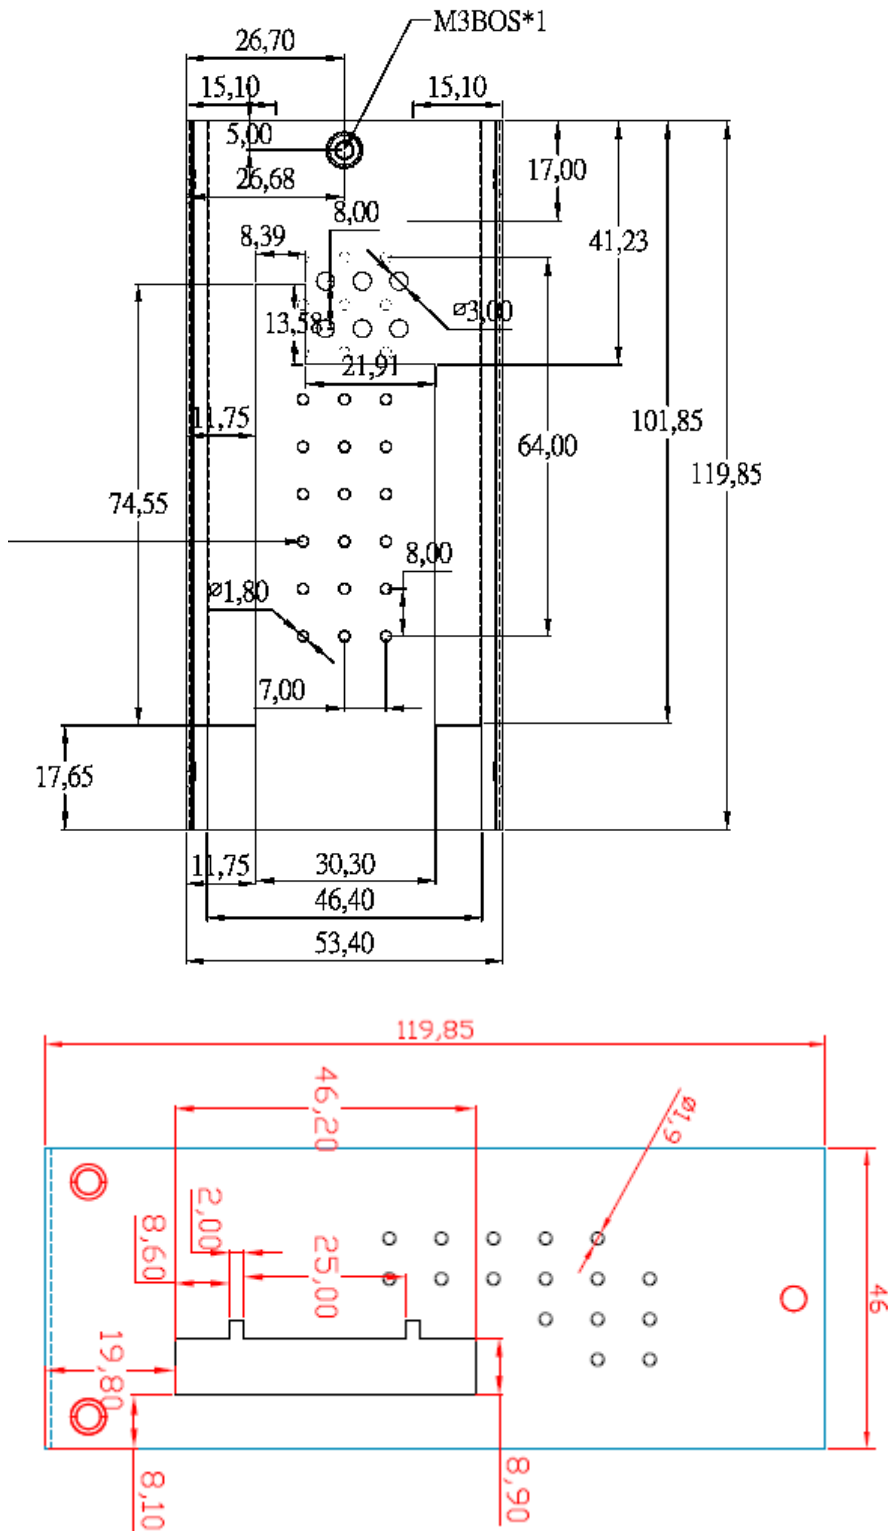


A.3.1.4 SE5404D Rear and Mounting View


Rear View

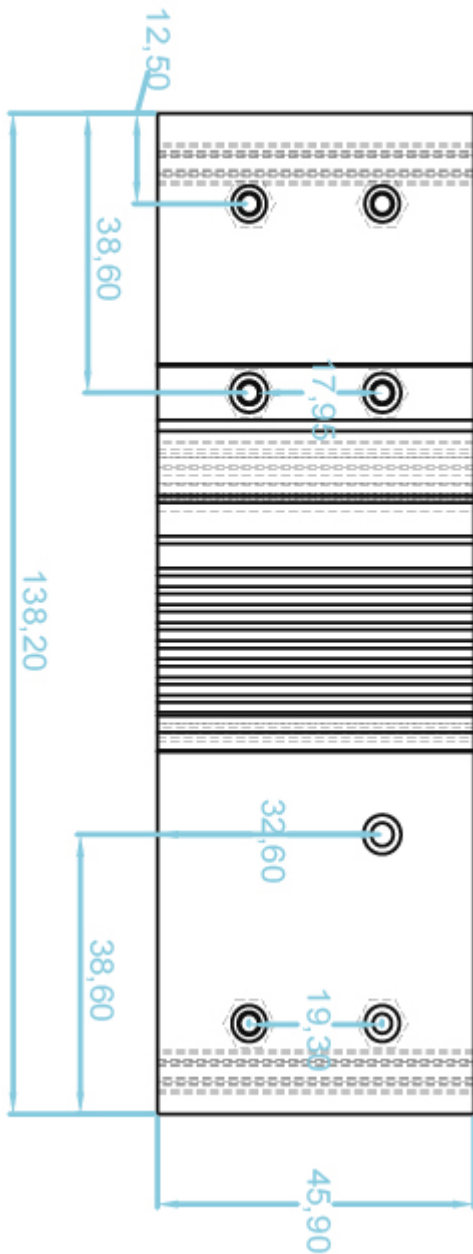

Panel Mounting Kit

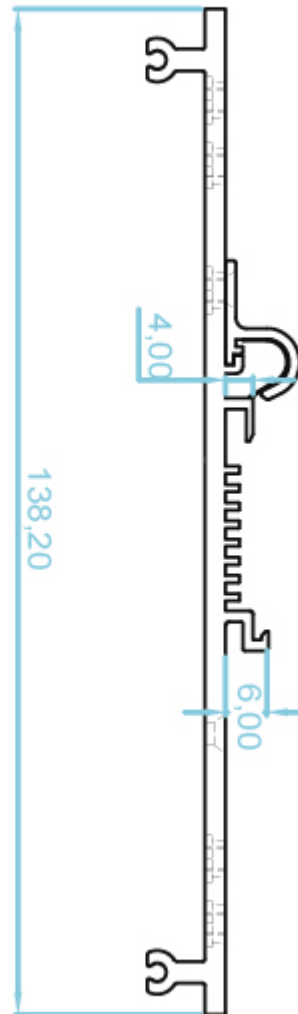


A.3.2.1 DB9 Pin Assignments

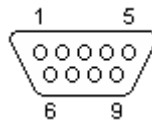

The pin assignments of DB9 connector on SE5404D is shown in the following table:

Pin#	RS-232 Full Duplex	RS-422/4-Wire RS-485 Full Duplex	2-Wire RS-485 Half Duplex
1	DCD	N/A	N/A
2	RXD	TXD+	N/A (reserved)
3	TXD	RXD+	DATA+
4	DTR	N/A	N/A
5	SG (Signal Ground)	SG (Signal Ground)	SG (Signal Ground)
6	DSR	N/A	N/A
7	RTS	RXD-	DATA-
8	CTS	TXD-	N/A (reserved)
9	RI	N/A	N/A

A.3.2.2 Terminal Block Pin Assignments

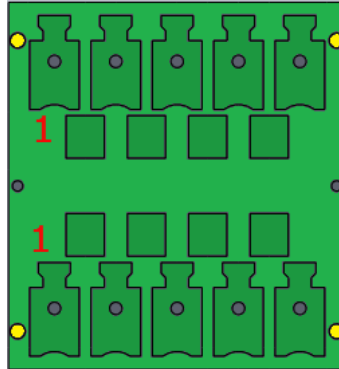


The pin assignments of Terminal Block connector on SE5404D-TB / SE5404D-Sis is shown in the following table:

Pin#	RS-422/4-Wire RS-485 Full Duplex for SE5404D-TB / SE5404D-Sis	2-Wire RS-485 Half Duplex For SE5404D-TB / SE5404D-Sis
1	T+	NC
2	T-	NC
3	R+	Data+
4	R-	Data-
5	SG (Signal Ground)	SG (Signal Ground)

A.3.3.1 Ethernet Port (RJ-45)

- Category 5 UTP cable, 8 core wires.

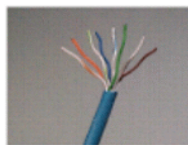

- RJ45 Connector.




- RJ45 Pin Assignment

Pin Assignment	568A Definition	568B Definition
Pin1	Green-White	Orange-White
Pin2	Green	Orange
Pin3	Orange-White	Green-White

Pin4	Blue	Blue
Pin5	Blue-White	Blue-White
Pin6	Orange	Green
Pin7	Brown-White	Brown-White
Pin8	Brown	Brown

You can choose either 568A or 568B definition. If you want to make a crossover cable, you should use 568A and 568B definition respectively in each terminal of a UTP cable.

 A.3.4.1 Console Port (RJ-45)

RJ45		Cross-over Female DB9		
				
RTS	Pin 1	↔	Pin 8	CTS
DTR	Pin 2	↔	Pin 6	DSR
TXD	Pin 3	↔	Pin 2	RXD
SG	Pin 4	↔	Pin 5	GND
SG	Pin 5	↔		
RXD	Pin 6	↔	Pin 3	TXD
DSR	Pin 7	↔	Pin 4	DTR
CTS	Pin 8	↔	Pin 7	RTS

A.4 Buzzer/LED Message

A.4.1 Buzzer

“ ^ “: Beep twice

“ = “: Beep off

Message	Description
^==^=====^^^ (5sec.)	Startup OK and AP firmware is enabled

Table 1. Buzzer Message

Appendix B: Upgrade System Firmware

After the new version of firmware is released, customers can download from www.Atop.com.tw. After you download the firmware, please follow these instructions listed below.

B.1 Upgrade Procedure


Please follow Appendix C if you want to use **Serial Manager** to upgrade firmware. Follow the upgrading procedures below to upgrade to the latest firmware using a batch file:

- Make sure the PC and the SE5404D series on the same network. Use command **ping** or **Serial Manager** Utility program to verify their availability.
- Edit "dll.bat " to fit the system requirements, Be sure to save ones modification
- Run linux_dl ,the following screen shall appear .

For example : **linux_dl_v2 zImage.bin 10.0.50.100**

- **Note :** "linux_dl_v2" is the upgrade executable and **zImage.bin** is the firmware file name;
xxx.xxx.xxx.xxx is the IP address of SE5404D series

SE5404D will automatically restart each time the firmware is successfully download completed. When you get a new software version, please follow the procedure below to upgrade your SE5404D.

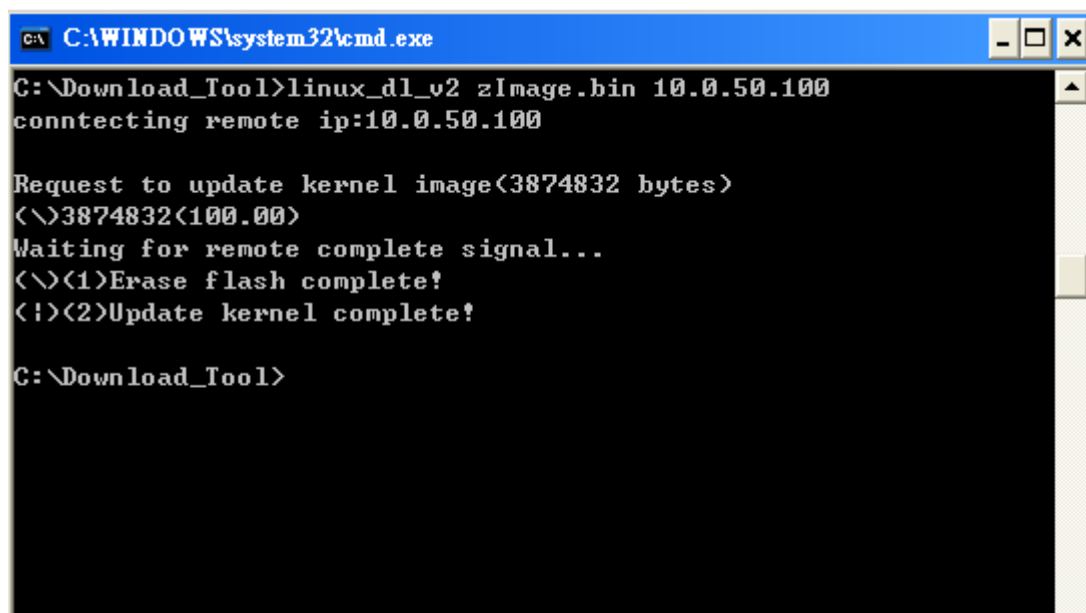

```
C:\WINDOWS\system32\cmd.exe
C:\Download_Tool>linux_dl_v2 zImage.bin 10.0.50.100
connecting remote ip:10.0.50.100

Request to update kernel image(3874832 bytes)
<\>3874832<100.00>
Waiting for remote complete signal...
<\><1>Erase flash complete!
<!><2>Update kernel complete!

C:\Download_Tool>
```

B.2 Critical Issues of Upgrading

If the upgrade is successful, SE5404D shall program the flash memory and the buzzer will beep 1 time before restarting. It takes around 30 seconds to complete the programming process. If an error occurs during the programming process, SE5404D will clear the corresponding memory and the system remains the same before the process.

B.3 Error Messages

Firmware upgrade may not be successful if errors occur during the process.

Error Cause	Message	Comments
Illegal Hex file format	Hex File Text Error	
	Hex File Check-Sum Error	
	Hex File Format Error	
	Hex File End of Record Error	
SE5404D handshaking problem	SE5404D ACK Start Address Error	
	SE5404D ACK Length Error	
	SE5404D Response Command Error	
Configuration file	Remote IP not found	
	Open configuration file failure	


Appendix C: Using Serial Manager Utility

C.1. Serial Manager utility Introduction

Serial Manager utility, developed by ATOP, is a special tool for device management and configuration. It can realize the daily management on various ATOP network devices for address search, device positioning, parameter configuring, and firmware downloading. Note that EW5302 is used to demonstrate the functionality of Serial Manager instead of SE5404D.

C.2. Interface

The operating interface of the **Serial Manager** utility is shown below:

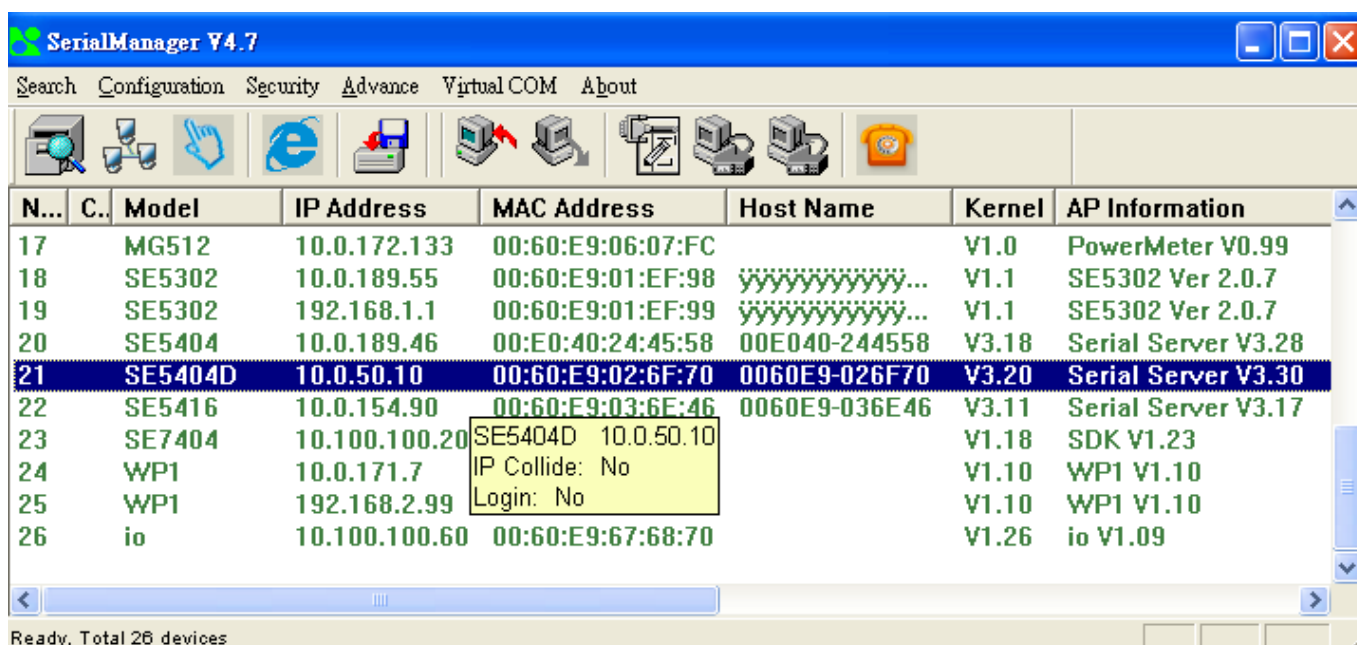


Caution Field	Description
!	IP conflict. There are two devices with the same IP address in the network.
@	The device is using DHCP.
<	The device is being located.
+	You have logged into the device.
?	MAC conflict. There are two devices with the same MAC address in the network.

C.3. Functions


C.3.1. Device Search

This function is applied to search devices in the network. There are four methods to search devices, Search by Broadcast, Search by IP addresses, Search by MAC addresses and Rescanning devices by using the

current search method. To select the search methods, users click the “Search” on the main menu which is shown below.

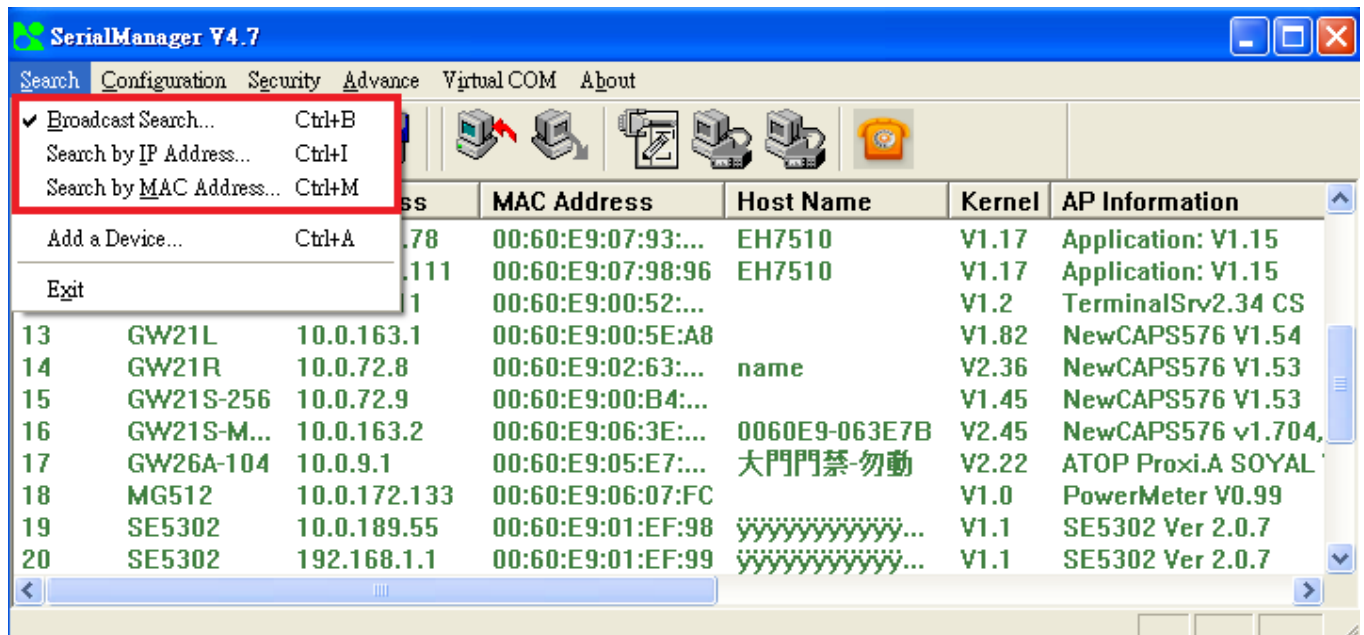


Alternatively, users can select by clicking the Rescan button on the toolbar as below.

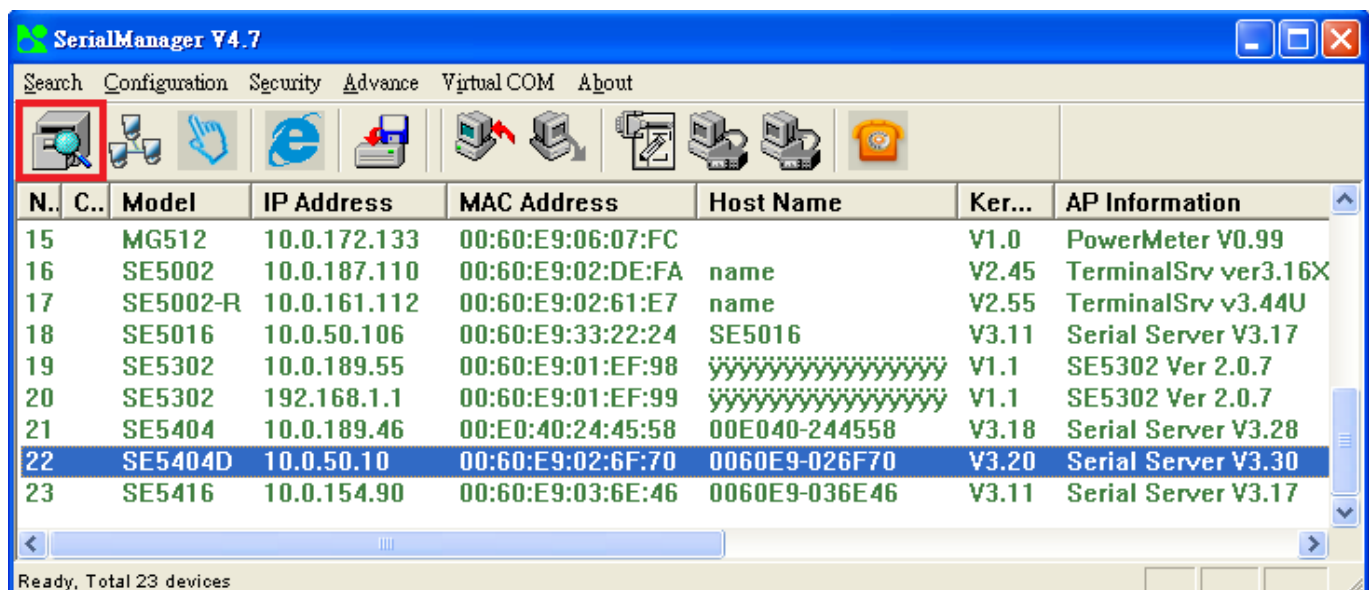

Broadcast Search

Once “Broadcast Search” is selected, a box will pop up as below. The user may type in or select different broadcast address based on the requirement.

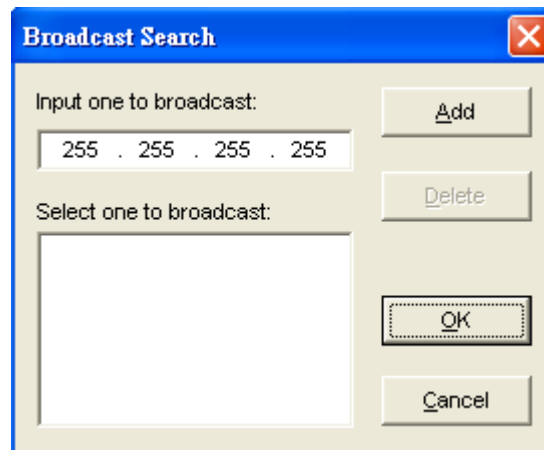

Broadcast Search

Input one to broadcast:

255 . 255 . 255 . 255

Select one to broadcast:

OK


Cancel

Add

Delete

Search by IP address

Once "Search by IP Address" is selected, an interface will pop up as below. Here user may have two options: Select an IP address to search or Search device in the range of IP address.

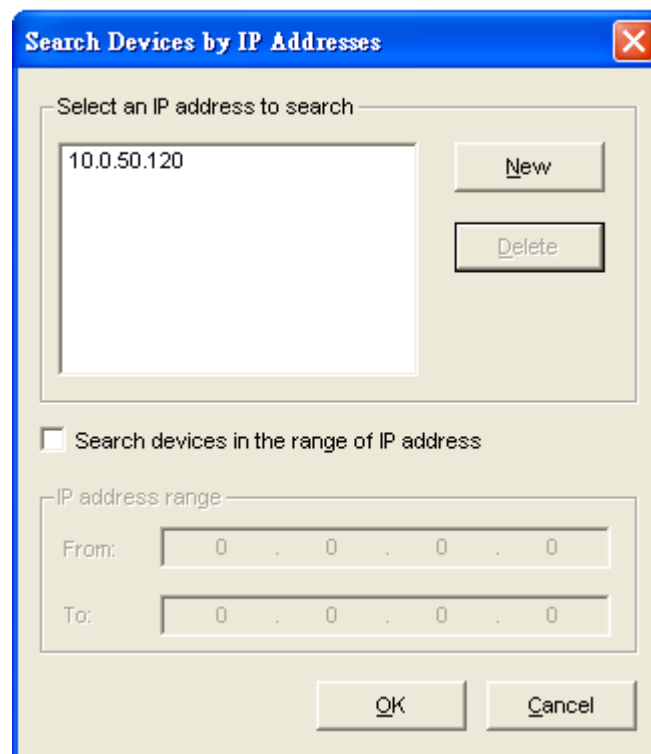

Search Devices by IP Addresses

Select an IP address to search

10.0.50.120

New

Delete

☐ Search devices in the range of IP address

IP address range

From: 0 . 0 . 0 . 0


To: 0 . 0 . 0 . 0

OK

Cancel

Search by MAC Address

If "Search by MAC Address" is selected, another box will pop up as below. Here the user may search in two ways: "Search a MAC address to search" or "Search devices in the range of MAC address"


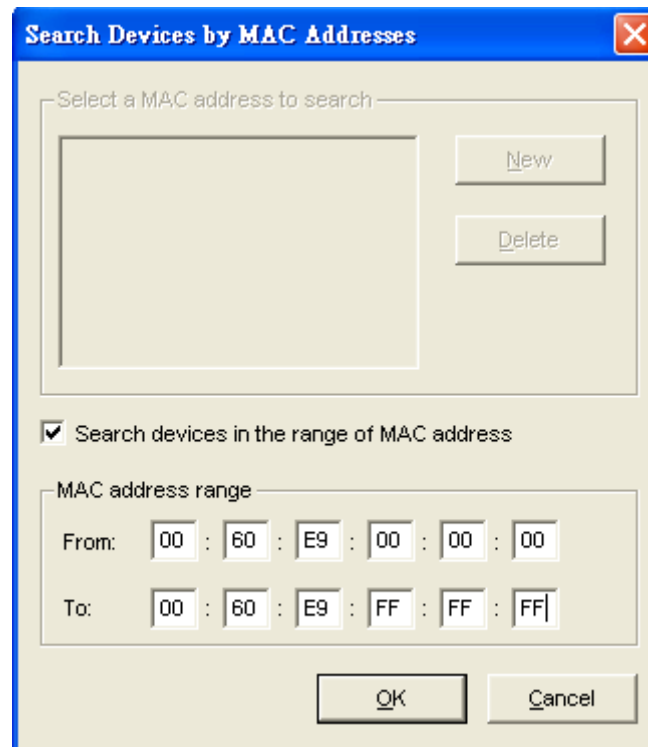


Rescan


Once the user click the “Rescan” button on the toolbar, the Serial Manager utility shall re-search devices by using the current search way.

C.3.2. Firmware

This function is applied to downloading a firmware into the selected device. The user can enter the window for downloading by firstly clicking a designated network device, and then selecting the submenu option “Firmware Download” in the main menu option “Firmware”, or directly clicking the button **Upgrade from disk**.

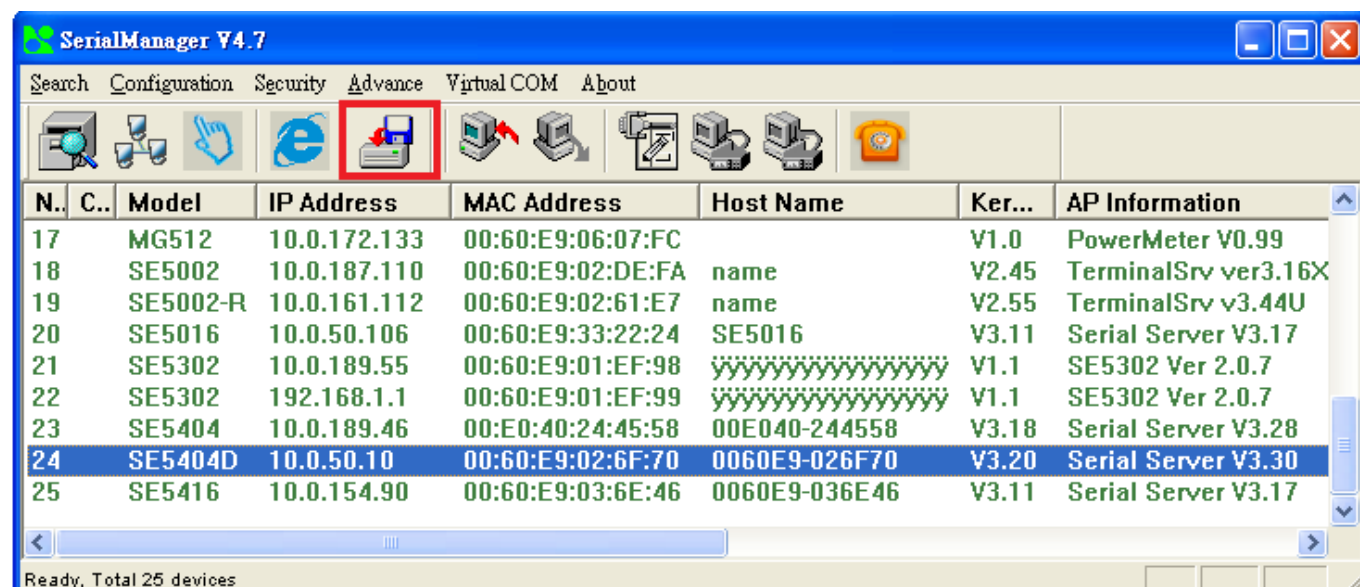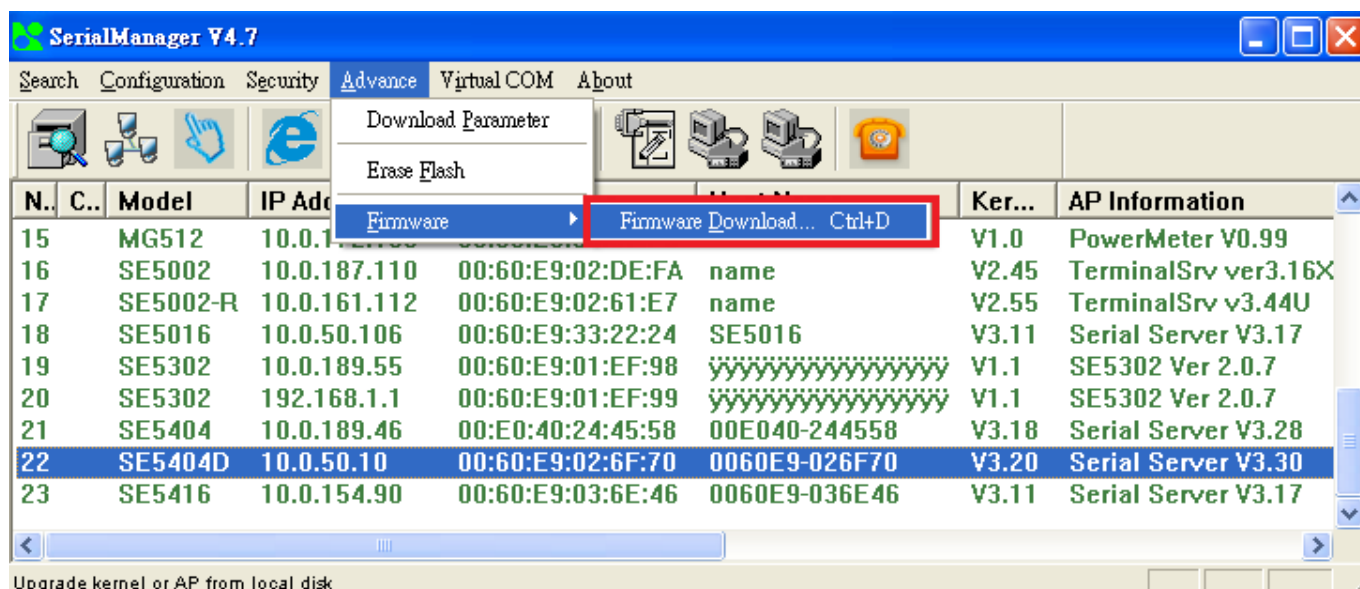


And then the user can select and download the required firmware from the disk, as shown in the figure below. The user can also select several same devices at one time, and realize the firmware updating for them by selecting **Apply for all selected devices have same model**.

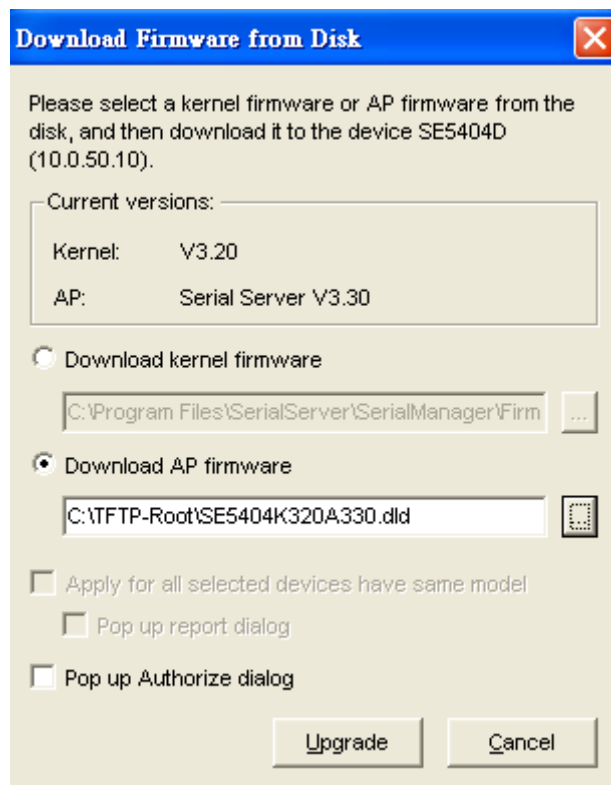


C.3.3. Configuration

This function is for device configuration to set up parameters, to import and to export the parameters, and to set up some options. Here is the list of configurations: "Network", "SNMP", "COM Port", "Locate", "Reset", "Import Setting", "Export Setting", "Virtual COM", "Config by browser" and "Options." Users can carry out a configuration operating through menu or by clicking the corresponded button on the toolbar, shown as the figure below:

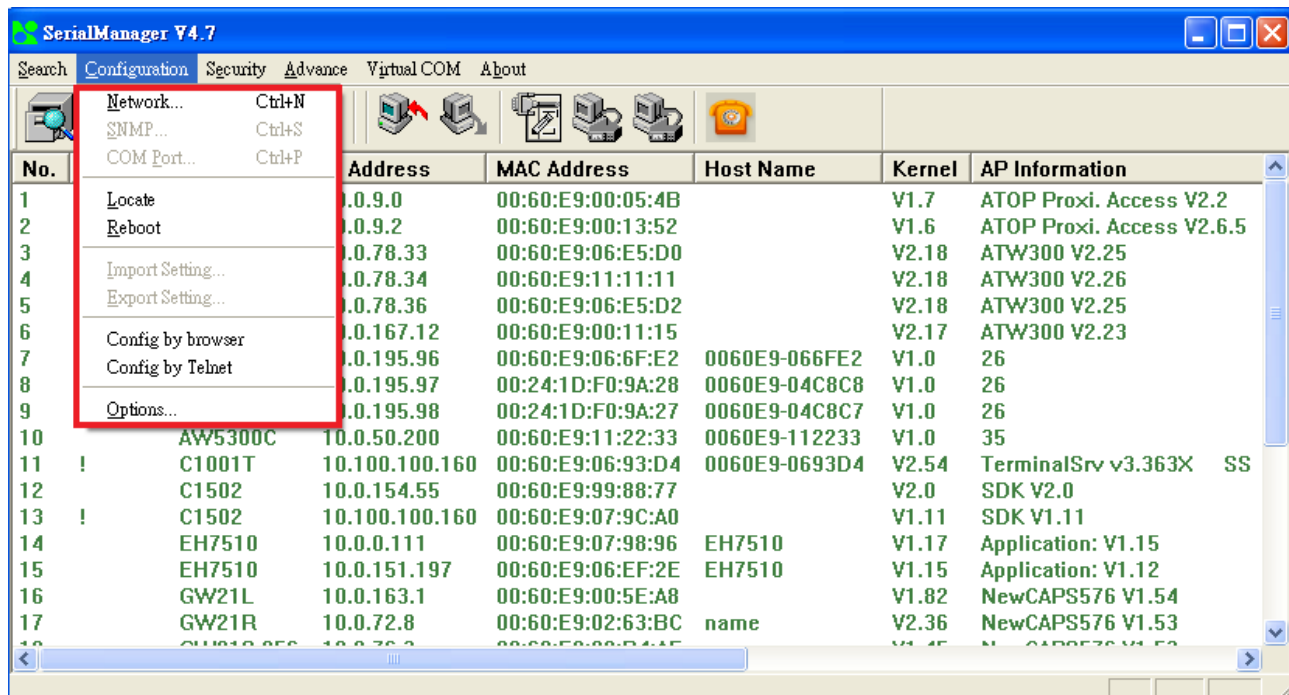

Network

The user can modify the IP address of any selected device, shown as the figure below. You can statically assign IP address, Subnet mask, and Gateway. Optionally, you can set up the device with a host name. You can select DHCP option to obtain an IP address automatically.

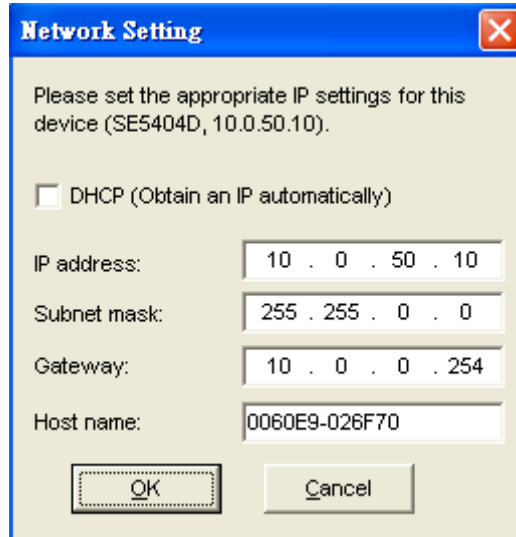

SNMP

The user can modify SNMP settings of any selected device, shown as the figure below. The support SNMP fields are Name, Location, and Contact.

* **Note:** This function will be enabled after a successful login.



The image shows a Windows-style dialog box titled "SNMP Setting" with a red close button in the top right corner. The dialog has a light beige background. Inside, there is a text instruction: "Please set the appropriate SNMP settings for this device (SE5404D, 10.0.50.10)." Below this, there are three text input fields. The first is labeled "Name:" and contains the text "0060E9-026F70". The second is labeled "Location:" and contains the text "location". The third is labeled "Contact:" and contains the text "contact". Below these fields is a checkbox that is currently unchecked, with the label "Apply for all selected devices". At the bottom of the dialog are two buttons: "OK" and "Cancel".

COM Port

ATOP has developed various Serial server products, and some of the ATOP devices are specially applied to some serial-port servers, while this function is applied to the configuration of COM port parameters only. The COM Port setting dialog is shown below.

* **Note:** This function will be enabled after a successful login.

COM Ports Setting (SE5404D, 10.0.50.10)

COM1 | COM2 | COM3 | COM4

Link mode:
☒ TCP server mode ☐ TCP client mode ☐ UDP mode

Local port: Connection limit:

☐ IP Filter:

☒ Enable virtual COM mode

COM property:

Port type:
☐ RS232 ☒ RS422 ☐ RS485

Baud rate:
☐ 300 ☒ 9600 ☐ 230400
☐ 600 ☐ 19200 ☐ 460800
☐ 1200 ☐ 38400 ☐ 921600
☐ 2400 ☐ 57600
☐ 4800 ☐ 115200

Data bits:
☐ 5 bits ☒ 7 bits
☐ 6 bits ☐ 8 bits

Parity:
☐ None
☐ Odd
☒ Even
☐ Mark
☐ Space

Stop bits:
☒ 1 ☐ 2

Packet delimiter(Network to Serial):
☐ Timer ☐ Enable
 (10-30000msec)
☐ Characters ☐ Enable
 ("0x"+ASCII Code)

Packet delimiter(Serial to Network):
☐ Timer ☐ Enable
 (10-30000msec)
☐ Characters ☐ Enable
 ("0x"+ASCII Code)

Flow control:
☒ None
☐ Xon/Xoff
☐ RTS/CTS

*** Note: If a parameter or an option is missing, please configure it by web browser.

☐ Apply for all selected devices with the same model

The user can also select several devices at once, and carry out the configuration for them at the same time by selecting "Apply for all selected devices with the same model"

* **Note: COM tabs: Generated automatically according to the COM port number of the device. If a device has 4 COM ports, there will be, for example, 4 tabs, COM1, COM2, COM3, and COM4.**

Link mode: this is to set up a TCP or UDP connection between the Serial port and the other network devices. Each COM port corresponds to a link mode, TCP or UDP, which is used to transfer data. The user can set each link mode and the working parameters according to requirements.

COM property: this is to represent the working parameter of the Serial port including: Serial port type, baud rate, data bit, stop bit, parity bit, data packet delimiter and flow control, etc.

Locate


The user can apply this function to locate a device when its IP address is known, but its position is unknown. If you locate the device, it will beep. Users can locate the device by selecting the Configuration submenu **Locate** or clicking the **Locate** button on the toolbar.

Reset

The device should be restarted after a successful modification of parameter configuration. Users can also carry out a restart through the submenu option **Reset**.

Import Setting

If a network has a large number of devices which are used for a same purpose, it would be very complicated to carry out the parameter configuration for each device in the network one by one. Users can import the parameter configuration from a parameter file directly into all the devices in the network through the submenu option **Import setting** or by clicking the **Import setting** button on the toolbar. The dialog of import parameter settings is shown below.

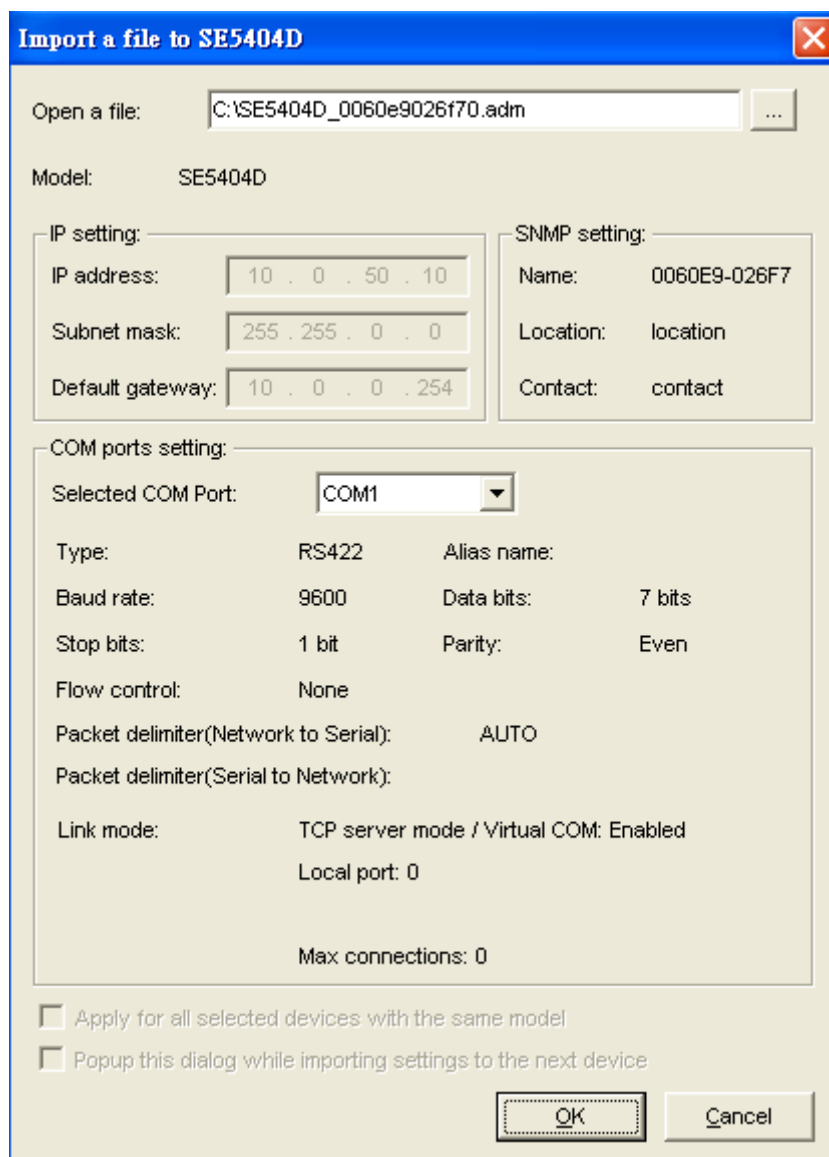

Import a file to SE5404D

Open a file: C:\SE5404D_0060e9026f70.adm

Model: SE5404D

IP setting:

IP address: 10 . 0 . 50 . 10

Subnet mask: 255 . 255 . 0 . 0

Default gateway: 10 . 0 . 0 . 254

SNMP setting:

Name: 0060E9-026F7

Location: location

Contact: contact

COM ports setting:

Selected COM Port: COM1

Type: RS422 Alias name:

Baud rate: 9600 Data bits: 7 bits

Stop bits: 1 bit Parity: Even

Flow control: None

Packet delimiter(Network to Serial): AUTO

Packet delimiter(Serial to Network):

Link mode: TCP server mode / Virtual COM: Enabled

Local port: 0

Max connections: 0

☐ Apply for all selected devices with the same model


☐ Popup this dialog while importing settings to the next device

OK Cancel

The user can also select several devices at once, and upload the configuration file into all the selected devices by selecting "Apply for all selected devices have same model."

Export Setting

Users can save the parameter information to a standard device into a parameter file through the submenu option **Export setting** or clicking the **Export setting** button on the toolbar for backup purpose or to be imported to other device. The dialog of Export Setting is shown in the figure below.

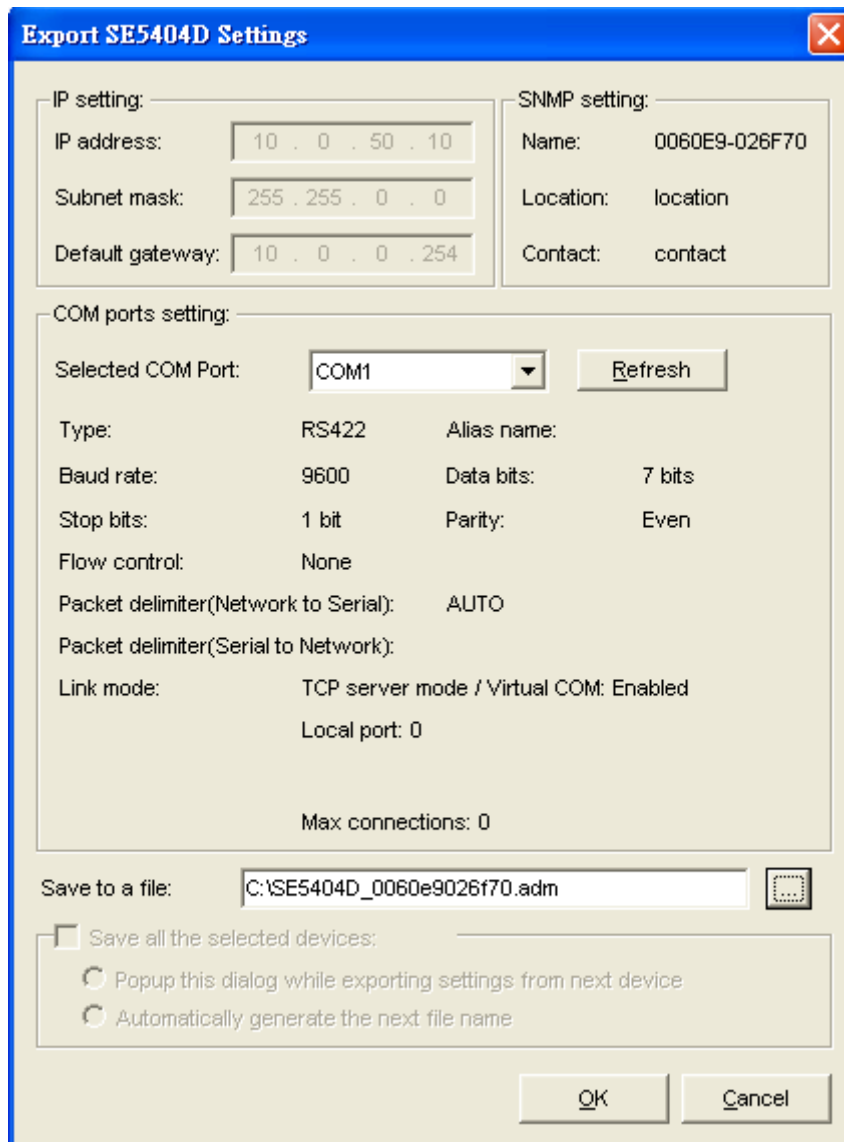

Export SE5404D Settings

IP setting:

IP address: 10 . 0 . 50 . 10

Subnet mask: 255 . 255 . 0 . 0

Default gateway: 10 . 0 . 0 . 254

SNMP setting:

Name: 0060E9-026F70

Location: location

Contact: contact

COM ports setting:

Selected COM Port: COM1 Refresh

Type: RS422 Alias name:

Baud rate: 9600 Data bits: 7 bits

Stop bits: 1 bit Parity: Even

Flow control: None

Packet delimiter(Network to Serial): AUTO

Packet delimiter(Serial to Network):

Link mode: TCP server mode / Virtual COM: Enabled

Local port: 0

Max connections: 0

Save to a file: C:\SE5404D_0060e9026f70.adm ...

☐ Save all the selected devices:

☐ Popup this dialog while exporting settings from next device


☐ Automatically generate the next file name

OK Cancel

The user can also select several devices at one time, and save the parameter information of these selected devices into a designated parameter file by selecting "Save all the selected devices".

Configure by Browser

If the device has a Web server build-in, it will provide additional device-specific parameters that Serial Manager does not supply. Users can carry out any parameter setting directly through the submenu option "Config by Browser", and a Web browser is shown in the figure below.



- Overview
- Network
- Serial
- Alert
- System

SE5404D

Overview

The general device information of Serial Server.

Device Information	
Kernel Version	3.20
AP Version	3.30

Network Information		
LAN 1	MAC Address	00:60:E9:02:6F:70
	IP Address	10.0.50.10
LAN 2	MAC Address	00:60:E9:02:6F:71
	IP Address	192.168.1.1 (Link down)


Configure by Telnet

Most device supports Telnet login, it will provide additional device-specific parameters that Serial Manager does not supply. Users can carry out any parameter setting directly through the submenu option "Config by Browser", and a Web browser is shown in the figure below.

Option


In this dialogue, you can

1. Set the Serial Manager's scan interval
2. If device tip option is turned on, Serial Manager will show additional information when your mouse cursor stays on the device.
3. You can select which Network Interface Card that Serial Manager uses. If this option is set to DEFAULT, SerialManger will uses the default NIC that the operating system assigns.

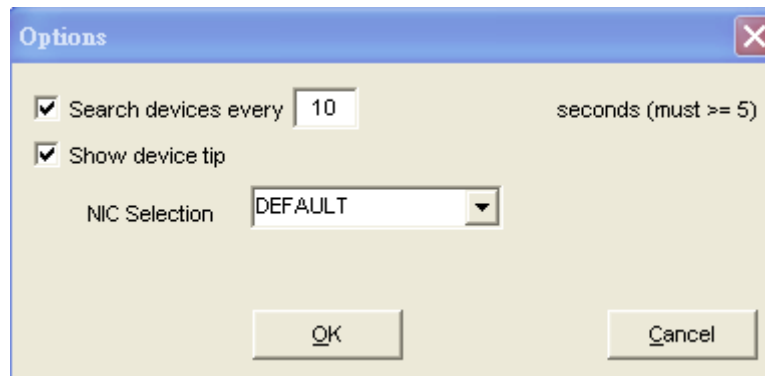

C.3.4. Security

This function is applied to the security protection for the network devices, so as to supply some necessary protection to a device for configuration modifying, configuration leading-in and leading-out, and some other important functions. Here three functions are mainly supplied, including: **Login**, **Logout** and **Change Password**, shown in the figure below.

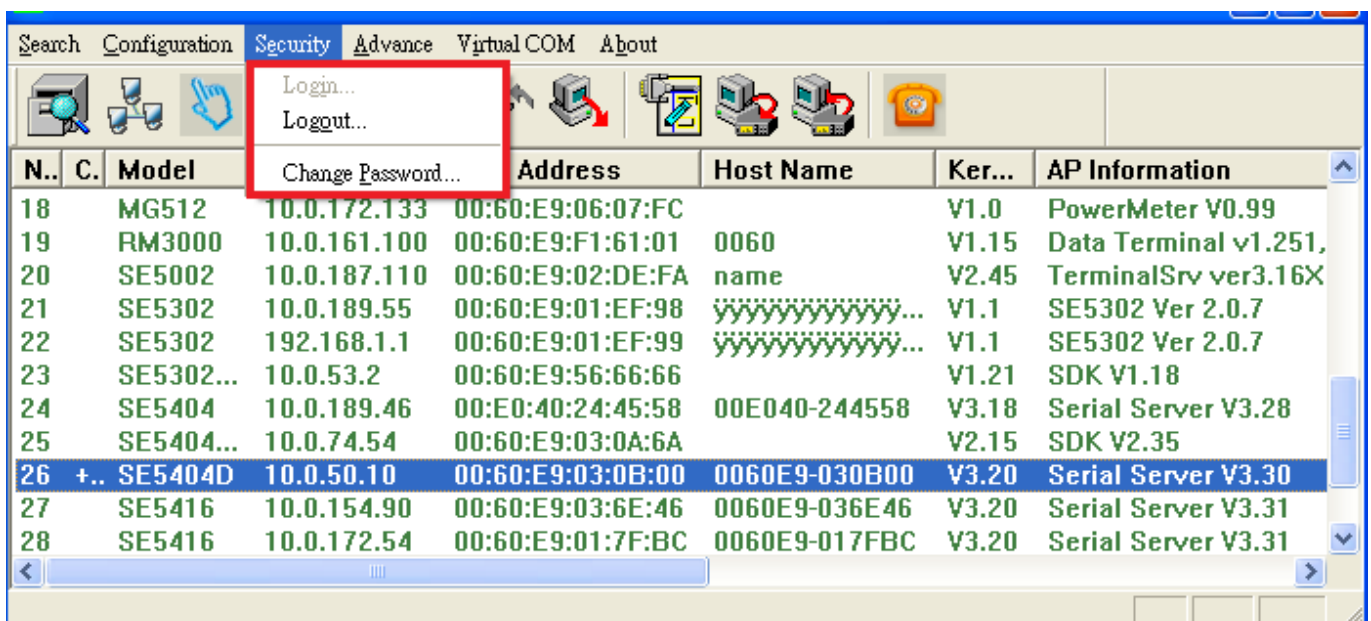

Login

This function is applied to login to any network device, as some sensitive functions can only be operated after a successful login, shown in the figure below. The user can also select several devices at one time, and log into them at the same time by selecting "Apply for all selected devices."

Note: Double clicking on the device would also login/log out from the device.



Login

Enter a user name and password to login to this device.
Note: This function is only available for the standard Serial Server.

Device: SE5404D IP:10.0.50.10


User Name:

Password:

☐ Apply for all selected devices

Logout

This function is applied to the logout from any network device, as the user should always carry out a logout after he/she has finished the operating action to any important device, shown in the figure below. The user can also select several devices at one time, and log out them at the same time by selecting “Apply for all selected devices.”

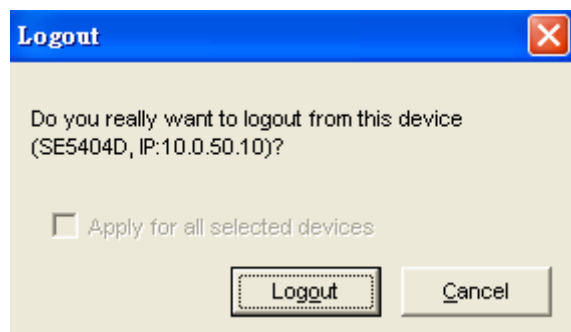

Logout

Do you really want to logout from this device (SE5404D, IP:10.0.50.10)?

☐ Apply for all selected devices

Change Password

This function is applied to modifying the password for logging in any network device, but can only be realized after a successful log-in, shown in the figure below. The user can also select several devices at one time, and modify their pins at the same time by selecting “Apply for all selected devices.”

Change Password

To change your device (SE5404D, IP:10.0.50.10) password, please provide the following information and then click OK.

Old Password:

New Password:

Verified Password:

☐ Apply for all selected devices

OK Cancel

C.3.5. Virtual COM

Some devices are supplied with the function of virtual serial port, and the user can carry out any related setting through the option "Virtual COM". We have integrated Virtual COM settings in the Serial Manager. You can still select "Serial/IP Tools" to call original Virtual COM configuration utilities. You can either use this integrated Virtual COM working area or the original Serial/IP Tools to configure Virtual COM.

SerialManager V4.7


Search Configuration Security Advance **Virtual COM** About

Configuration Show


- Add devices
- Add device (Manually)
- Remove devices
- Port Enable
- Port Disable
- Apply
- Serial/IP Tools

N..	C.	Model	IP Address	MAC Address	Host Name	Ker...	AP Information
17		RM3000	10.0.161.100				
18		SE5002	10.0.187.110				
19		SE5302	10.0.189.55				
20		SE5302	192.168.1.1				
21		SE5302...	10.0.53.2				
22		SE5404	10.0.189.46				
23		SE5404...	10.0.74.54				
24	+	SE5404D	10.0.50.10	00:60:E9:03:0B:00	0060E9-030B00	V3.20	Serial Server V3.30
25		SE5416	10.0.154.90	00:60:E9:03:6E:46	0060E9-036E46	V3.20	Serial Server V3.31
26		SE5416	10.0.172.54	00:60:E9:01:7F:BC	0060E9-017FBC	V3.20	Serial Server V3.31

After you select Configuration Show, a new **Virtual COM working area** would appear.

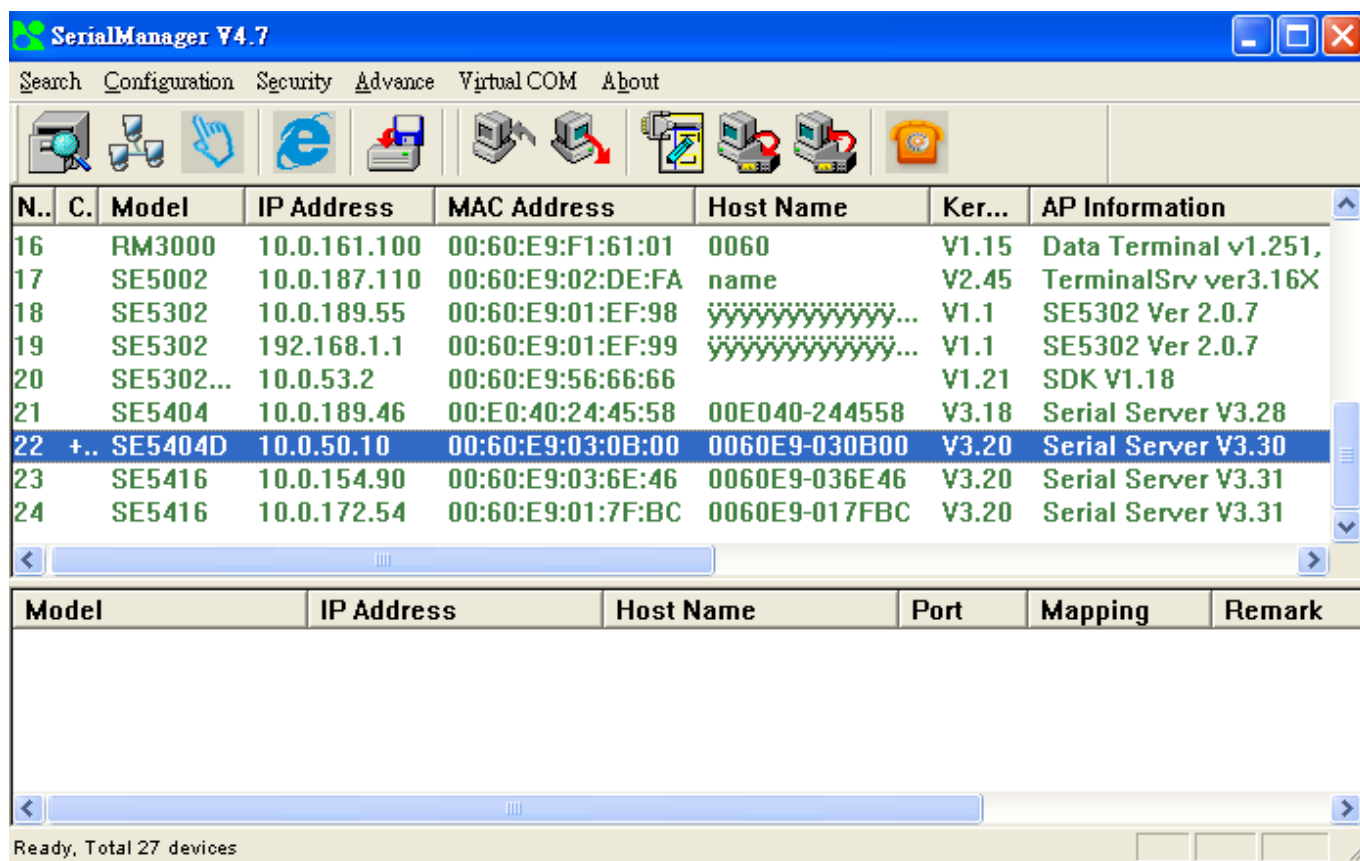

Select the device you want to establish a Virtual COM connection with, you can select multiple devices. After the device is selected, right click in the blank working area and select "Add devices".

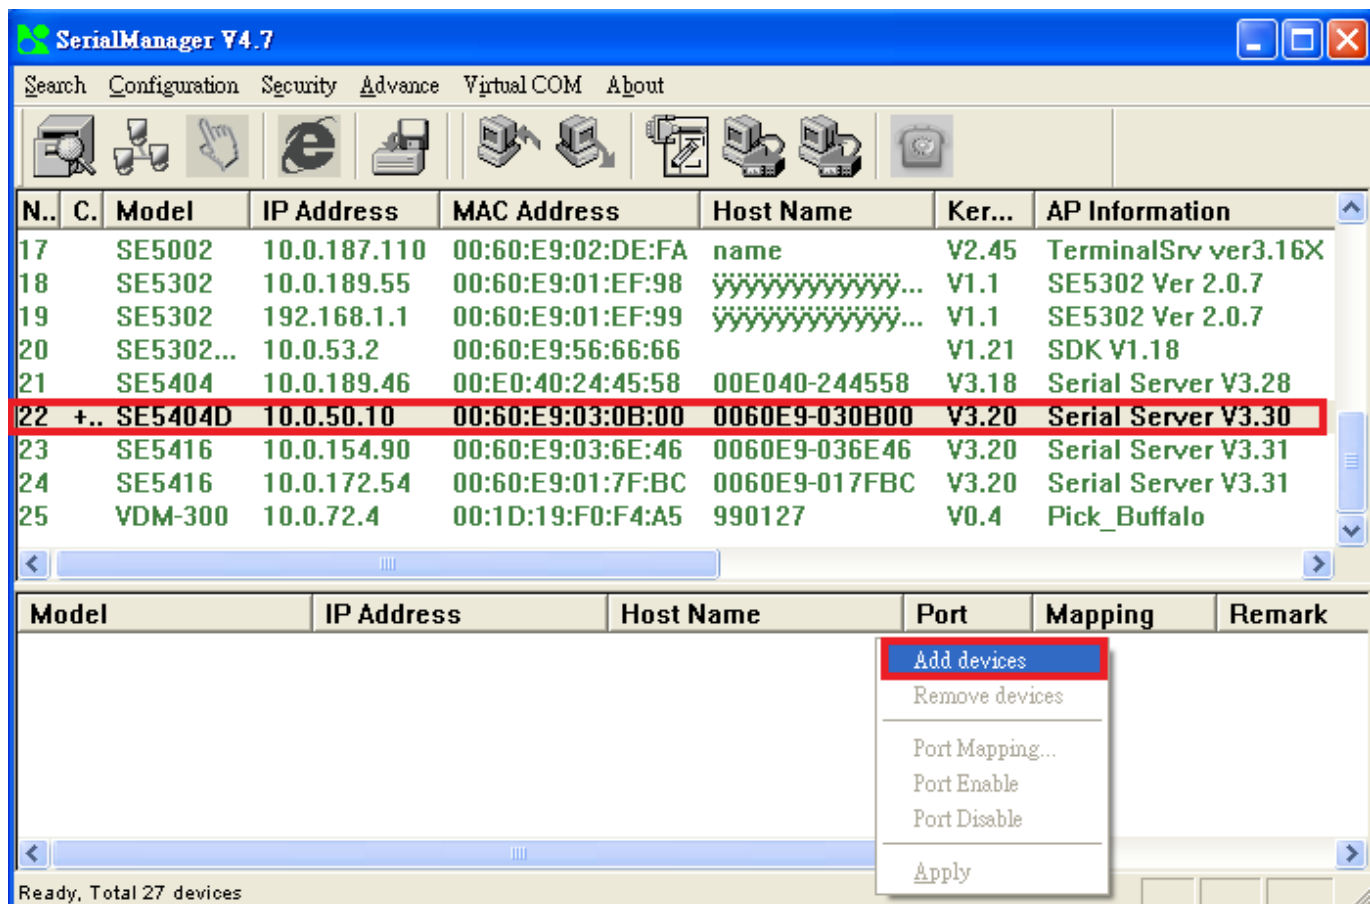

SerialManager V4.7


Search Configuration Security Advance Virtual COM About

N..	C.	Model	IP Address	MAC Address	Host Name	Ker...	AP Information
17		SE5002	10.0.187.110	00:60:E9:02:DE:FA	name	V2.45	TerminalSrv ver3.16X
18		SE5302	10.0.189.55	00:60:E9:01:EF:98	yyyyyyyyyyyy...	V1.1	SE5302 Ver 2.0.7
19		SE5302	192.168.1.1	00:60:E9:01:EF:99	yyyyyyyyyyyy...	V1.1	SE5302 Ver 2.0.7
20		SE5302...	10.0.53.2	00:60:E9:56:66:66		V1.21	SDK V1.18
21		SE5404	10.0.189.46	00:E0:40:24:45:58	00E040-244558	V3.18	Serial Server V3.28
22	+	SE5404D	10.0.50.10	00:60:E9:03:0B:00	0060E9-030B00	V3.20	Serial Server V3.30
23		SE5416	10.0.154.90	00:60:E9:03:6E:46	0060E9-036E46	V3.20	Serial Server V3.31
24		SE5416	10.0.172.54	00:60:E9:01:7F:BC	0060E9-017FBC	V3.20	Serial Server V3.31
25		VDM-300	10.0.72.4	00:1D:19:F0:F4:A5	990127	V0.4	Pick_Buffalo


Model	IP Address	Host Name	Port	Mapping	Remark
<div> Add devices Remove devices Port Mapping... Port Enable Port Disable Apply </div>					

Ready, Total 27 devices

The device would be added. Right click on any port and a menu with show. You can remove the device from the Virtual COM working area by selecting "Remove devices." You can disable Virtual COM for a specific port by selecting "Port Disable". Remember to click **Apply** to apply any changes.

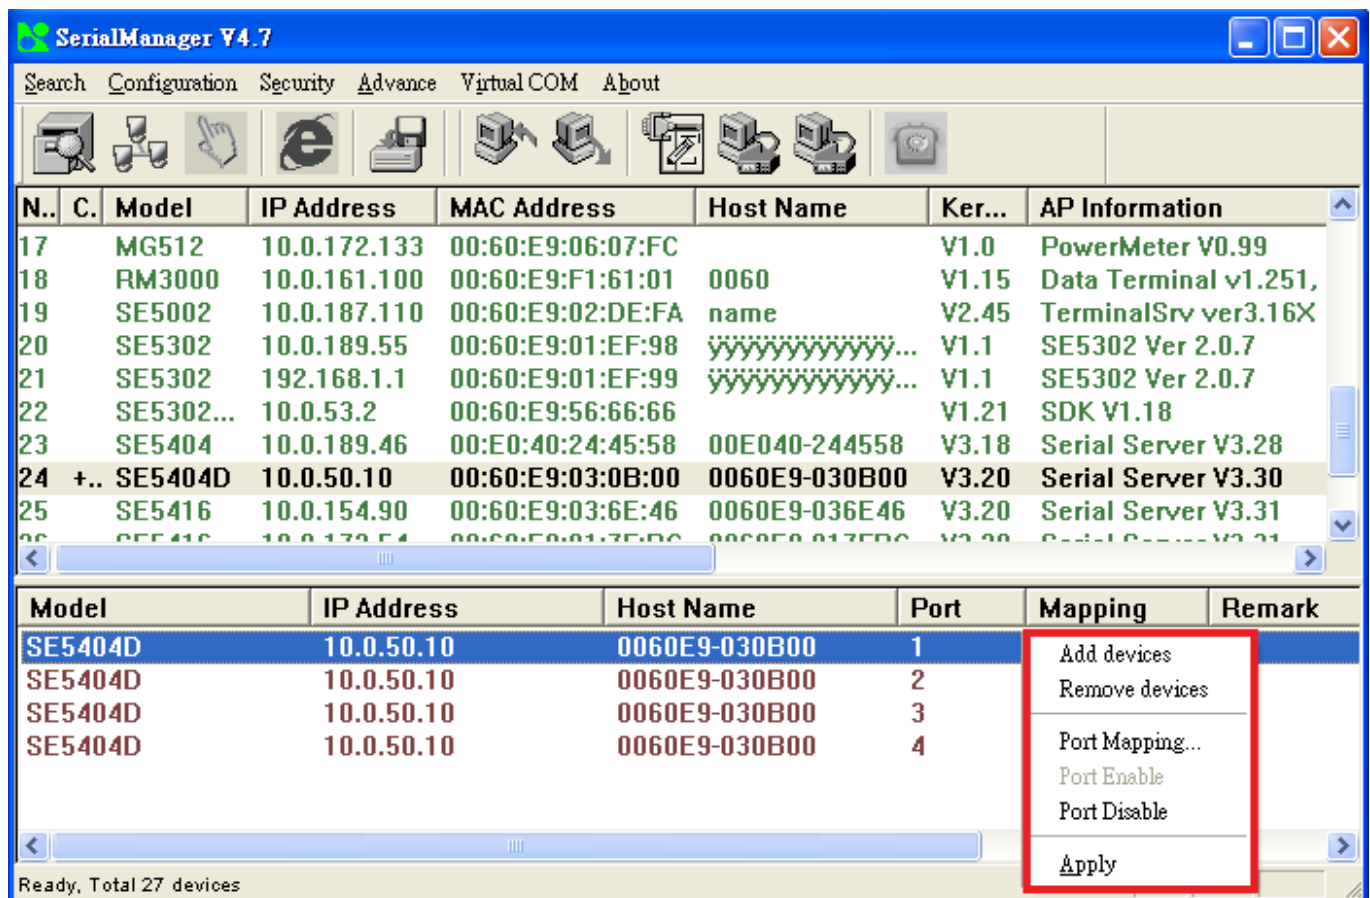

If you select Port Mapping..., a new window would show. You can setup the Virtual COM accordingly.

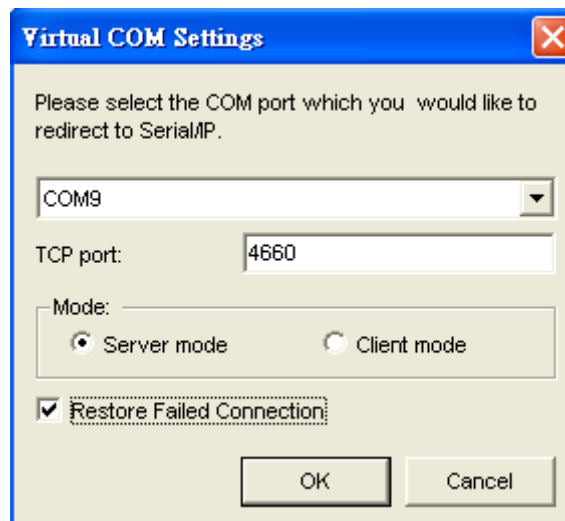

C.3.6. About

This function is mainly applied to displaying information of the **Serial Manager** utility, shown in the figure below.

