



Atop Technologies, Inc.

Industrial Unmanaged PoE Booster Switch

EHG6408 / EHG6410 Series

Industrial Lite-Managed PoE Booster Switch

EHG6508 / EHG6510 Series

## Hardware Installation Guide

Version 2.1  
Updated in March, 2020



Tel: 886-3-5508137  
Fax: 886-3-5508131  
www.atop.com.tw

P/N:89900522G

## Package Check List

Inside the package you will find the following items:

- Unmanaged / Managed Booster Switch x 1
- 7-Pin 5.08mm Lockable Terminal Block x 1
- 5-Pin 5.08mm Lockable Terminal Block (Already mounted to the device) x 1
- DIN-Rail Kit (Already mounted to the device) x 1
- Protective caps for all SFP and PoE ports (Depend on purchased model)
- Installation Guide with Warranty Card x 1


⚠ Never install or work on electrical or cabling during periods of lightning activity. Never connect or disconnect power when hazardous gases are present.

⚠ Warning: Hot Surface Do Not Touch. RESTRICTED ACCESS AREA: The equipment should only be installed in a Restricted Access Area.




⚠ Caution: CLASS 1 LASER PRODUCT. Do not stare into the laser!

🏠 This equipment should be installed indoor and not connect directly with equipment installed outdoor.


## Product Layout

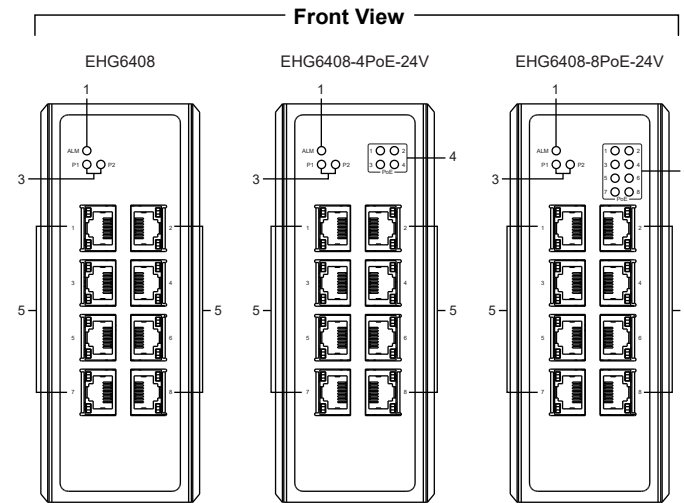

1. Alarm LED
2. RUN LED  
(Optional by EHG6508/EHG6510 models)
3. P1/P2 Power LED
4. PoE/SFP Ports LED
5. 10/100/1000 BASE-T(X) RJ45 Ports and/or  
10/100/1000 BASE-T(X) PoE Ports
6. 100 BASE-F(X)/1000 BASE(X)  
(Optional by EHG6410/EHG6510 models)

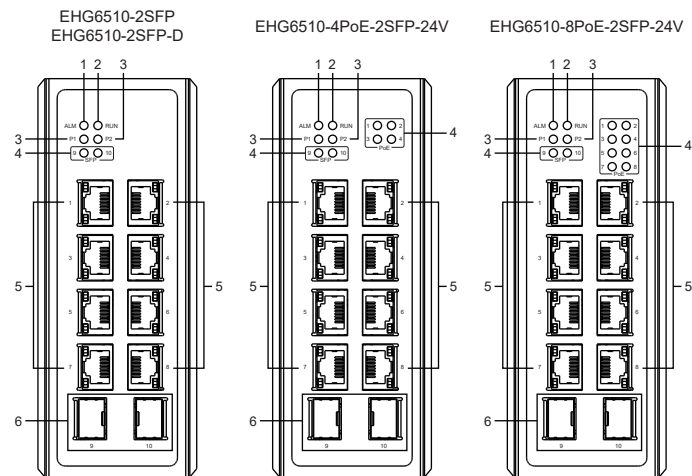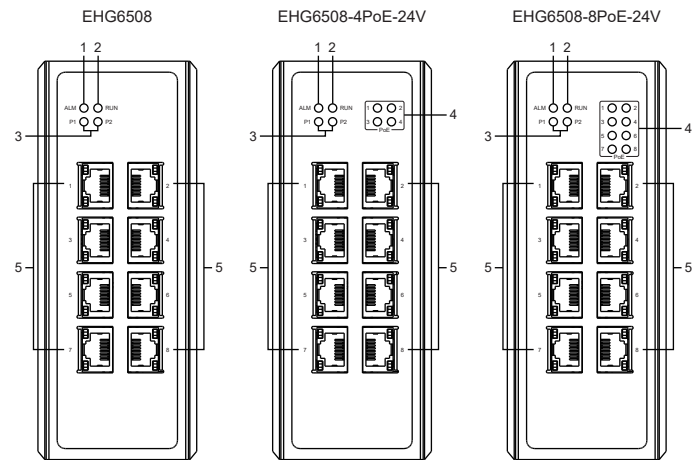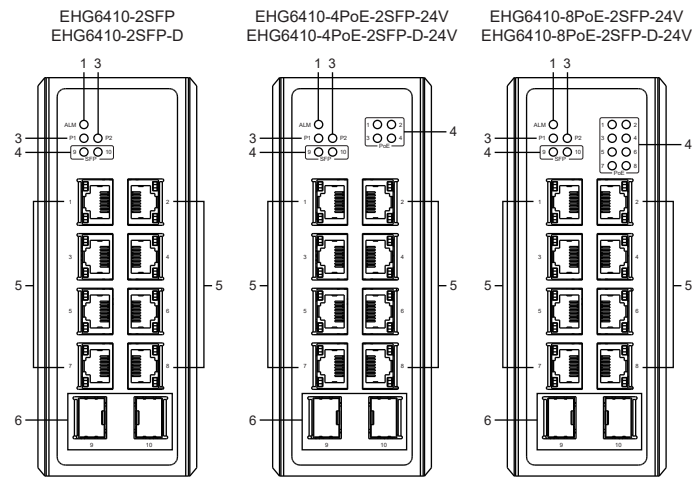

## Top View

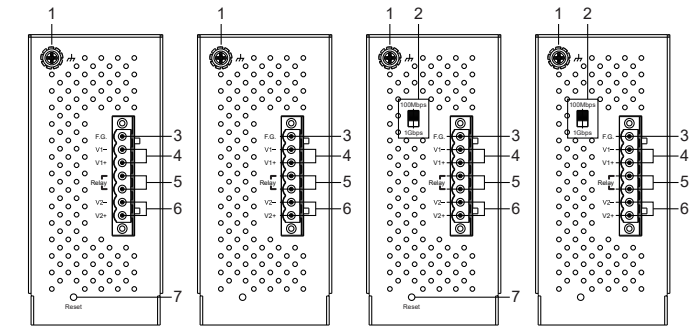

1. Grounding Screw
2. 100 BASE-F(X)/1000 BASE(X) switch  
button (EHG6410-...-D and  
EHG6510-...-D only)
3. Frame Ground
4. Terminal for Power 1
5. Relay Output 1 with current  
carrying capacity of 1A@24  
VDC (Normal Open)
6. Terminal for Power 2
7. Reset button (EHG6508-.../  
EHG6510-... only)

## Installation Overview


The device's appearance is as in the figure below.

1. If you have purchased the wall mount kit,  
proceed to place the screws on the back  
of the device as show in (Fig. 1).
2. Although internal grounding has been  
done inside, in order to ensure overall  
maximum performance and protect your  
device, it is still strongly advised to ground  
the device properly; hazardous ESD can  
come into contact and damage your  
equipment. On the power terminal block,  
there is a terminal for Frame Ground, you  
can choose whether to connect it to the  
grounding or you may opt to connect to  
the grounding screw next to the terminal  
block ( the one chosen should be connect-  
ed at all times ) (Fig. 2)


3. Wall mount Screw spec: M3\*0.5P  
Wall mount Screw specification: M3; screw depth:4.7mm(Max); screws x 4pcs

4. You can then choose whether to plug in the other peripheral ports at this point  
or do it later depending on the actual location of the device or level of comfort  
for performing such operation.

**Remember to plug in the protective caps for the unused SFP and PoE ports.**

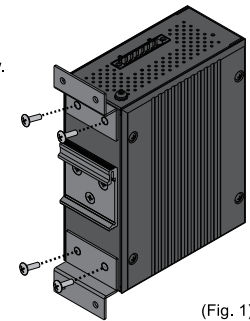


(Fig. 1)

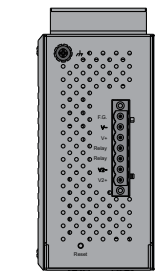


(Fig. 2)

5. Once the plate has been firmly put in place, proceed to mount the whole device  
as shown in (Fig. 3). Proceed to (Fig. 4) if you want to remove the device from  
DIN-Rail.

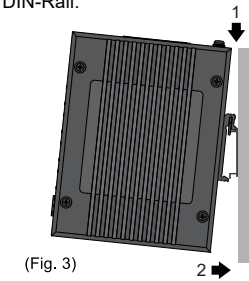

(Fig. 3)

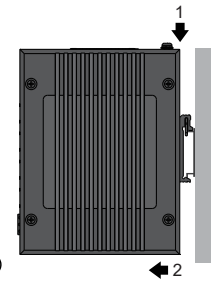


(Fig. 4)

6. Next we can then proceed to connect the device to the LAN (switch or PC,  
depending on the case), take care on using the RJ-45 connector; after this we  
can then proceed to the device's settings

7. Din Rail Screw spec: M4\*0.7P  
Din Rail Screw specification: M4; screw depth:4.1mm(Max); screws x 3pcs

- The opening to the sides are  
for the device's heat dissipation  
please never obstruct or cover  
them with any objects or try to  
insert them through it.

- This switch's factory IP by  
default is 10.0.50.1 you can  
access the device by its Web UI  
once it is connected to a physical  
network (or using Management  
Utility, for more information on  
Management Utility, please refer to its manual). Please be aware that the PC  
needed for this procedure needs to be in the same subnet, or you may refer  
yourself to the device User's Manual.

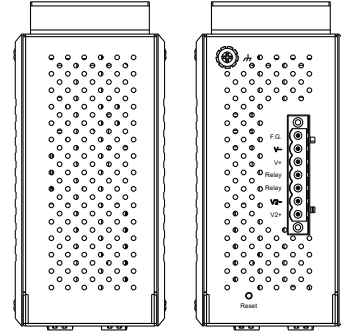

## Power Requirements


- Power input : 12-57 VDC, 0.8A Max at 75 C (Non PoE)  
12-23 VDC, 7A Max at 70 C (60W Max at 802.3af/at)  
24-57 VDC, 6A Max at 70 C (120W Max at 802.3af/at)  
Note : 30W Max per PoE port

LED Indicators


LED	Color	State	Description
PWR1	Green	On	Power is supplied through PWR1
PWR2		Off	Power is supplied through PWR2
Alarm	Red	On	PWR1 or PWR2 is abnormal
		Off	PWR1 and PWR2 are normal
RUN	Green	Blinking	AP firmware is running normally
		Off	System is not ready or halt
SFP	Green	On	SFP is Active
LAN	Amber	On	Ethernet is linked at 1000Mbps
		Off	Ethernet is linked at 10Mbps or not linked
	Green	On	Ethernet is connected
		Blinking	Data is being transmitted
		Off	Ethernet is disconnected
PoE	Amber	On	Power is being supplied to a Powered Device (PD)
		Off	Power is not supplied to a Powered Device (PD)

Pin Assignments and Connections

10/100/1000BASE-T(X) Ethernet, PoE Pinouts

RJ-45								
10/100BASE-T(X)								
Pin	1	2	3	4	5	6	7	8
Signal	Tx +	Tx -	Rx +			Rx -		
1000BASE-T								
Pin	1	2	3	4	5	6	7	8
Signal	BI_DA+	BI_DA-	BI_DB+	BI_DC+	BI_DC-	BI_DB-	BI_DD+	BI_DD-
PoE								
Pin	1	2	3	4	5	6	7	8
DC	V+	V+	V-			V-		

1000BASE-X Fiber Optics SFP Slot

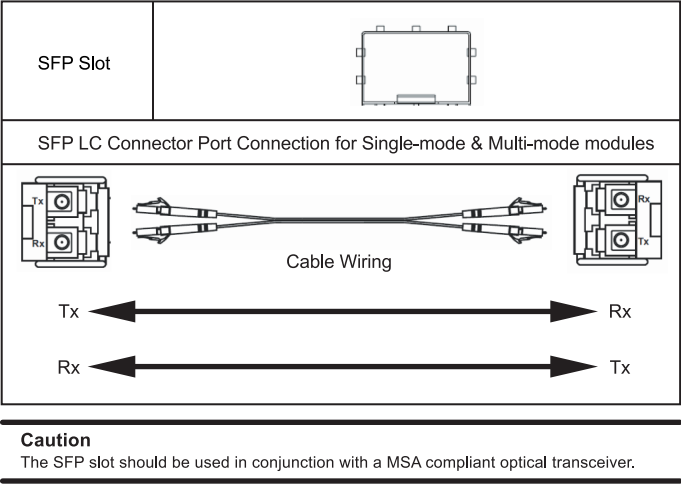



Attention

- PoE considered a Network Environment 0 per IEC TR62101, and thus the interconnected ITE circuits may be considered SELV. The installation instructions clearly state that the ITE is to be connected only to PoE networks without routing to the outside plant.
- Suitable for installation in Information Technology Rooms in accordance with Article 645 of the national Electrical Code and NFPA 75.
- This equipment is not suitable for use in locations where children are likely to be present.
- Connect all power cords to a properly wired and grounded electrical outlet.
- This product is intended to be supplied by a Listed(Certificate) power adapter, rated 1) 12-57 VDC, 0.8A minimum (for Non PoE), 2) 12-23 VDC, 7A minimum (for total 60W 802.3af/at), 3) 24-57 VDC, 6A minimum (for 120W 802.3af/at), up to 2000m altitude, if need further assistance, please contact ATOP TECHNOLOGIES INC further information.
- For installing the optical transceiver, please select the one (Certificate) rated 3.3V, labeled or marked “Laser Class I” or equivalent for optional transceiver product

Field Maintenance and Service

- If the device requires servicing of any kind, you may need to disconnect and remove it from its mounting. The initial installation should be done in a way that makes this as convenient as possible.
- Voltage/Power lines should be properly insulated as well as other cables. Be careful when handing the so as to not trip over
  - Do not under any circumstance insert foreign objects of any kind into the heat dissipation holes located in the different faces of the device. This may not only harm the internal layout but might cause harm to you as well.
  - Do not under any circumstance open the device for any reason. Please contact your dealer for any repair needed or follow the instructions on section of your User’s Manual.

Mechanical Dimensions (Unit=mm)

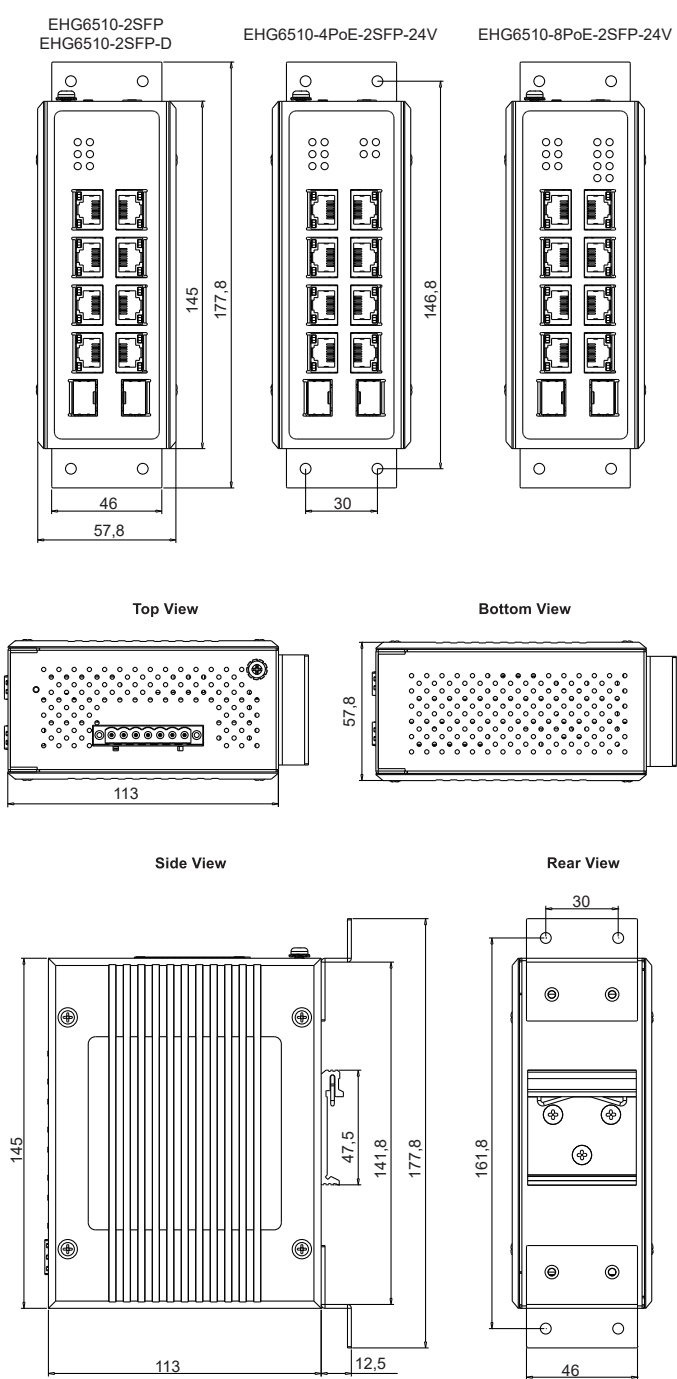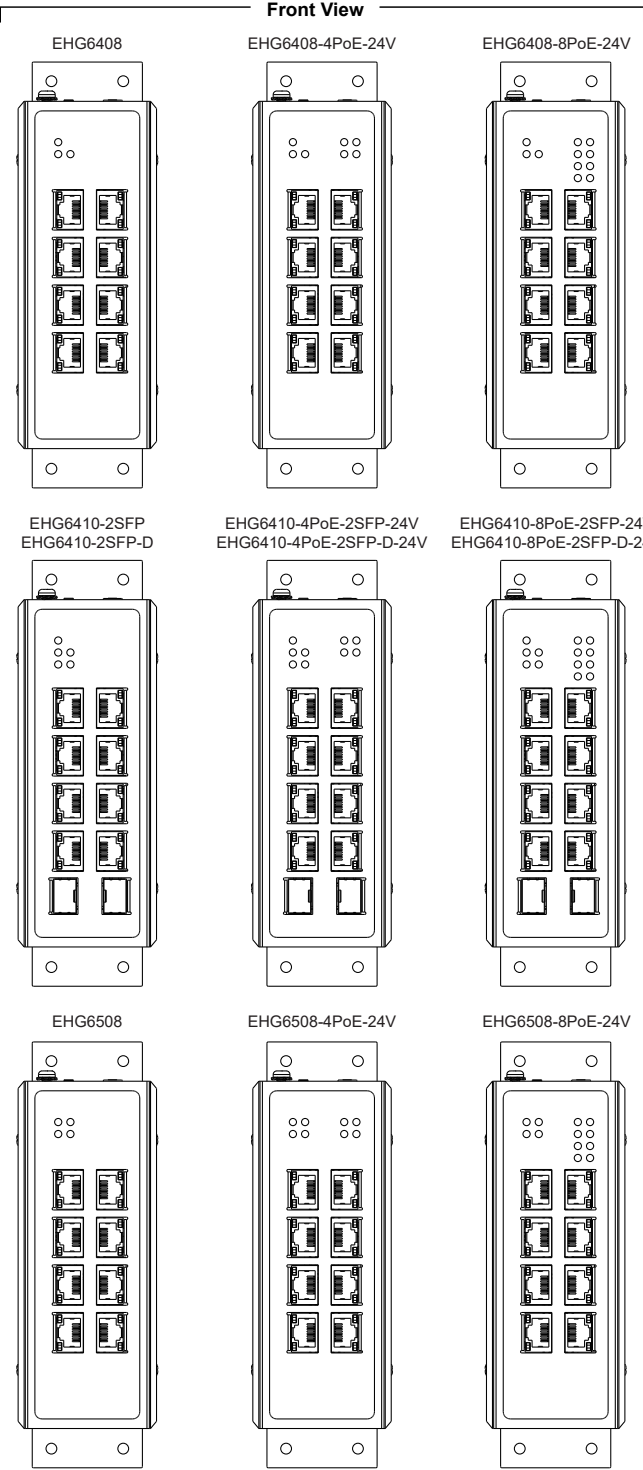

※ The wall mount kit illustrated in this document is for reference only and is not included in the package.

Warranty Policy

Warranty Conditions

Products supplied by Atop Technologies are covered in this warranty for sub-standard performance or defective workmanship. The warranty is not, however, extended to goods damaged in the following circumstances:

- (a) Excessive forces or impacts
- (b) War or an Act of God: wind storm, fire, flood, electric shock, earthquake
- (c) Use of unqualified power supply, connectors, or unauthorized parts/kits
- (d) Replacement with unauthorized parts

RMA and Shipping Costs Reimbursement

Customers shall always obtain an authorized "RMA" number from Atop before shipping the goods to be repaired to Atop. When in normal use, a sold product shall be replaced with a new one within 3 months after purchase. The shipping cost from the customer to Atop will be reimbursed by Atop. After 3 months and still within the warranty period, it is up to Atop whether to replace the unit with a new one; normally, as long as a product is under warranty, all parts and labor are free of charge to the customers. After the warranty period, the customer shall cover the cost for parts and labor. Three months after purchase, the shipping cost from the customer to Atop will not be reimbursed, but the shipping cost from Atop to the customer will be paid by Atop.

Limited Liability

Atop shall not be held responsible for any consequential losses from using Atop's product.

Warranty Period

Product Categories	Warranty	Product Categories	Warranty
Ethernet Switches	5 Years	DIN-Rail Power Supplies	3 Years
Wireless		Power Adaptors	1 Year
Serial Device Servers		Antennas	
Modbus Gateways		Other Accessories	
Media Converters			
Embedded Device Servers			

The warranty certification will not be effective until an authorized stamp issued by Atop’s overseas agents.

Purchase Date:            /            /            (yyyy/mm/dd)

Serial Number



Atop Customer Services and Supports

- Please contact your local dealers or Atop Technical Support Center at the following numbers.  
+ 886-3-550-8137 (Atop Taiwan)  
+ 86-21-6495-6232 (Atop China)
- Please report the defected problems via Atop's Web site or E-mail account  
Web Site : [www.atop.com.tw](http://www.atop.com.tw), e-mail : [service@atop.com.tw](mailto:service@atop.com.tw)  
Web Site : [www.atop.com.cn](http://www.atop.com.cn), e-mail : [service@atop.com.cn](mailto:service@atop.com.cn)

— Any changes to this material will be announced on Atop website. —