



Atop Technologies, Inc.

Protocol Gateway

IEC60870-5-103 Master/Slave

Protocol and
eNode Designer configuration

eNode Configuration Manual

V1.3
September 29th, 2017

This PDF Document contains internal hyperlinks for ease of navigation.
For example, click on any item listed in the [Table of Contents](#) to go to that page.

- [Configuration Guide](#)
 - [Interoperability](#)
-

Published by:

Atop Technologies, Inc.

2F, No. 146, Sec. 1, Tung-Hsing Rd,
30261 Chupei City, Hsinchu County
Taiwan, R.O.C.

Tel: +886-3-550-8137
Fax: +886-3-550-8131
www.atponline.com
www.atop.com.tw

Important Announcement

The information contained in this document is the property of Atop technologies, Inc., and is supplied for the sole purpose of operation and maintenance of Atop Technologies, Inc., products.

No part of this publication is to be used for any other purposes, and it is not to be reproduced, copied, disclosed, transmitted, stored in a retrieval system, or translated into any human or computer language, in any form, by any means, in whole or in part, without the prior explicit written consent of Atop Technologies, Inc..
Offenders will be held liable for damages and prosecution.

All rights, including rights created by patent grant or registration of a utility model or design, are reserved.

Disclaimer

We have checked the contents of this manual for agreement with the hardware and the software described. Since deviations cannot be precluded entirely, we cannot guarantee full agreement. However, the data in this manual is reviewed regularly and any necessary corrections will be included in subsequent editions.

Suggestions for improvement are welcome.

All other product's names referenced herein are registered trademarks of their respective companies.

Documentation Control

Author:	Matteo Tabarelli
Revision:	1.3 Enhancement
Revision History:	Modify because of software enhancements
Creation Date:	14 December 2015
Last Revision Date:	29 September 2017
Product Reference:	PG59XX Protocol Gateway
Document Status:	Released

Table of Contents

1	Introduction	7
1.1	Scope.....	7
1.2	Document Reference	7
1.3	List of Abbreviations.....	7
2	General Description.....	8
2.1	IEC 60870-5-103 Standard	8
2.2	ISO/OSI of IEC 60870-5-103	8
2.3	Configuration Theory	9
2.4	General Screen Description.....	10
3	IEC60870-5-103 Configuration Guide.....	11
3.1	Adding the Module in eNode Designer	11
3.2	Server IED Properties	11
3.2.1	3.2.1.1 Common Address	12
3.3	Client Configuration.....	13
3.3.1	3.3.1 Client Settings.....	14
3.3.1.1	3.3.1.1 Link Address.....	14
3.3.1.2	3.3.1.2 Link Layer Timeout (ms).....	14
3.3.1.3	3.3.1.3 Station Initialisation	14
3.3.1.4	3.3.1.4 Time Sync Interval (s)	14
3.3.1.5	3.3.1.5 General Interrogation Interval (s)	14
3.3.1.6	3.3.1.6 Poll Class Interval (ms)	14
3.3.1.7	3.3.1.7 Command Timeout (ms)	15
3.3.2	3.3.2 Adding Data Points.....	16
3.3.2.1	3.3.2.1 Add a Single Data Point	17
3.3.3	3.3.3 Connected Servers (Remote IEDs)	18
3.4	3.4 Server Configuration	19
3.4.1	3.4.1 Server Settings.....	20
3.4.1.1	3.4.1.1 Link Address.....	20
3.4.1.2	3.4.1.2 Common Address	20
3.4.1.3	3.4.1.3 Link Layer Timeout (ms).....	20
3.4.1.4	3.4.1.4 Command Timeout (ms)	20
3.4.1.5	3.4.1.5 Class {X} Event Buffer Size.....	20
3.4.1.6	3.4.1.6 Class {X} Event Buffer Overflow Percentage.....	20
3.4.2	3.4.2 Adding Data Point References.....	21
3.5	3.5 Miscellaneous Common.....	23
3.5.1	3.5.1 Incomplete, Conflicting and not needed Information.....	23
3.5.2	3.5.2 Modify Selected Points Window.....	24
4	Communication Port Properties	25
5	Using Counters	26
6	Interoperability.....	27
6.1	6.1 Physical layer	27
6.1.1	6.1.1 Electrical Interface.....	27
6.1.2	6.1.2 Optical Interface	27
6.1.3	6.1.3 Transmission speed	27
6.2	6.2 Link Layer	28
6.3	6.3 Application Layer	28
6.3.1	6.3.1 Transmission mode for application data	28

6.3.2	Common address of ASDU	28
6.3.3	Selection of standard information numbers in monitor direction	28
6.3.3.1	System functions in monitor direction	28
6.3.3.2	Status indications in monitor direction	28
6.3.3.3	Supervision indications in monitor direction.....	29
6.3.3.4	Earth fault indications in monitor direction	29
6.3.3.5	Fault indications in monitor direction	29
6.3.3.6	Auto-reclosure indications in monitor direction.....	30
6.3.3.7	Measurands in monitor direction.....	30
6.3.3.8	Generic functions in monitor direction	30
6.3.4	Selection of standard information numbers in control direction	30
6.3.4.1	System functions in control direction.....	30
6.3.4.2	General commands in control direction	30
6.3.4.3	General functions in control direction	31
6.3.5	Basic application functions	31
6.3.6	Miscellaneous.....	31
7	Reference Guide	32
7.1	Table Buttons	32
7.2	Table Columns	32
7.2.1.1	Tag	32
7.2.1.2	Description	32
7.2.1.3	Function Type.....	32
7.2.1.4	Type ID.....	33
7.2.1.5	Information Number	33
7.2.1.6	Data Object.....	36
7.2.1.7	Class	36
7.2.1.8	Cyclic Transmission Time (s)	36
7.3	IEC 60870-5-103's Related ADH Types.....	37

Table of Figures

Figure 2-1 - Example screen	10
Figure 3-1 - Adding the module in eNode Designer.....	11
Figure 3-2 - Client settings panel.....	13
Figure 3-3 - Client IED panel.....	13
Figure 3-4 - Add data points window	16
Figure 3-5 - Adding a single data point with +1 button.	17
Figure 3-6 - Multiple connected servers example.	18
Figure 3-7 - Add a connected server.	18
Figure 3-8 - Remove a connected server.	18
Figure 3-9 - Server settings panel.....	19
Figure 3-10 – Server IED panel.	19
Figure 3-11 - Add new references window.....	21
Figure 3-12 - Data point references added.	22
Figure 3-13 - Data type restricted drop down menu example.....	22
Figure 3-14 - Server data point configuration example.....	22
Figure 3-15 – Incomplete and missing information example.	23
Figure 3-16 - Modify data points window example.	24
Figure 4-1 - Serial port properties.....	25
Figure 5-1 – Using Auto Increment when adding Data Points or Commands.....	26

1 Introduction

Thank you for Buying Atop's Protocol Gateway. The product is bundled with the following three user manuals:

- 1) Hardware specific installation user manual, **not covered in this document**. It covers Atop's hardware installation procedure, wiring, power connection etc.
- 2) Getting started with Atop's Protocol Gateway user manual – configuration tool introduction, web configuration, software architecture introduction– **not covered in this document**. This manual covers the introduction, installation, network set-up maintenance and using of the configuration tool software, including the procedure to be followed for uploading new configurations to Atop's device.
- 3) Protocol specific user manual (**This Manual**). **One protocol-specific manual will be provided for each protocol installed on the device**. This manual covers:
 - a. Basic device network configuration
 - b. Step-by-step protocol set-up for in eNode designer
 - c. Description of the protocol-specific software features, the device profile and the implementation table of supported functionalities.

This manual is for **IEC-60870-5-103 master/slave** and describes how to use the **IEC-60870-5-103 eNode Designer Module** to configure Atop's *IEC 60870-5-101/103 ADH Application* within the eNode Designer configuration tool.

1.1 Scope

This document is divided into 3 major sections:

- **General Description**;
- **Configuration Guide**; and
- **Interoperability**

1.2 Document Reference

- [1] Document Title: eNode Designer User Manual
Revision: Version 1.00
- [2] Document Title: IEC 60870-5-103 International Standard
Revision: First Edition, December 1997

1.3 List of Abbreviations

ADH	= Application Data Hub
IEC	= International Electrotechnical Commission
IED	= Intelligent Electronic Device

2 General Description

The IEC 60870-5-103 eNode Module can be used to configure the IEC 60870-5-103 ADH Application as a master or slave. For naming consistency across eNode Designer, the master is called a client, and the slave is called a server.

The client can communicate with many servers, whose data point details can be configured using this module. Atop's Protocol Gateway supports one server/slave per protocol per device.

2.1 IEC 60870-5-103 Standard

IEC 60870-5-103 is an international standard, released by IEC(International Electrotechnical Commission), used for telecontrol(supervisory control and data acquisition)in electrical engineering and power system automation applications.

This manual assumes that reader has some basic knowledge of the IEC 60870 standard documents and the IEC 60870-5-103 protocol.

IEC 60870 Document Part	Description
IEC 60870-5-1	Transmission Frame Formats
IEC 60870-5-2	Data Link Transmission Services
IEC 60870-5-3	General Structure of Application Data
IEC 60870-5-4	Definition and Coding of Information Elements
IEC 60870-5-5	Basic Application Functions
IEC 60870-5-6	Guidelines for conformance testing for the IEC 60870-5 companion standards
IEC 60870-5-103	Transmission Protocols, companion standard for the informative interface of protection equipment

2.2 ISO/OSI of IEC 60870-5-103

Data Unit	Layer	Functional
Data	7. Application Layer	IEC 60870-5-4 IEC 60870-5-5 IEC 60870-5-103 standard
	6. Presentation Layer	N/A
	5. Session Layer	N/A
Segments	4. Transport Layer	N/A

Packet/Datagram	3. Network Layer	N/A
Bit/Frame	2. Data Link Layer	Unbalanced IEC 60870-5-2 IEC 60870-5-1(FT 1.2)
	1. Physical Layer	RS232, RS422, RS485

2.3 Configuration Theory

Most configuration properties describe a *server*. When configuring the ADH application server, you are configuring the properties of the server itself. When configuring the ADH application client, you are describing the properties of all the remote servers with which the client is communicating.

Configuring the protocol specific information (such as object addressing) is handled in the module. This is explained in this document.

Communication port properties (such as Baud Rate) are configured on the communication port itself. The Device module handles the communication port properties, so heavy details are outside the scope of this document. Port configuration instructions are provided in the eNode Designer general user manual. However, screenshots of the typical configuration method are shown in section [4](#).

2.4 General Screen Description

A small configuration example is shown below to better help describe the layout of the screen.

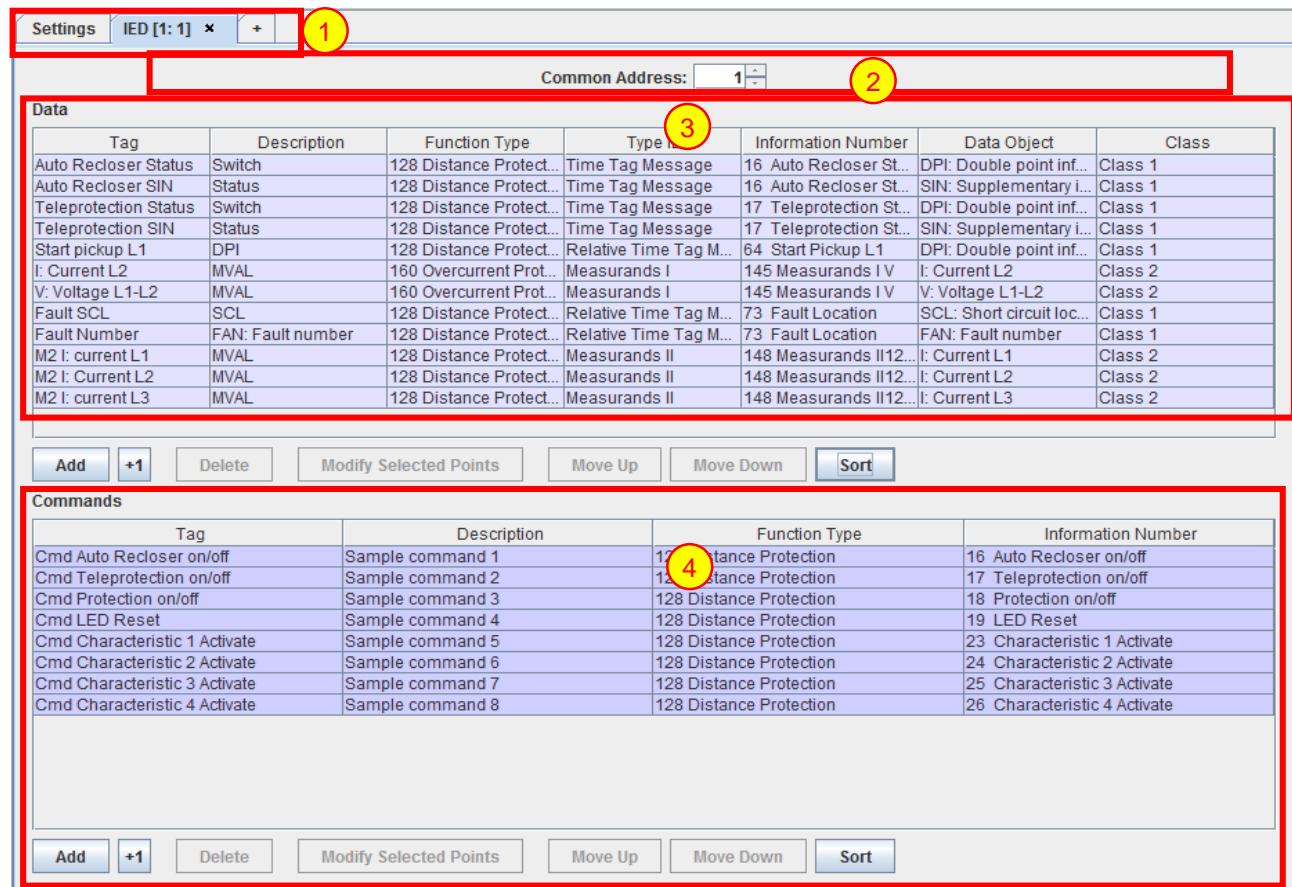


Figure 2-1 - Example screen.

- ① **Tabs** – There is one single “Settings” tab in both client and server. The server is allocated to a single tab. The client may communicate with many servers of different protocols, so there may be many server tabs. In a server application, there is only one server tab that is used to describe the properties of the local server itself.
- ② **Server IED Properties** – Describes the protocol-specific properties of the server IED.
- ③ **Data Table and buttons** – Shows all (information) data associated with the IED, and buttons used to modify them.
- ④ **Commands Table and buttons** – Shows all commands associated with the IED, and buttons used to modify them.

The user is able to add, delete and organise data points using buttons. The user may also edit the contents of the data and command tables freely after points are created.

Each tab is named “IED [{X}]: {Y}” where {X} is the link address and {Y} is the common address.

3 IEC60870-5-103 Configuration Guide

3.1 Adding the Module in eNode Designer

The IEC 60870-5-103 module can be added to *Serial* ports only.

The application can be set up as a Client or a Server. The choice will be presented when adding it to the project.

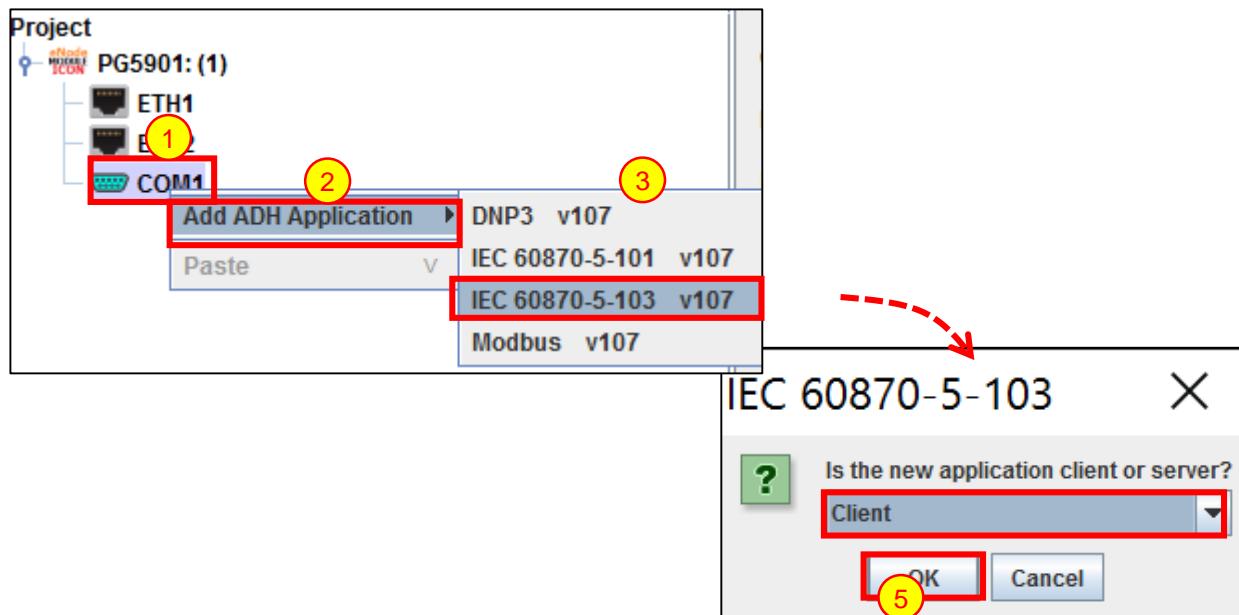


Figure 3-1 - Adding the module in eNode Designer.

- ① Right click the desired **communication port**.
- ② Open the **Add ADH Application** menu.
- ③ Select **IEC 60870-5-103**.
- ④ Select **Client** or **Server** from the drop-down menu.
- ⑤ Click **OK**.

3.2 Server IED Properties

The server IED properties are at the top of the module screen. It has a single configurable item: the common address of the slave.

Common Address:	<input type="text" value="1"/>
-----------------	--------------------------------

3.2.1.1 Common Address

Description	The common address of the server (slave) IED. For server application it describes its own common address. For clients, it describes the common address of the remote server.
Data Entry	Integer
Range	<i>0 to 255</i>
Input Option	Mandatory

3.3 Client Configuration

Adding a client application will immediately show the following figure. The first tab shows the settings that apply to the whole client application. Each tab after this represents a single IEC 60870-5-103 server with which the client is communicating.

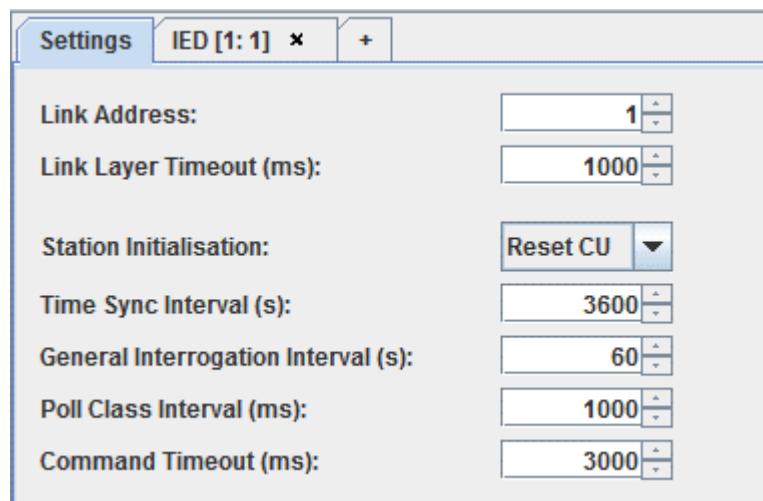


Figure 3-2 - Client settings panel.

Selecting the IED tab will show the following view.

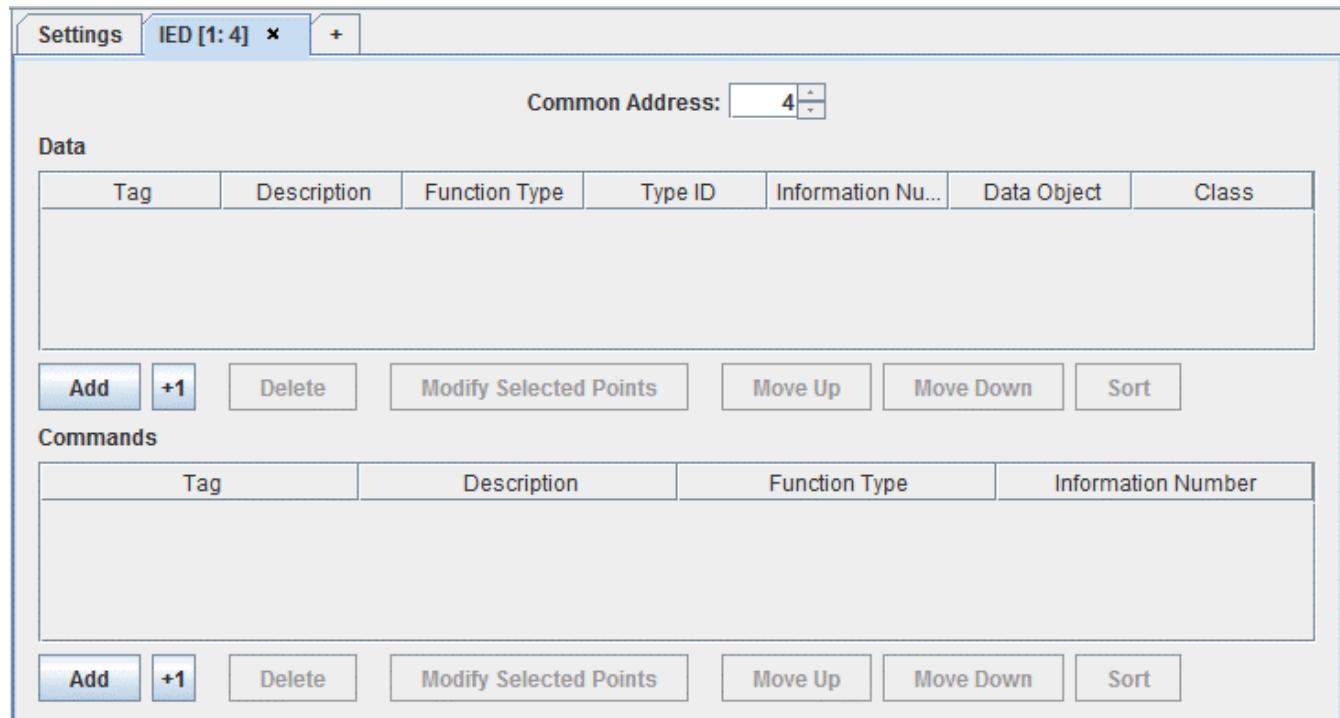


Figure 3-3 - Client IED panel.

Here the “Add” and “+1” button can be used to add data points. Adding data points is explained in the “Add data points” section, and the other buttons are described in section [7: Reference Guide](#).

3.3.1 Client Settings

Listed below are details about each client setting.

3.3.1.1 Link Address

Description	The link address address to use.
Data Entry	Integer
Range	0 to 255
Input Option	Mandatory

3.3.1.2 Link Layer Timeout (ms)

Description	The timeout for a data link layer confirmation in milliseconds.
Data Entry	Integer
Range	100 to 65535
Input Option	Mandatory

3.3.1.3 Station Initialisation

Description	The option to use in the station initialisation (reset communications) command. CU = Communications unit, FCB = Frame count bit.
Data Entry	Drop down menu
Options	Reset CU, Reset FCB
Input Option	Mandatory

3.3.1.4 Time Sync Interval (s)

Description	The interval that the time synchronisation commands are sent, in seconds.
Data Entry	Integer
Range	1 to 65535. Default: 3600
Input Option	Mandatory

3.3.1.5 General Interrogation Interval (s)

Description	The interval that general interrogation commands are sent, in seconds.
Data Entry	Integer
Range	0 to 65535
Input Option	Mandatory

3.3.1.6 Poll Class Interval (ms)

Description	The interval at which the classes are polled, in milliseconds.
Data Entry	Integer
Range	0 to 65535
Input Option	Mandatory

3.3.1.7 Command Timeout (ms)

Description	The timeout to wait for a command to complete, in milliseconds.
Data Entry	Integer
Range	0 to 65535
Input Option	Mandatory

3.3.2 Adding Data Points

To add data points, left click the “Add” button beneath the tables in the main view. . Doing so will show the following window. The window is used to add many data points at once with the specified values. For details on the meaning of each column, see section 7.2.

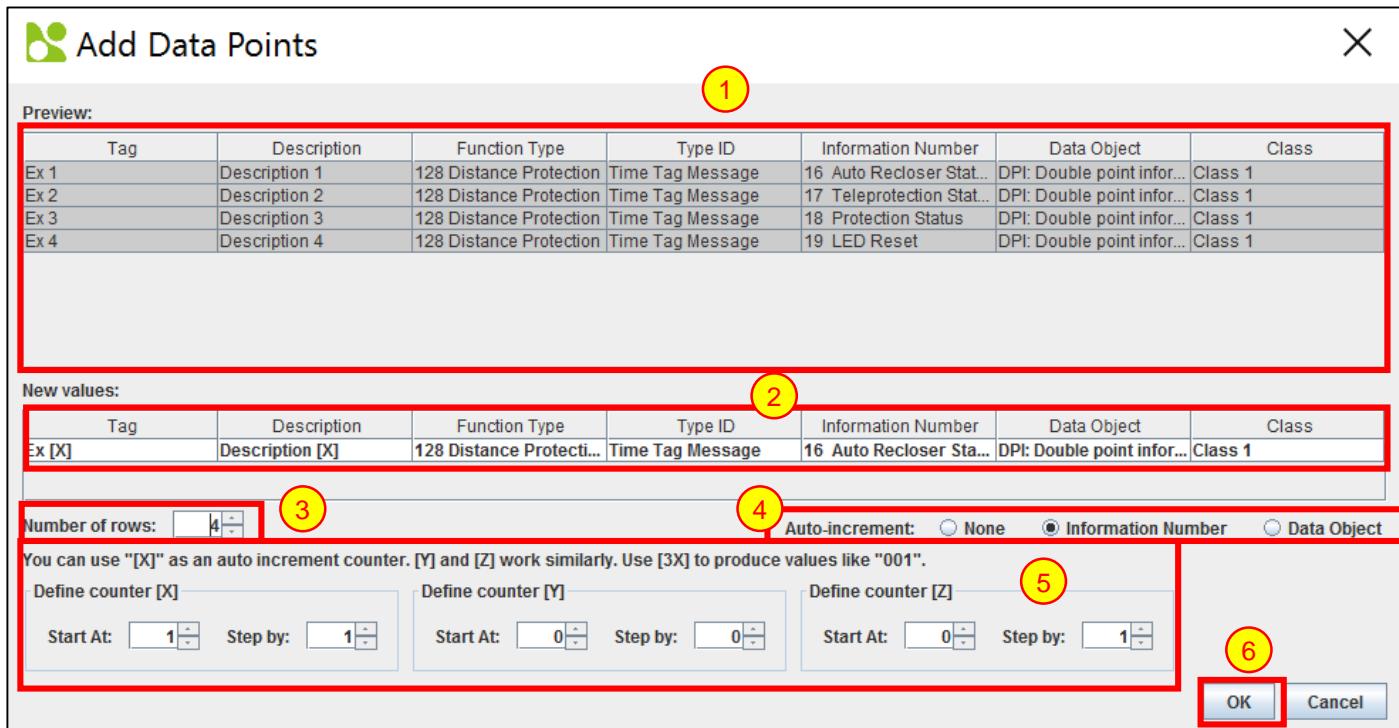


Figure 3-4 - Add data points window.

- ① **Preview Area** – Shows the preview of the data points that will be added.
 - ② **New values** – This area is used to enter values. Tag and description use manual data entry (click the box and type new values). Data type and class use drop-down menus.
 - ③ **Number of rows** – This counter can be used to add many data points at once.
 - ④ **Auto-increment** – Chooses what increment type to use in each successive row.
- | | |
|---------------------------|---|
| <i>None</i> | No increments in any row |
| <i>Information Number</i> | Increments the information number by one per row |
| <i>Data Object</i> | Increments the data object by one per row. When no more data objects for that information number exist, the next information number is used and the data object index resets to the first item. |
- ⑤ **Counters** – The starting values and step values of counters can be set in this area. Counters are used in the input areas resulting in the substituted values appearing in the preview area. See also [5 Using Counters](#).
 - ⑥ **OK button** – to accept the new data points.

3.3.2.1 Add a Single Data Point

A single data point can be added at a time using the “+1” button beneath the desired table. Clicking “+1” will copy the information of the selected row, and automatically increase the address field to the next unused address. This means increasing the data object, or if the data object is at the last value, it increases the information number and uses the first data object in the new information number. This process continues until it finds an unused address.

Data

Tag	Description	Function Type	Type ID	Information Nu...	Data Object	Class
Ex 1	Description 1	128 Distance ...	Time Tag Mes...	16 Auto Reclo...	DPI: Double p...	Class 1
Ex 2	Description 2	128 Distance ...	Time Tag Mes...	17 Teleprotec...	DPI: Double po...	Class 1

Data

Tag	Description	Function Type	Type ID	Information Nu...	Data Object	Class
Ex 1	Description 1	128 Distance ...	Time Tag Mes...	16 Auto Reclo...	DPI: Double p...	Class 1
Ex 2	Description 2	128 Distance ...	Time Tag Mes...	17 Teleprotec...	DPI: Double po...	Class 1
Ex 2_1	Description 2	128 Distance ...	Time Tag Mes...	17 Teleprotec...	SIN: Suppleme...	Class 1

Figure 3-5 - Adding a single data point with +1 button.

- ① (Optional) Select the data point to copy. Using no selection will just add a default data point.
- ② Click the +1 button – This will add a new data point with details copied from the selected data point, with an automatically increased Address. eNode Designer will make sure that a new unique tag name is generated for the point.
- ③ A new point has been added. You may want to change the tags, descriptions etc. as required.

3.3.3 Connected Servers (Remote IEDs)

Each slave IED is represented by a single tab and a tree node in the eNode Designer project tree.

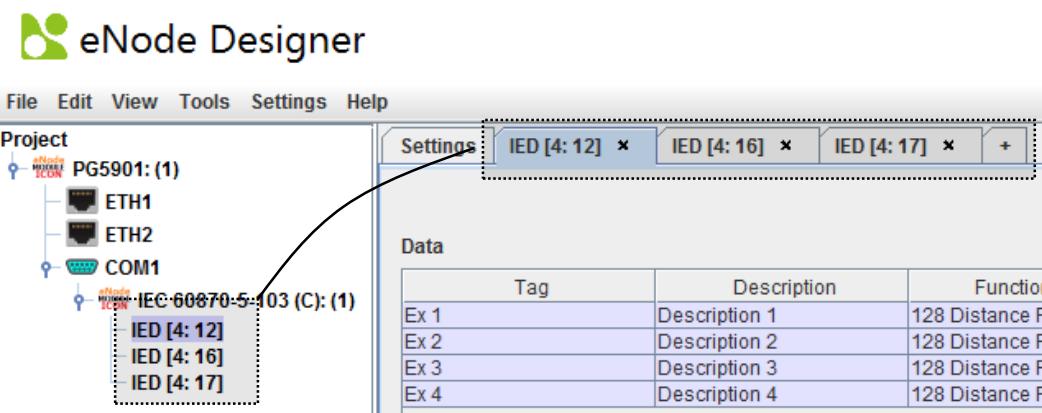


Figure 3-6 - Multiple connected servers example.

To modify the connected IEDs list follow the instructions below:

- ① To **add** a new remote IED, click the “+” tab at the end of the list of existing remote servers.

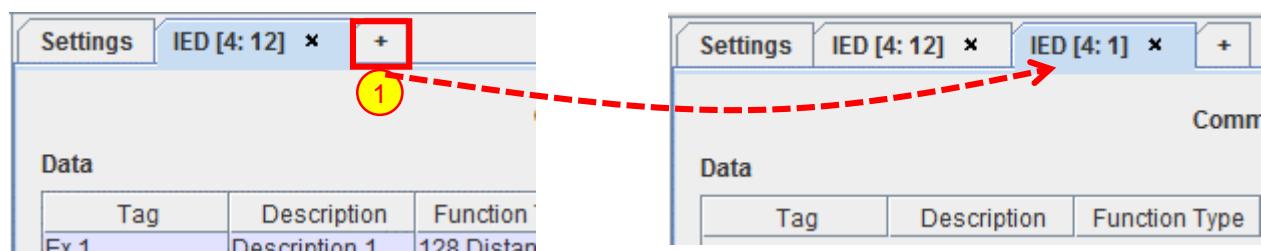


Figure 3-7 - Add a connected server.

To remove a remote IED, it must have no data points specified. If there are data points in the table and you still wish to remove the IED, you will have to remove such data points first.

- ① To **remove** a remote IED, click the cross on the right side of the tab of the IED you wish to remove.

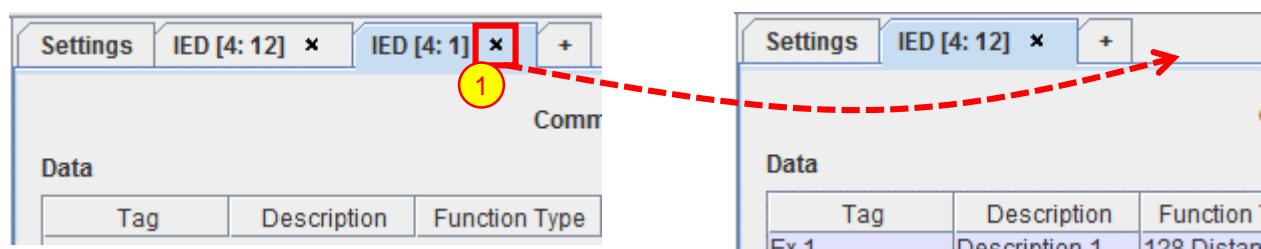


Figure 3-8 - Remove a connected server.

3.4 Server Configuration

A server application outputs data from the ADH database, receives commands and passes them into the ADH system to command another application to perform the operation. Therefore, all server operations use data point references to already existing data points that have been created by other application clients or client-servers.

The options describe the local server itself. The settings tab can be used to set the local settings, while the IED tab is used to configure data points and appears similar to the client. Example figures of both are shown below.

Common Address:	1
Link Address:	1
Link Layer Timeout (ms):	1000
Command Timeout (ms):	3000
Class 1 Event Buffer: Size:	1000
Overflow Percentage:	90
Class 2 Event Buffer: Size:	1000
Overflow Percentage:	90

Figure 3-9 - Server settings panel.

Tag	Description	Function Type	Type ID	Information Numb...	Data Object	Class	Cyclic Trans Time

Add Reference Delete Modify Selected Points Move Up Move Down Sort

Tag	Description	Function Type	Information Number

Add Reference Delete Modify Selected Points Move Up Move Down Sort

Figure 3-10 – Server IED panel.

Here the “Add Reference” button can be used to add data point references. The procedure is explained fully in the next section. The other buttons are described in section 7: Reference Guide.

3.4.1 Server Settings

All server settings are explained in the headings below.

3.4.1.1 Link Address

Description	The link address to use.
Data Entry	Integer
Range	<i>0 to 255 (default 1)</i>
Input Option	Mandatory

3.4.1.2 Common Address

Description	The common address to use.
Data Entry	Integer
Range	<i>0 to 255 (default 1)</i>
Input Option	Mandatory

3.4.1.3 Link Layer Timeout (ms)

Description	The timeout for a data link layer confirmation in milliseconds.
Data Entry	Integer
Range	<i>100 to 65535 (default 1000)</i>
Input Option	Mandatory

3.4.1.4 Command Timeout (ms)

Description	The timeout for a command in milliseconds.
Data Entry	Integer
Range	<i>100 to 10000 (default 3000)</i>
Input Option	Mandatory

3.4.1.5 Class {X} Event Buffer Size

Description	The buffer size for class {X}: the maximum number of events to store.
Data Entry	Integer
Range	<i>0 - 65535</i>
Input Option	Mandatory

3.4.1.6 Class {X} Event Buffer Overflow Percentage

Description	If the buffer for class {X} fills to this percent full, a buffer overflow event is sent to the master station.
Data Entry	Integer
Range	<i>0-100. Recommended 50-95. Default: 90</i>
Input Option	Mandatory

3.4.2 Adding Data Point References

To add new data point references, left click the “**Add Reference**” button underneath the tables in the main view. This will bring up the Add References window defined by the eNode Designer main application. It should appear similar to the following figure. Here we are adding references to data points created by an IEC 60870-5-104 client.

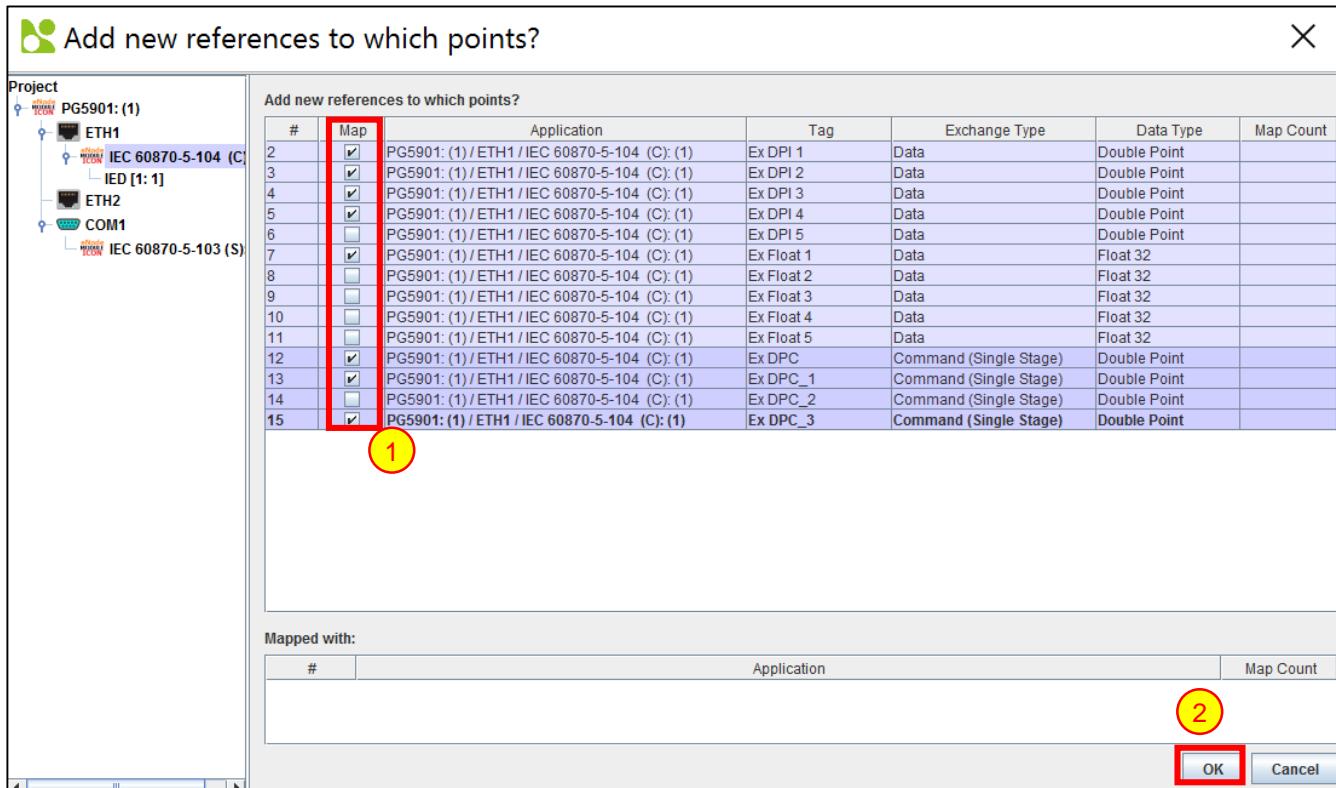


Figure 3-11 - Add new references window.

- ① **Select Data Points** – Adding a reference to a point creates a “mapping” to that point. Select which data points the server application is interested in using.
- ② Left click **OK** when done to accept the new references.

The data points that will appear in the list and that will be available for mapping are those whose data point type is compatible with the IEC 60870-5-103 application. For the table matching IEC 60870-5-103 data types to ADH types, see section 7.3.

Data

Tag	Description	Function Type	Type ID	Information Number	Data Object	Class	Cyclic Transmission T...
Ex DPI 1	Example					Class 2	
Ex DPI 2	Example					Class 2	
Ex DPI 3	Example					Class 2	
Ex DPI 4	Example					Class 2	
Ex Float 1	Float					Class 2	

Commands

Tag	Description	Function Type	Information Number
Ex DPC	DPC		
Ex DPC_1	DPC		
Ex DPC_3	DPC		

Buttons: Add Reference, Delete, Modify Selected Points, Move Up, Move Down, Sort.

Figure 3-12 - Data point references added.

After the new points have been added, you can modify the data points directly in the table. Cyclic transmission time is a normal typed field, while the others use drop-down menus that are restricted based on which IEC 60870-5-103 types are valid for the ADH data point type. For example, 2-bit values can only be mapped to type IDs which have a 2-bit data type in the data object list: the protocol's "DPI" type.

Data

Tag	Description	Function Type	Type ID	Information Nu...
Ex DPI 1	Example 2-bit		▼	
Ex DPI 2	Example 2-bit			Time Tag Message
Ex DPI 3	Example 2-bit			Relative Time Tag Message
Ex DPI 4	Example 2-bit			

Figure 3-13 - Data type restricted drop down menu example.

A “complete” example is shown below.

Data

Tag	Description	Function Type	Type ID	Information N...	Data Object	Class	Cyclic Trans...
Ex DPI 1	Example 2-bit	128 Distance...	Time Tag Me...	16 Auto Recl...	DPI: Double ...	Class 2	
Ex DPI 2	Example 2-bit	128 Distance...	Time Tag Me...	17 Teleproto...	DPI: Double ...	Class 2	
Ex DPI 3	Example 2-bit	128 Distance...	Time Tag Me...	18 Protectio...	DPI: Double ...	Class 2	
Ex DPI 4	Example 2-bit	128 Distance...	Time Tag Me...	19 LED Reset	DPI: Double ...	Class 2	
Ex Float 01	Example Flo...	160 Overcurr...	Relative Tim...	73 Fault Loc...	SCL: Short ci...	Class 1	

Commands

Tag	Description	Function Type	Information Number
Ex DPC 1	2-bit command	128 Distance Protection	16 Auto Recloser on/off
Ex DPC 2	2-bit command	128 Distance Protection	23 Characteristic 1 Activate
Ex DPC 4	2-bit command	128 Distance Protection	24 Characteristic 2 Activate

Buttons: Add Reference, Delete, Modify Selected Points, Move Up, Move Down, Sort.

Figure 3-14 - Server data point configuration example.

3.5 Miscellaneous Common

3.5.1 Incomplete, Conflicting and not needed Information

Incomplete or conflicting information is shown in red. This will cause warning symbols on the tab and in the project tree. Hovering over the warning icons will show further details about what is causing the warning. This allows the user to quickly fix invalid information.

The screenshot shows a software interface for configuration. At the top, there's a 'Settings' tab and a warning icon labeled 'IED [1:1]'. Below that is a table titled 'Data' with columns for Tag, Description, Function Type, Type ID, Information ..., Data Object, Class, and Cyclic Trans... . The table contains several rows of data. Some cells are highlighted in red, indicating errors or conflicts. A tooltip 'or incomplete information | Address conflict' appears near the bottom left of the table area. At the bottom of the table, there are buttons for Add Reference, Delete, Modify Selected Points, Move Up, Move Down, and Sort. Below the table is another section titled 'Commands' with a similar structure and error highlighting. Buttons for Add Reference, Delete, Modify Selected Points, Move Up, Move Down, and Sort are also present here.

Figure 3-15 – Incomplete and missing information example.

- ① **Mouse-over a warning** to show a tooltip explaining the warning.
- ② **Invalid data** shows in red. The dark red color means the data is invalid, and the light red color means there is an address conflict.
- ③ **Unneeded data** is hidden and not editable. For example, the Cyclic transmission time is only used for Measurand types. So, non-measurand points have these table cells with a grey background, have no contents and cannot be edited.

3.5.2 Modify Selected Points Window

The “Modify Selected Points” window is used to change many row properties in one single step.

Select the data points you want to change, and then click the “**Modify Selected Points**” button beneath the tables. It will generate the following window.

Original:						
Tag	Description	Function Type	Type ID	Information Number	Data Object	Class
M2 I: Current L2	MVAL	128 Distance...	Measurands II	148 Measurands II123 V...	I: Current L2	Class 2
M2 I: current L3	MVAL	128 Distance...	Measurands II	148 Measurands II123 V...	I: Current L3	Class 2
Fault SCL	SCL	128 Distance...	Relative Time Tag ...	73 Fault Location	SCL: Short circuit l...	Class 1
Fault Number	FAN: Fault number	128 Distance...	Relative Time Tag ...	73 Fault Location	FAN: Fault number	Class 1

Preview:						
Tag	Description	Function Type	Type ID	Information Number	Data Object	Class
New Tag 01	Example 000	128 Distance ...	Measurands I	146 Measurands I V P Q	I: Current L2	Class 1
New Tag 02	Example 010	128 Distance ...	Measurands I	146 Measurands I V P Q	V: Voltage L1-L2	Class 1
New Tag 03	Example 020	128 Distance ...	Measurands I	146 Measurands I V P Q	P: Active power	Class 1
New Tag 04	Example 030	128 Distance ...	Measurands I	146 Measurands I V P Q	Q: Reactive power	Class 1

New values:						
Tag	Description	Function Type	Type ID	Information Number	Data Object	Class
New Tag [2X]	Example [3Z]	[N]	Measurands I	146 Measurands I V P Q	I: Current L2	Class 1

(4) Auto-increment: None Information Number Data Object

You can use "[N]" as the original text of the cell.

You can use "[X]" as an auto increment counter. [Y] and [Z] work similarly. Use [3X] to produce values like "001".

Define counter [X]	Define counter [Y]	Define counter [Z]
Start At: <input type="text" value="1"/> Step by: <input type="text" value="1"/>	Start At: <input type="text" value="0"/> Step by: <input type="text" value="0"/>	Start At: <input type="text" value="0"/> Step by: <input type="text" value="10"/>

(6) OK Cancel

Figure 3-16 - Modify data points window example.

- (1) **Original table data** – Shows the original table data.
- (2) **Preview** – Shows the new table data that will be used if the modifications are accepted. These fields update according to the contents of (3).
- (3) **New values** – The new values for the table cells. “[N]” can be used to maintain the original value of the cell, and the auto-incrementing counters [X], [Y] and [Z] can be used to add numbers. For details, see [Using Counters](#).
- (4) **Auto-increment:** Chooses what increment type to use in each successive row.

None No increments in any row

Information Number Increments the information number by one per row

Data Object Increments the data object by one per row. When no more data objects for that information number exist, the next information number is used and the data object index resets to the first item.

- (5) **Counter properties** – Sets the initial values and step amounts of the counters [X], [Y] and [Z].

- (6) **OK button** – to accept the modifications.

4 Communication Port Properties

The device module handles how the communication port properties are displayed. However, the typical method is briefly described below.

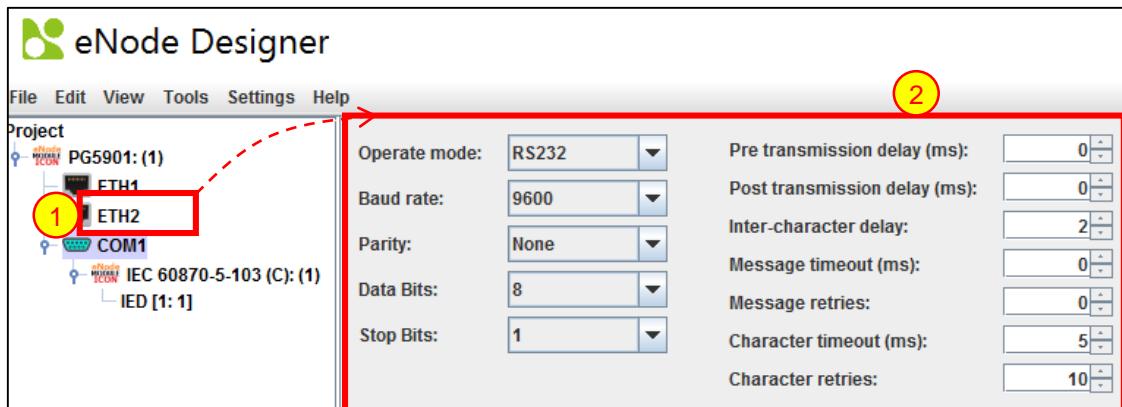


Figure 4-1 - Serial port properties.

- ① Select the communication port in the project tree – This will typically let the central panel show the port's properties.
- ② Properties – The communication port's properties can be set.

5 Using Counters

The following is a full example that shows how auto-increment works. The example given shows the IEC 60870-5-104 window. The IEC 60870-5-103 auto-increment works in the same way.

Preview		Data Type	Time Stamp	IOA	COT
example_tag_0	example_desc_0000	Single Point	CP24Time2a	1	General Interrogation
example_tag_2	example_desc_0010	Single Point	CP24Time2a	2	General Interrogation
example_tag_4	example_desc_0020	Single Point	CP24Time2a	3	General Interrogation
example_tag_6	example_desc_0030	Single Point	CP24Time2a	4	General Interrogation
example_tag_8	example_desc_0040	Single Point	CP24Time2a	5	General Interrogation

Tag	Description	Data Type	Time Stamp	IOA	COT
example_tag_[X]	example_desc_[4Y]	Single Point	CP24Time2a	[Z]	General Interrogation

New values:

Number of rows: **1**

You can use "[X]" as an auto increment counter. "[Y]" and "[Z]" work similarly. Use "[3X]" to produce values like "001".

Define counter [X]
Start At: Step by:

Define counter [Y]
Start At: Step by:

Define counter [Z]
Start At: Step by:

Figure 5-1 – Using Auto Increment when adding Data Points or Commands.

- 1** The *Number of Rows* can be modified to set the number of data points or commands created from the *New values* section. As shown in the example above, five data points/commands are created and shown in the preview section as the *Number of Rows* is set to 5.

When using the auto increment counters by default, they will start at one and increment by one. Anyway auto-increment value has its own section for configuration. Adjusting *Start At* will change the value that the first data point/command receives. Adjusting *Step By* will change the value that the second and subsequent values will be incremented by.

- 2** In this example, the *[X]* counter is used. The *Start At* value has been set to 0 and the *Step By* value has been set to 2. This results in the values seen in the preview section.

It is also possible to include a number within the square brackets and before the X, Y or Z while using auto increment. This will produce values that contain the entered number of digits. Any digit that is not taken up by the value determined by the *Start At* and *Step By* values will be shown as zeros.

- 3** In this example, the *[Y]* counter has been used with the integer 4 to indicate the number structure. This results in the values shown in the preview section.

- 4** In this example, the *[Z]* counter has been used. The *Start At* and *Step By* values have been left at default, this results in the values shown.

If no auto increment value is entered in any field, each data point/command field value will be created the same with the exception of *Tag* and *IOA*. The first new data point/command's *Tag* value will represent what was entered in the *New value* section. However, the subsequent data points/commands will contain the initial *Tag* value followed by an underscore and a number incrementing by one from 1 onwards. (Example: tag, tag_1, tag_2 etc.). This is an artefact of eNode Designer ensuring all data point tag names are unique.

6 Interoperability

This interoperability list refers to section 8 of the IEC 60870-5-103 International Standard (reference number CEI/IEC 60870-5-103:1997, pages 159 to 171).

The selected parameters should be marked in the white boxes as follows:

<input type="checkbox"/>	Function or ASDU is not used
<input checked="" type="checkbox"/>	Function or ASDU is used as standardized (default)
<input checked="" type="checkbox"/>	Function or ASDU is not supported
<input type="checkbox"/> R	Function or ASDU is used in reverse mode
<input type="checkbox"/> A	Function or ASDU supported in addition to the standard

6.1 Physical layer

6.1.1 Electrical Interface

- EIA RS-485
- Number of loads ____ for one protection equipment
- RS-232
- RS-422

6.1.2 Optical Interface

- Glass fibre
- Plastic fibre
- F-SMA type connector
- BFOC/2,5 type connector

6.1.3 Transmission speed

- 300 bit/s 9600 bit/s 57600 bit/s
- 1200 bit/s 14400 bit/s 115200 bit/s
- 2400 bit/s 19200 bit/s 230400 bit/s
- 4800 bit/s 38400 bit/s

6.2 Link Layer

There are no choices for the link layer.

6.3 Application Layer

6.3.1 Transmission mode for application data

Mode 1 (least significant octet first), as defined in 4.10 of IEC 60870-5-4, is used exclusively in this companion standard.

6.3.2 Common address of ASDU

- One COMMON ADDRESS OF ASDU (identical with station address)
- More than one COMMON ADDRESS OF ASDU

6.3.3 Selection of standard information numbers in monitor direction

6.3.3.1 System functions in monitor direction

INF Semantics

- <0> End of general interrogation
- <0> Time synchronization
- <2> Reset FCB
- <3> Reset CU
- <4> Start/restart
- <5> Power on

6.3.3.2 Status indications in monitor direction

INF Semantics

- <16> Auto-recloser active
- <17> Teleprotection active
- <18> Protection active
- <19> LED reset
- <20> Monitor direction blocked
- <21> Test mode
- <22> Local parameter setting
- <23> Characteristic 1
- <24> Characteristic 2
- <25> Characteristic 3
- <26> Characteristic 4
- <27> Auxiliary input 1
- <28> Auxiliary input 2

- <29> Auxiliary input 3
- <30> Auxiliary input 4

6.3.3.3 *Supervision indications in monitor direction*

INF Semantics

- <32> Measurand supervision I
- <33> Measurand supervision V
- <35> Phase sequence supervision
- <36> Trip circuit supervision
- <37> I>> back-up operation
- <38> VT fuse failure
- <39> Teleprotection disturbed
- <46> Group warning
- <47> Group alarm

6.3.3.4 *Earth fault indications in monitor direction*

INF Semantics

- <48> Earth fault L1
- <49> Earth fault L2
- <50> Earth fault L3
- <51> Earth fault forward, i.e. line
- <52> Earth fault reverse, i.e. busbar

6.3.3.5 *Fault indications in monitor direction*

INF Semantics

- <64> Start /pick-up L1
- <65> Start /pick-up L2
- <66> Start /pick-up L3
- <67> Start /pick-up N
- <68> General trip
- <69> Trip L1
- <70> Trip L2
- <71> Trip L3
- <72> Trip I>> (back-up operation)
- <73> Fault location X in ohms
- <74> Fault forward/line
- <75> Fault reverse/busbar
- <76> Teleprotection signal transmitted
- <77> Teleprotection signal received
- <78> Zone 1
- <79> Zone 2
- <80> Zone 3
- <81> Zone 4
- <82> Zone 5
- <83> Zone 6
- <84> General start/pick-up
- <85> Breaker failure
- <86> Trip measuring system L1
- <87> Trip measuring system L2
- <88> Trip measuring system L3
- <89> Trip measuring system E
- <90> Trip I>

- <91> Trip I>>
- <92> Trip IN>
- <93> Trip IN>>

6.3.3.6 Auto-reclosure indications in monitor direction

INF Semantics

- <128> CB 'on' by AR
- <129> CB 'on' by long-time AR
- <130> AR blocked

6.3.3.7 Measurands in monitor direction

INF Semantics

- <144> Measurand I
- <145> Measurands I, V
- <146> Measurands I, V, P, Q
- <147> Measurands IN, VEN
- <148> Measurands IL1,2,3, VL1,2,3, P, Q, f

6.3.3.8 Generic functions in monitor direction

INF Semantics

- <240> Read headings of all defined groups
- <241> Read values or attributes of all entries of one group
- <243> Read directory of a single entry
- <244> Read value or attribute of a single entry
- <245> End of general interrogation of generic data
- <249> Write entry with confirmation
- <250> Write entry with execution
- <251> Write entry aborted

6.3.4 Selection of standard information numbers in control direction

6.3.4.1 System functions in control direction

INF Semantics

- <0> Initiation of general interrogation
- <0> Time synchronization

6.3.4.2 General commands in control direction

INF Semantics

- <16> Auto-recloser on/off
- <17> Teleprotection on/off
- <18> Protection on/off
- <19> LED reset
- <23> Activate characteristic 1

- <24> Activate characteristic 2
- <25> Activate characteristic 3
- <26> Activate characteristic 4

6.3.4.3 General functions in control direction

INF Semantics

- <240> Read headings of all defined groups
- <241> Read values or attributes of all entries of one group
- <243> Read directory of a single entry
- <244> Read value or attribute of a single entry
- <245> End of general interrogation of generic data
- <248> Write entry
- <249> Write entry with confirmation
- <250> Write entry with execution
- <251> Write entry abort

6.3.5 Basic application functions

- Test mode
- Blocking of monitor direction
- Disturbance data
- Generic services
- Private data

6.3.6 Miscellaneous

Measurands are transmitted with ASDU 3 as well as with ASDU 9. As defined in 7.2.6.8, the maximum MVAL can either be 1,2 or 2,4 times the rated value. No different rating shall be used in ASDU 3 and ASDU 9, i.e. for each measurand there is only one choice.

Measurand	Max. MVAL = rated value times 1,2	Max. MVAL = rated value times 2,4
Current L1	<input type="checkbox"/>	<input type="checkbox"/>
Current L2	<input type="checkbox"/>	<input type="checkbox"/>
Current L3	<input type="checkbox"/>	<input type="checkbox"/>
Voltage L1-E	<input type="checkbox"/>	<input type="checkbox"/>
Voltage L2-E	<input type="checkbox"/>	<input type="checkbox"/>
Voltage L3-E	<input type="checkbox"/>	<input type="checkbox"/>
Active power P	<input type="checkbox"/>	<input type="checkbox"/>
Reactive power Q	<input type="checkbox"/>	<input type="checkbox"/>
Frequency f	<input type="checkbox"/>	<input type="checkbox"/>
Voltage L1 – L2	<input type="checkbox"/>	<input type="checkbox"/>

7 Reference Guide

7.1 Table Buttons

Client Options:

Add	+1	Delete	Modify Selected Points	Move Up	Move Down	Sort
------------	-----------	--------	------------------------	---------	-----------	------

Server Options:

Add Reference	Delete	Modify Selected Points	Move Up	Move Down	Sort
---------------	--------	------------------------	---------	-----------	------

Add	Adds new data points in the client. See section 3.3.2 .
+1	Adds a single new data point in the client. See section 3.3.2.1 .
Add Reference	Adds a new data point reference in the server. See section 3.4.2 .
Delete	Deletes the selected data points.
Modify Selected Points	Modify the properties of the selected data points. See section 3.5.2 .
Move Up	Moves the selected data points up one row in the table.
Move Down	Moves the selected data points down one row in the table.
Sort	Sorts the table. Groups by Type ID, Function Type, Information Number, Data Object.

7.2 Table Columns

7.2.1.1 Tag

Description	A unique Tag name for each data point. Since data point references use the tag name of the "real" point, the tag cannot be changed in the server instance.
Data Entry	String
Min Length	1
Max Length	N/A
Input Option	Mandatory

7.2.1.2 Description

Description	User defined description for each data point. Since data point references use the description of the "real" point, the description cannot be changed in the server instance.
Data Entry	String
Min Length	1
Max Length	N/A
Input Option	Mandatory

7.2.1.3 Function Type

Description	The IEC 60870-5-103 function type.
Data Entry	Drop Down Menu

Types	<i>128 Distance Protection 160 Overcurrent Protection 176 Transformer Differential Protection 192 Line Differential Protection 254 Generic Function Type 255 Global Function Type</i>
Input Option	Mandatory

7.2.1.4 Type ID

Description	The IEC 60870-5-103 Type ID. This can be used to restrict the available items in shown in the "Information Number" menu.
Data Entry	Drop Down Menu
Types	<i>Time Tag Message Relative Time Tag Message Measurands I Relative Time Tag Measurands Identification Measurands II</i>
Input Option	Mandatory

7.2.1.5 Information Number

Description	The IEC 60870-5-103 information number. The drop down menus will only show relevant information numbers for the data point (usually, just shows information numbers with the given type ID).
Data Entry	Drop Down Menu ===== Data ===== 2 <i>Info Reset FCB</i> 3 <i>Info Reset CU</i> 4 <i>Info Start Restart</i> 5 <i>Info Power On</i> 16 <i>Auto Recloser Status</i> 17 <i>Tele Protection Status</i> 18 <i>Protection Status</i> 19 <i>Led Reset</i> 20 <i>Monitor Direction Blocked</i> 21 <i>Test Mode Info</i> 22 <i>Local Parameter Setting</i> 23 <i>Characteristic 1</i> 24 <i>Characteristic 2</i> 25 <i>Characteristic 3</i> 26 <i>Characteristic 4</i> 27 <i>Auxiliary Input 1</i> 28 <i>Auxiliary Input 2</i> 29 <i>Auxiliary Input 3</i> 30 <i>Auxiliary Input 4</i> 32 <i>Measurand Supervision I</i> 33 <i>Measurand Supervision V</i> 35 <i>Phase Sequence Supervision</i> 36 <i>Trip Circuit Supervision</i> 37 <i>Over I Backup Operation</i>
Types	

38	<i>Vt Fuse Failure</i>
39	<i>Teleprotection Disturbed</i>
46	<i>Group Warning</i>
47	<i>Group Alarm</i>
48	<i>Earth Fault L1</i>
49	<i>Earth Fault L2</i>
50	<i>Earth Fault L3</i>
51	<i>Earth Fault Forward</i>
52	<i>Earth Fault Reverse</i>
64	<i>Start Pickup L1</i>
65	<i>Start Pickup L2</i>
66	<i>Start Pickup L3</i>
67	<i>Start Pickup N</i>
68	<i>General Trip</i>
69	<i>Trip L1</i>
70	<i>Trip L2</i>
71	<i>Trip L3</i>
72	<i>Trip Over I Backup</i>
73	<i>Fault Location</i>
74	<i>Fault Forward</i>
75	<i>Fault Reverse</i>
76	<i>Teleprotection Signal Transmitted</i>
77	<i>Teleprotection Signal Received</i>
78	<i>Zone 1</i>
79	<i>Zone 2</i>
80	<i>Zone 3</i>
81	<i>Zone 4</i>
82	<i>Zone 5</i>
83	<i>Zone 6</i>
84	<i>General Start Pickup</i>
85	<i>Breaker Failure</i>
86	<i>Trip Measuring System L1</i>
87	<i>Trip Measuring System L2</i>
88	<i>Trip Measuring System L3</i>
89	<i>Trip Measuring System E</i>
90	<i>Trip I</i>
91	<i>Trip Over I</i>
92	<i>Trip In</i>
93	<i>Trip Over In</i>
128	<i>CB On By AR</i>
129	<i>CB On By Long Time AR</i>
130	<i>Auto Recloser Blocked</i>
144	<i>Measurand I</i>
145	<i>Measurands I V</i>
146	<i>Measurands I V P Q</i>
147	<i>Measurands In Ven</i>
148	<i>Measurands II123 VI123 P Q F</i>

===== Commands =====

16	<i>Auto Recloser on/off</i>
17	<i>Teleprotection on/off</i>
18	<i>Protection on/off</i>
19	<i>LED Reset</i>
23	<i>Characteristic 1 Activate</i>
24	<i>Characteristic 2 Activate</i>
25	<i>Characteristic 3 Activate</i>
26	<i>Characteristic 4 Activate</i>

Input Option	Mandatory
---------------------	-----------

7.2.1.6 Data Object

Description	The IEC 60870-5-103 data object instance of the information number. The drop down menus will only show data objects relevant to the data point. Usually, this means it will show the data objects given the information number / type ID. Though in application servers, the ADH data point type must also match for it to appear in the list.
Data Entry	<p>Drop Down Menu</p> <p><i>DPI: Double point information</i> <i>SIN: Supplementary information</i> <i>COL: Compatibility level</i> <i>SCL: Short circuit location</i> <i>FAN: Fault number</i> <i>RET: Relative time</i></p>
Types	<p>===== MVAL (Measurand values) =====</p> <p><i>I: Current I_N</i> <i>I: Current L1</i> <i>I: Current L2</i> <i>I: Current L3</i> <i>V: Voltage V_EN</i> <i>V: Voltage L1-L2</i> <i>V: Voltage L1-E</i> <i>V: Voltage L2-E</i> <i>V: Voltage L3-E</i> <i>P: Active power</i> <i>Q: Reactive power</i> <i>f: Frequency</i></p>
Input Option	Mandatory

7.2.1.7 Class

Data only

Description	The IEC 60870-5-103 class.
Data Entry	Drop down menu
Options	<i>Class 1, Class 2</i>
Input Option	Mandatory

7.2.1.8 Cyclic Transmission Time (s)

Server, data only

Description	Every “cyclic transmission time” amount of time, the Measurand values are sent back to the client. Measured in seconds.
Data Entry	Integer
Types	<i>0 to 65535</i>
Input Option	Mandatory for Measurand types only

7.3 IEC 60870-5-103's Related ADH Types

The IEC 60870-5-103 data types correspond to the ADH types given in the table below.

IEC 60870-5-103 Point Type	ADH Data Type	ADH Exchange Type
COL: Compatibility level	Unsigned 8	Data
DCO: Double point command	Double Point	Command (Single Stage)
DPI: Double point information	Double Point	Data
FAN: Fault number	Unsigned 16	Data
MVAL: Measurand value	Integer 16	Data
RET: Relative time	Unsigned 16	Data
SCL: Short circuit location	Float 32	Data
SIN: Supplementary information	Unsigned 8	Data

Table 7-1 – IEC 60870-5-103 data types relation to ADH data point types.



Atop Technologies, Inc.

www.atoponline.com

www.atop.com.tw

TAIWAN HEADQUARTER:

2F, No. 146, Sec. 1, Tung-Hsing Rd,
30261 Chupei City, Hsinchu County
Taiwan, R.O.C.
Tel: +886-3-550-8137
Fax: +886-3-550-8131

ATOP CHINA BRANCH:

3F, 75th, No. 1066 Building,
Qingzhou North Road,
Shanghai, China
Tel: +86-21-64956231

ATOP INDIA OFFICE:

Abhishek Srivastava
Head of India Sales
Atop Communication Solution(P) Ltd.
No. 22, Kensington Terrace,
Kensington Rd,
Bangalore, 560008, India
Tel: +91-80-4920-6363
E-mail: Abhishek.S@atop.in

ATOP INDONESIA BRANCH:

Jopson Li
Branch Director
Wisma Lampung Jl.
No. 40, Tomang Raya
Jakarta, Barat, 11430, Indonesia
Tel: +62-857-10595775
E-mail: jopsonli@atop.com.tw

ATOP EMEA OFFICE:

Bhaskar Kailas (BK)
Vice President (Business Development)
Atop Communication Solution(P) Ltd.
No. 22, Kensington Terrace,
Kensington Rd,
Bangalore, 560008, India
Tel: +91-988-0788-559
E-mail: Bhaskar.k@atop.in

ATOP AMERICAs OFFICE:

Venke Char
Sr. Vice President & Head of Business
11811 North Tatum Blvd, Suite 3031
Phoenix, AZ 85028,
United States
Tel: +1-602-953-7669
E-mail: venke@atop.in